


F908-8

Harmony Wall Mounted Tub Filler

artos®

INSTALLATION GUIDE

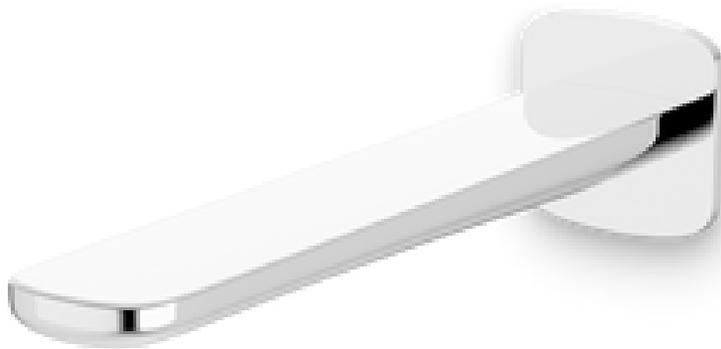

F908-8

Harmony Wall Mounted Tub Filler

artos®

OPERATING SPECIFICATIONS



OPERATING TEMPERATURE

Maximum: 176°

OPERATING PRESSURE

Minimum: 10psi

Maximum: 125psi

Recommended: 15psi-75psi

Above 90psi, it may be necessary to install a pressure reducer

FLOW RATE

6.1 USGPM

INLET/OUTLET CONNECTIONS

3/4" Female NPT

MATERIAL

Solid Brass

REQUIREMENTS

This unit requires a control

FEATURES

Articulating Aerator

STANDARDS

To view all standards, please visit product approvals in our learning hub at artos.us.com

2

WESTOVER, INC

4011 S 60TH ST, OMAHA, NE 68117

[WWW.ARTOS.US.COM](https://www.artos.us.com)

T: 402-397-3344

All technical specifications, product details, and pricing are subject to change without prior notice. Artos makes every effort to ensure accuracy; however, errors or omissions may occur. It is the responsibility of the installer, designer, or purchaser to verify all critical dimensions, installation requirements, and compliance with applicable codes prior to use.

Artos assumes no liability for damages, losses, or injuries resulting from the use of this documentation or from product installation, operation, or maintenance performed outside of Artos instructions and applicable codes. Product warranties are limited to those expressly stated by Artos. Please refer to official warranty documentation for complete terms and conditions.

All drawings, manuals, and specifications are the property of Artos and may not be reproduced, distributed, or altered without prior written permission.

F908-8

Harmony Wall Mounted Tub Filler

artos®

INDEX

INDEX

Product Dimensions - F908-8.....pg:4

Harmony Wall Mounted Tub Filler Installation - F908-8.....pg:5-9

Parts Breakdown - F908-8.....pg:10


F908-8

Harmony Wall Mounted Tub Filler


artos®

PRODUCT DIMENSIONS

PRODUCT SKU: F908-8

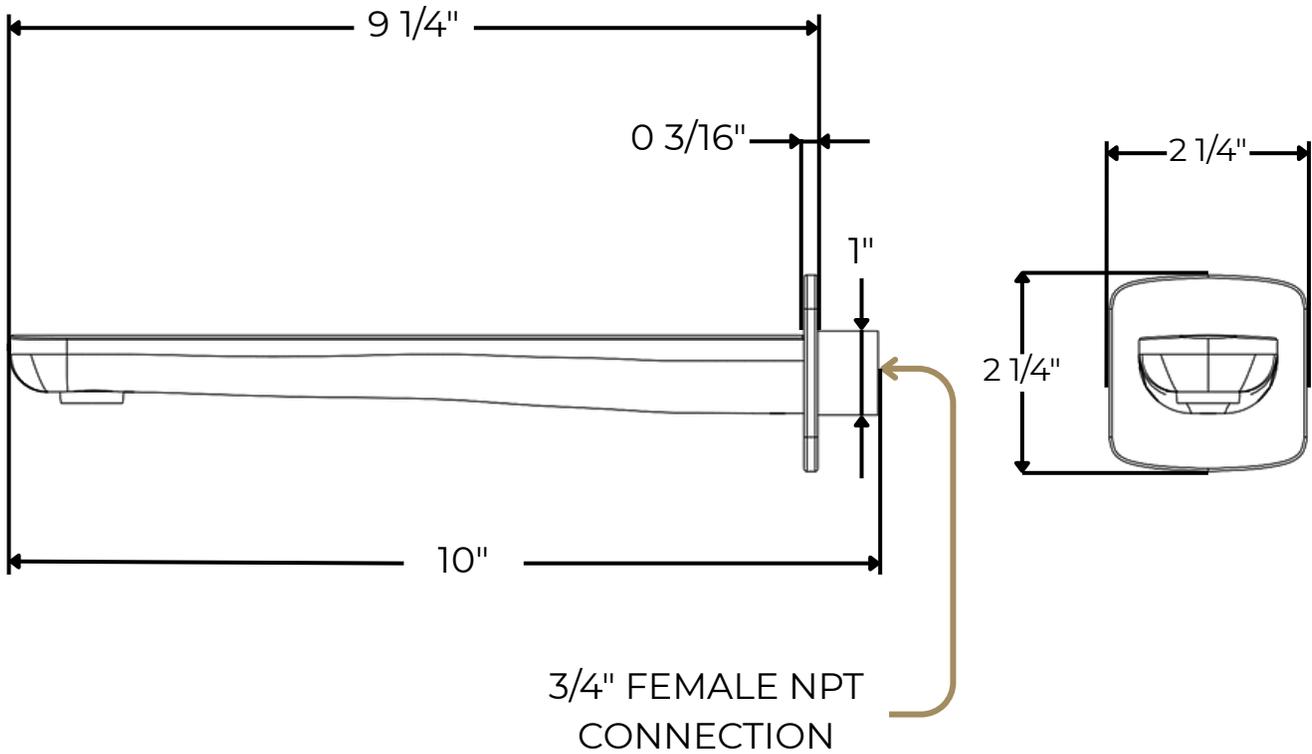

STEP 1

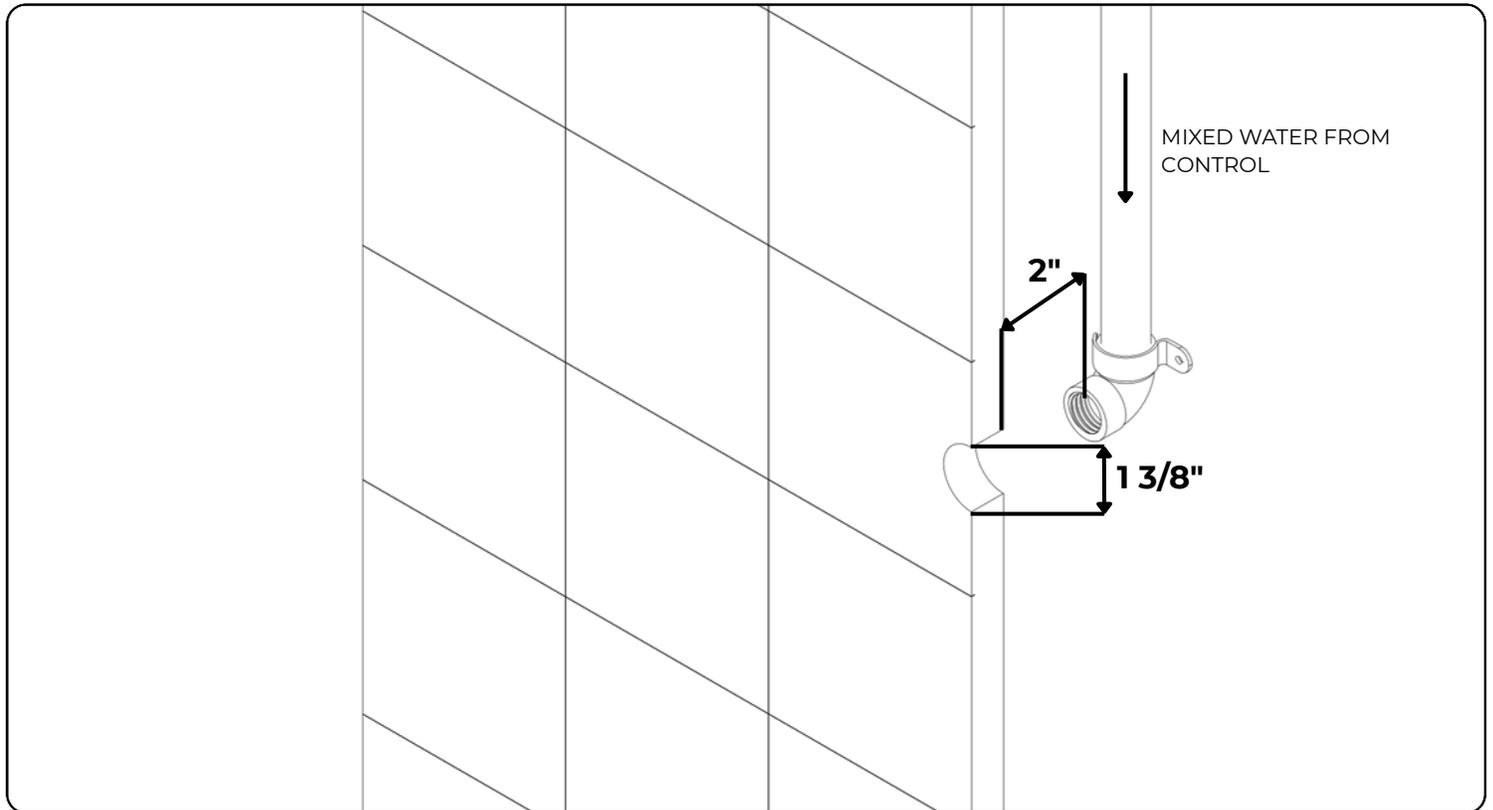

Safety Warnings

- Shut off the main or local water supply before beginning installation.
- Use caution when handling sharp tools and metal parts.
- Do not overtighten connections, as this may damage components or create leaks.
- Ensure the psi of the local water supply remains in the recommended psi range on the operating specifications page


Before beginning, verify that all parts and tools required for installation are available. Review the installation diagram in the parts breakdown at the end of this manual.

Behind the wall, route the mixed water supply line from the control valve to the desired height for the tub filler outlet. Install a **3/4"** female threaded elbow fitting, positioning it so the open end faces outward perpendicular from wall faces. Ensure the outlet of the elbow is a maximum of **2"** from the inside surface of the finished wall to allow adequate space for threading the copper pipe or brass nipple.

Drill a horizontal opening, **1 3/8"** in diameter or smaller, through the wall. Ensure the hole is centered on the supply outlet to accommodate the tub filler connector fitting.

5


STEP 2

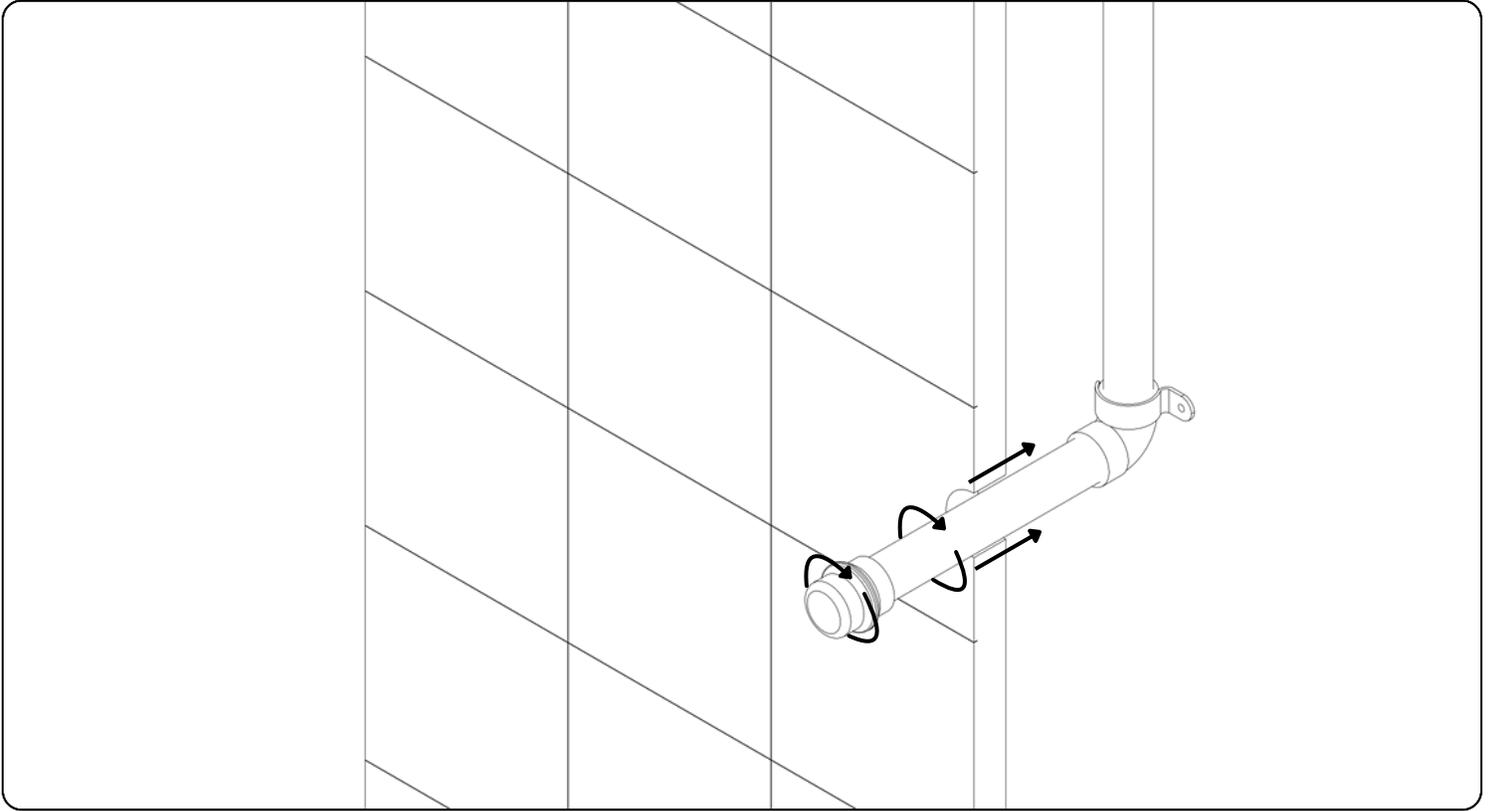

Insert a **temporary** copper stub pipe into the threaded elbow and cap the exposed end. This prevents debris, drywall compound, or tile adhesive from entering the fitting during wall finishing.

Once the surface is complete, remove the temporary pipe and cap.

STEP 3

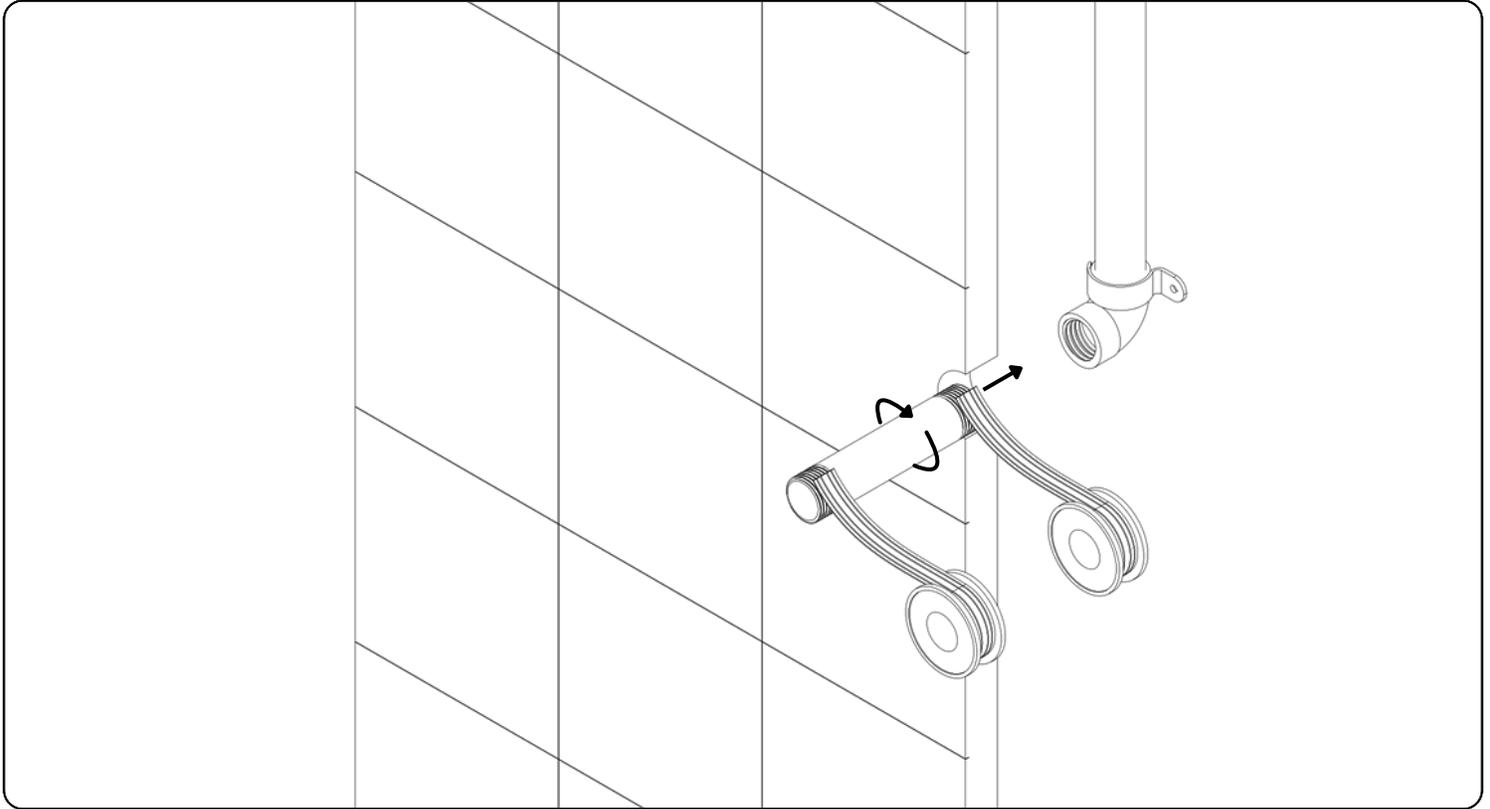


Depending on the mounting of the valve and the positioning of the lines, either thread the arm directly into the elbow fitting or use an extension and a connector.

Select a short section of copper pipe or a brass nipple with male **3/4"** NPT threads on both ends. The length of the pipe should be selected so that it terminates approximately **1/8"** short of the finished wall surface (see example in Step 4). Apply plumber's tape (PTFE thread seal tape) evenly to the male threads to ensure a watertight seal. Thread one end of the extension securely into the elbow fitting behind the wall.

Note: Verify that the exposed, unthreaded male end of the extension is level and aligned perpendicular to the wall surface to ensure proper alignment and seating of the Harmony tub filler.


STEP 4

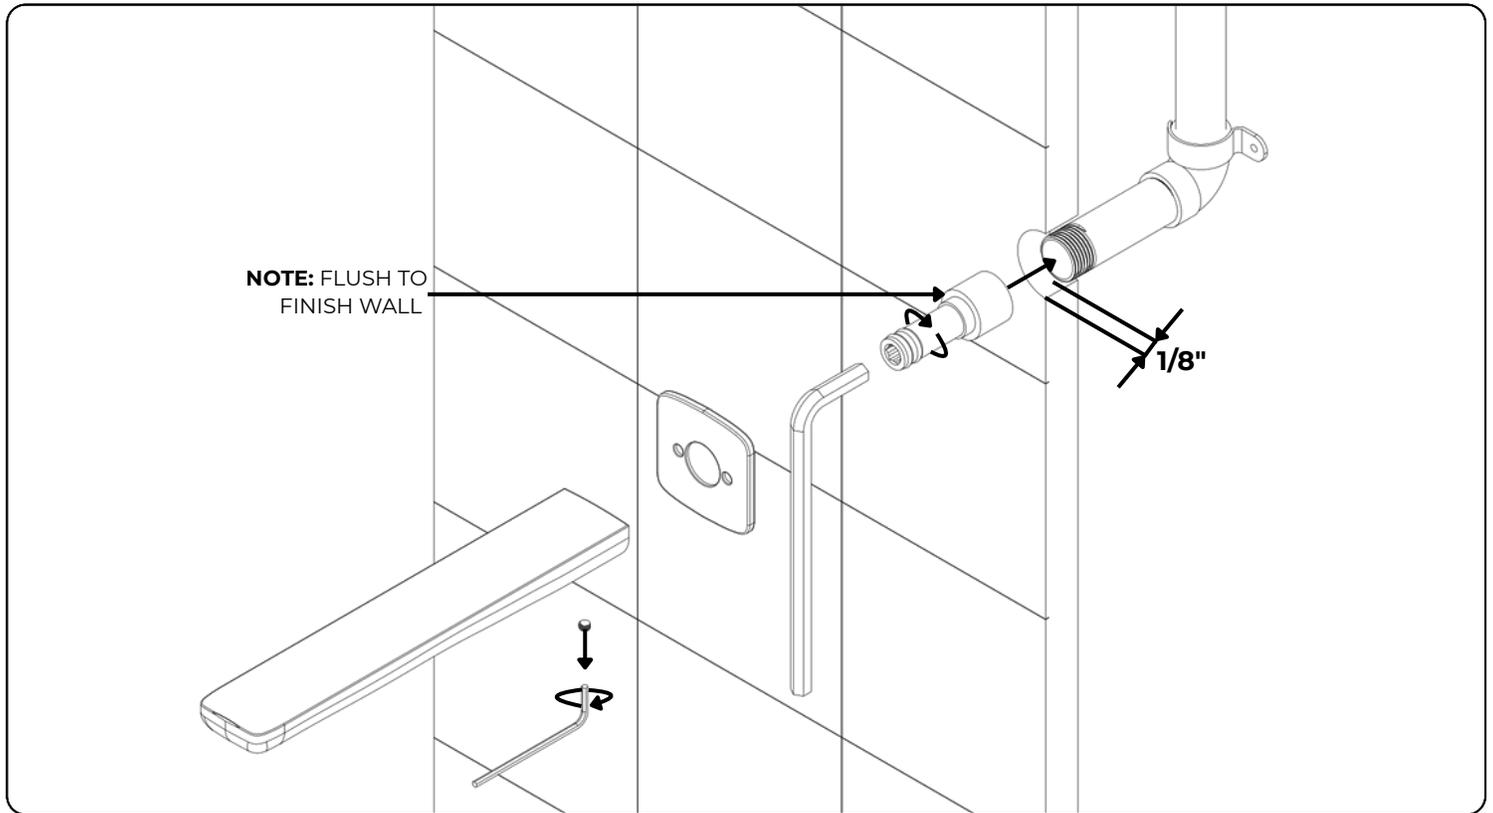

Loosen the bottom set screw on the Harmony tub filler using the appropriate Allen wrench. Remove the mounting spindle from the tub filler assembly and thread it onto the installed pipe extension. Insert an **8mm** Allen wrench into the interior of the mounting spindle and tighten the threads on both ends of the pipe extension securely, ensuring the spindle is firmly seated and properly aligned.

With the tub filler passing through the escutcheon, carefully slide the tub filler onto the mounting spindle by hand. Ensure the spout is level and correctly oriented, and confirm that the escutcheon sits flush against the finished wall surface without gaps.

STEP 5

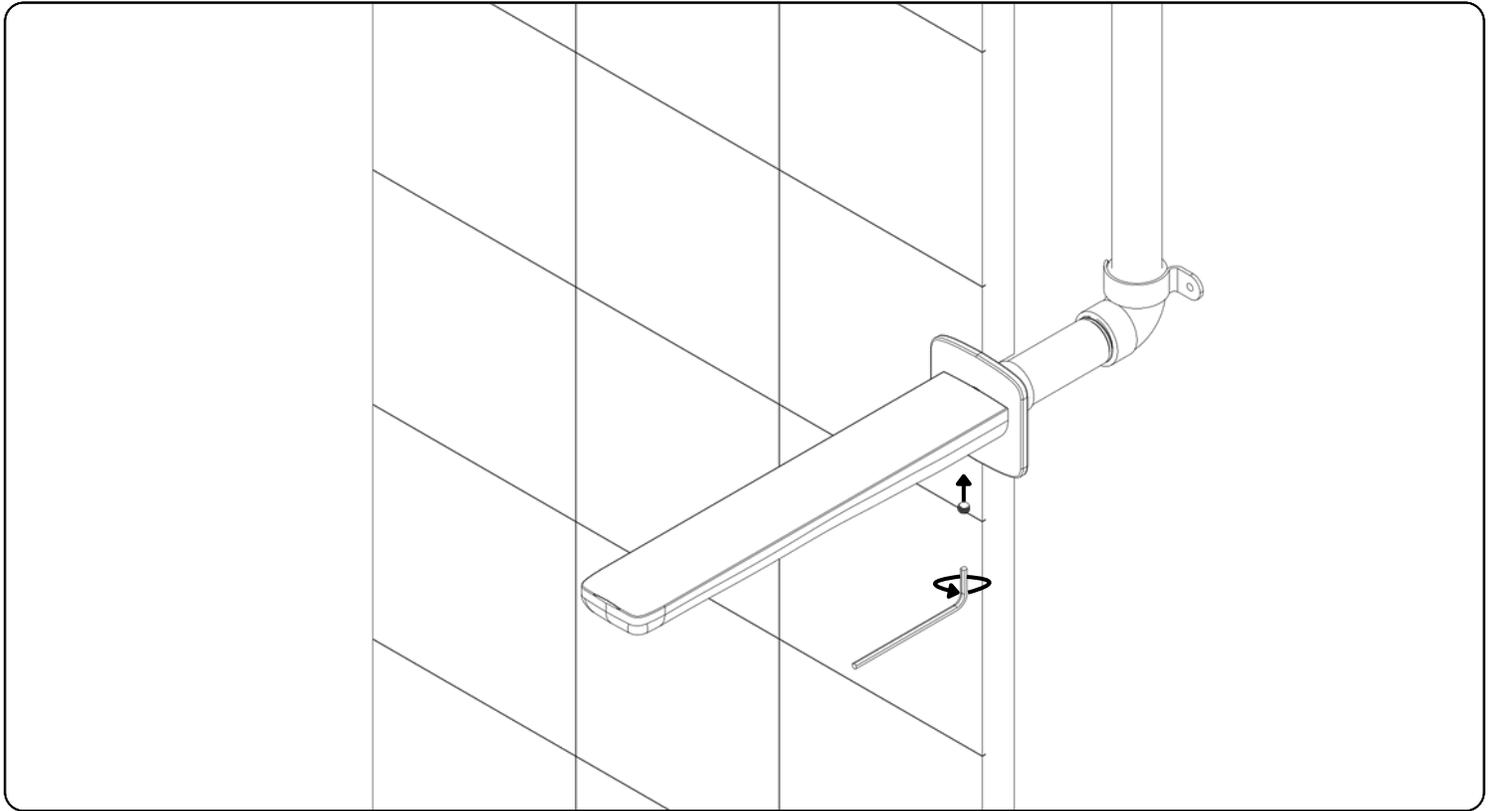

Tighten the bottom set screw to secure the Harmony tub filler onto the mounting spindle. Gradually tighten the set screw until the tub filler is firmly locked in place, ensuring there is no movement or rotation. Do not overtighten the set screw, as excessive force may strip the threads or damage the internal components. Once tightened, gently attempt to move the tub filler to confirm it is securely fastened.

After installation is complete, turn on the local water supply (if previously shut off) and carefully inspect all connections for leaks. Allow water to run briefly to confirm proper operation and secure installation.

Note: A thin bead of silicone sealant may be applied around the outer edge of the escutcheon or where the connector fitting meets the wall to help prevent moisture from entering the wall cavity. Allow the sealant to cure according to the manufacturer's recommended drying time before exposing to humidity.


F908-8

Harmony Wall Mounted Tub Filler

artos®

PARTS BREAKDOWN

PRODUCT SKU: F908-8

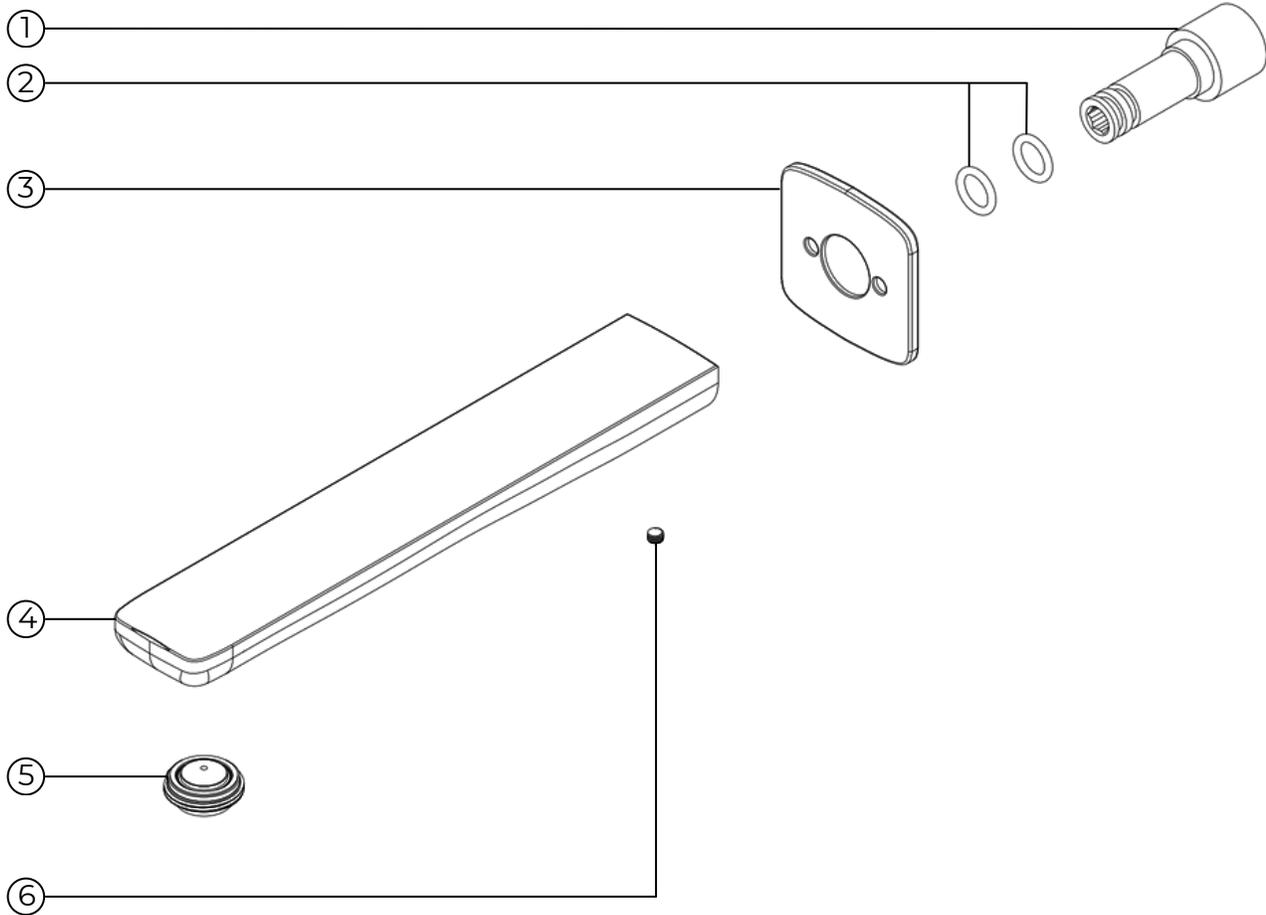

- ① MOUNTING SPINDLE
- ② SPINDLE O-RING SEALS (2)
- ③ HARMONY ESCUTCHEON

- ④ HARMONY TUB FILLER
- ⑤ ADJUSTABLE AERATOR
- ⑥ SET SCREW