

artos[®]

F202ALT-14

INSTALLATION GUIDE

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

BRUSHED NICKEL(BN)



CHROME(CH)



artos[®]

F202ALT-14

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

OPERATING SPECIFICATIONS

for associated valves | F906A-V0

OPERATING PRESSURE

Minimum: 15 psi
Maximum: 125 psi

FLOW CAPACITY

5.6USGPM@60 psi (each valve)
TOTAL= 11.2USGPM

INLET/OUTLET

1/2" Female NPT

STANDARDS

ASSE 1016.ASME A112.18.1/CSA B123.1 Certified

CODES

CUPC Approved




artos[®]

F202ALT-14

PRODUCT DIMENSIONS


quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

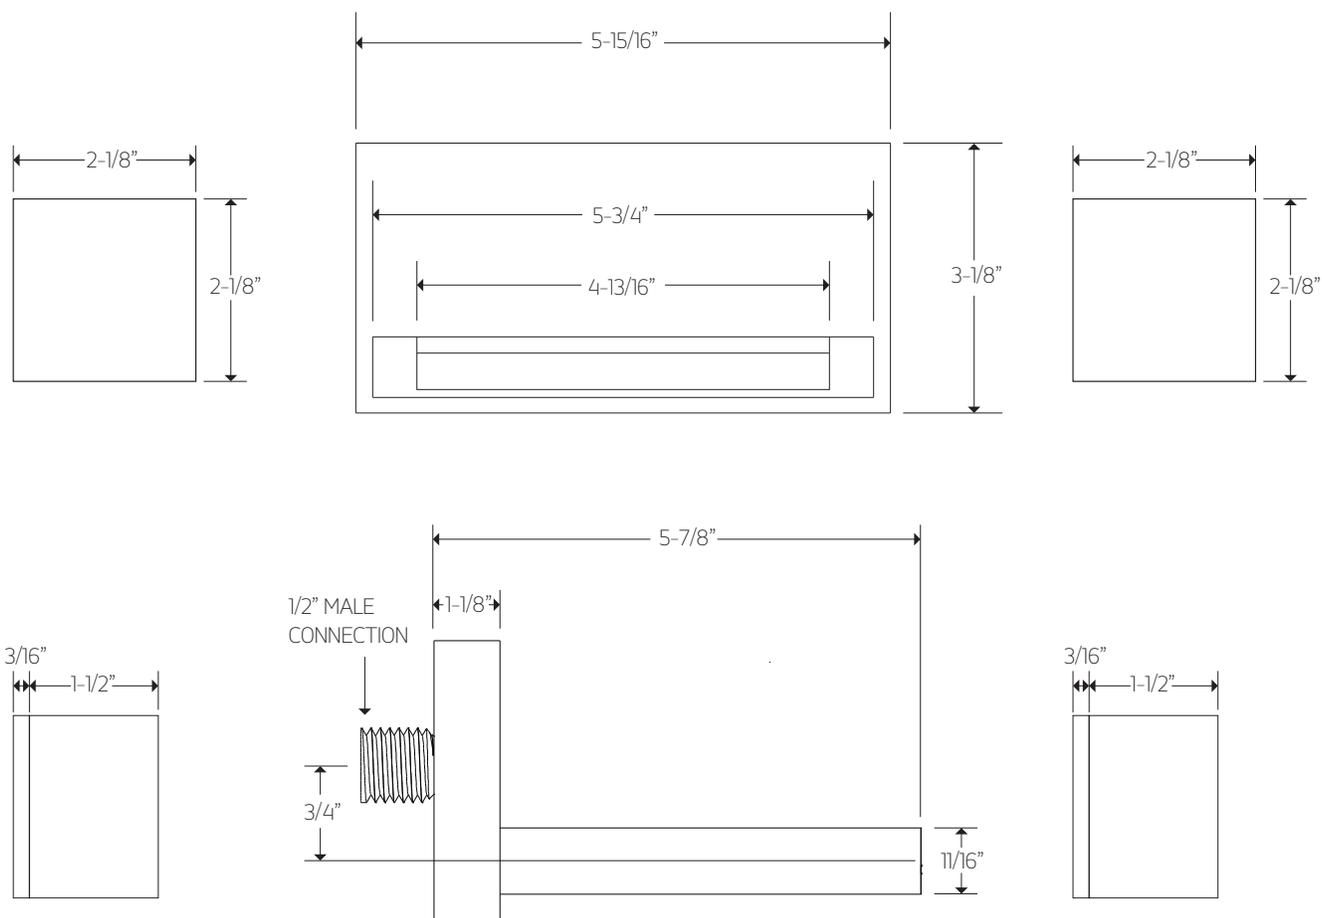


F202ALT-14

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

STEP 1 LOOSEN (2) SET SCREW WITH ALLEN WRENCH TO REMOVE TUB FILLER CONNECTOR, SET ASIDE

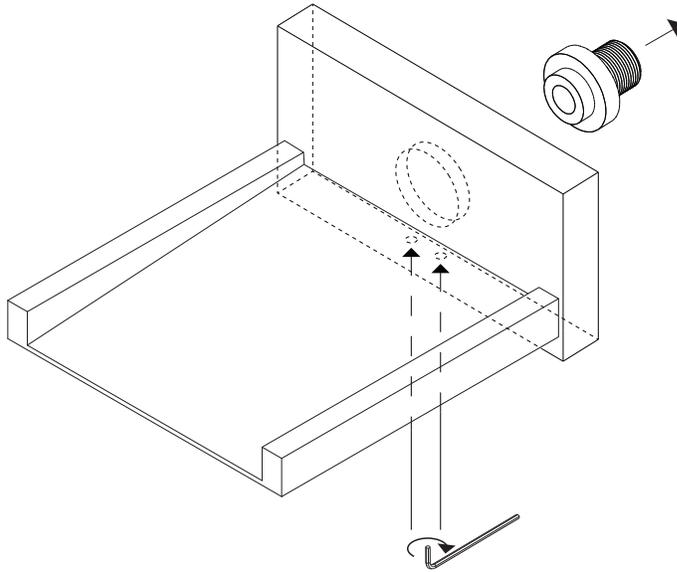

 STEP 2




FRONT OF VALVES TO
FINISH WALL SURFACE
MAX= 3"
MIN= 1"

1-1/2"
HOLES THROUGH
FINISHED WALL



INSTALLATION STEPS

STEP 3 IMPORTANT: IF USING HEAT NEAR THE VALVE BODY PLEASE REMOVE CARTRIDGE.

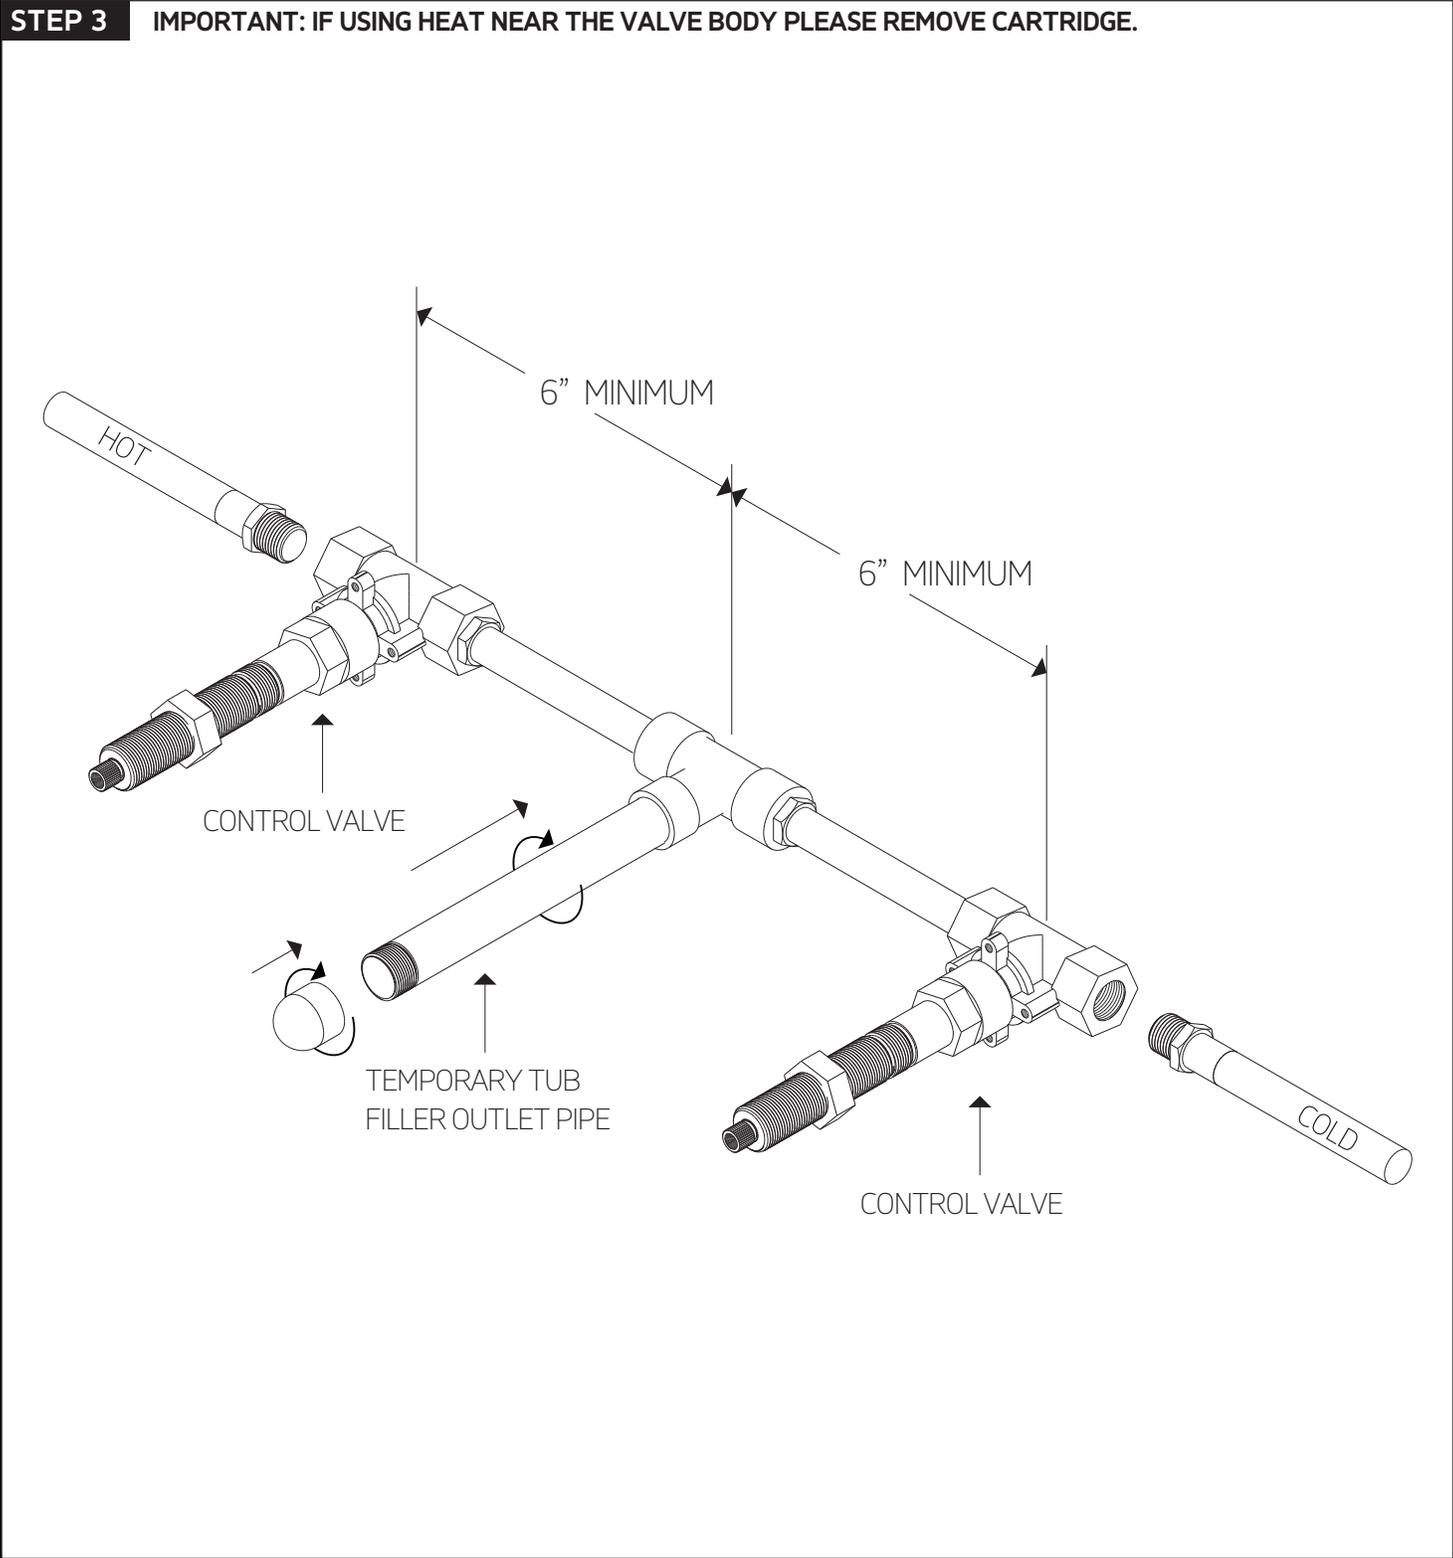


artos[®]


F202ALT-14

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

STEP 4

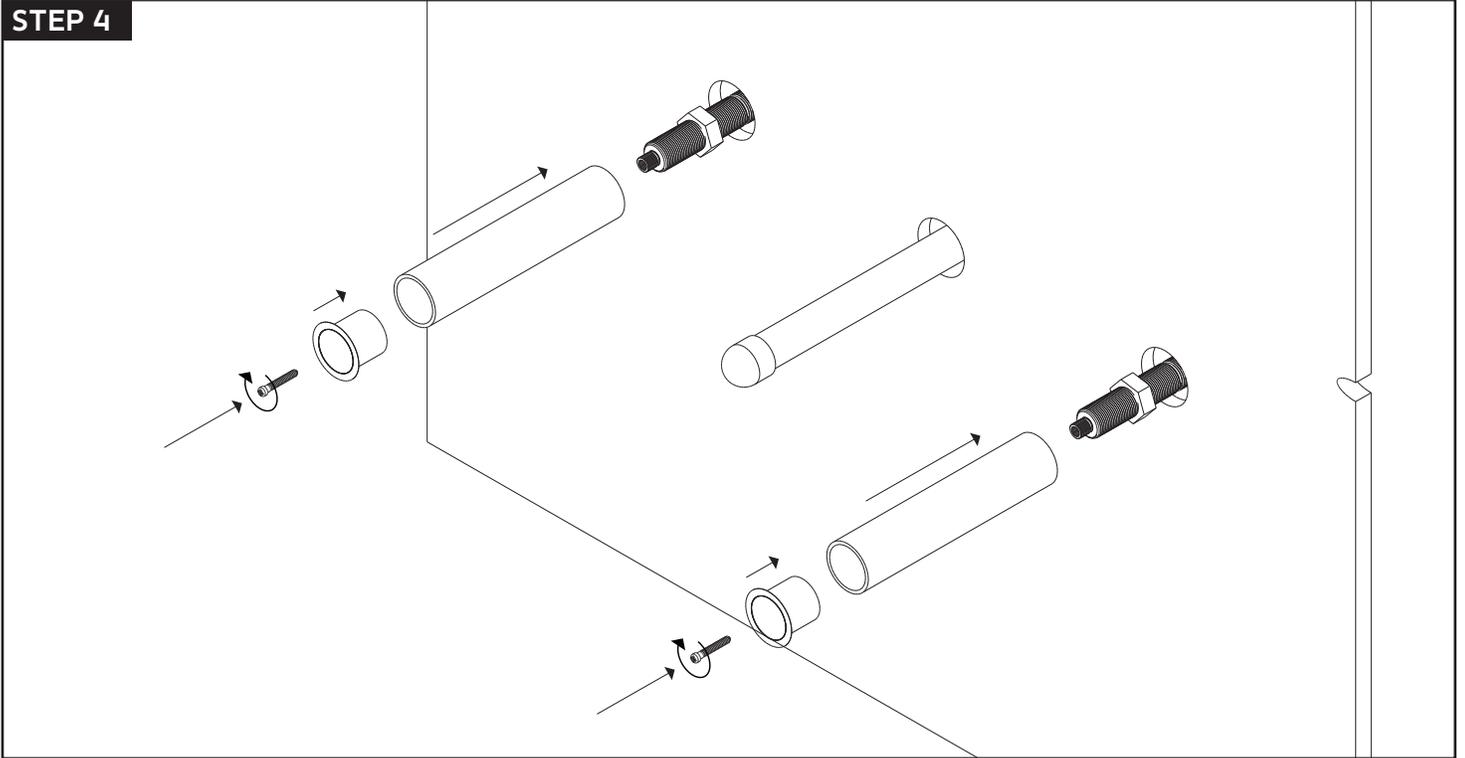


STEP 5

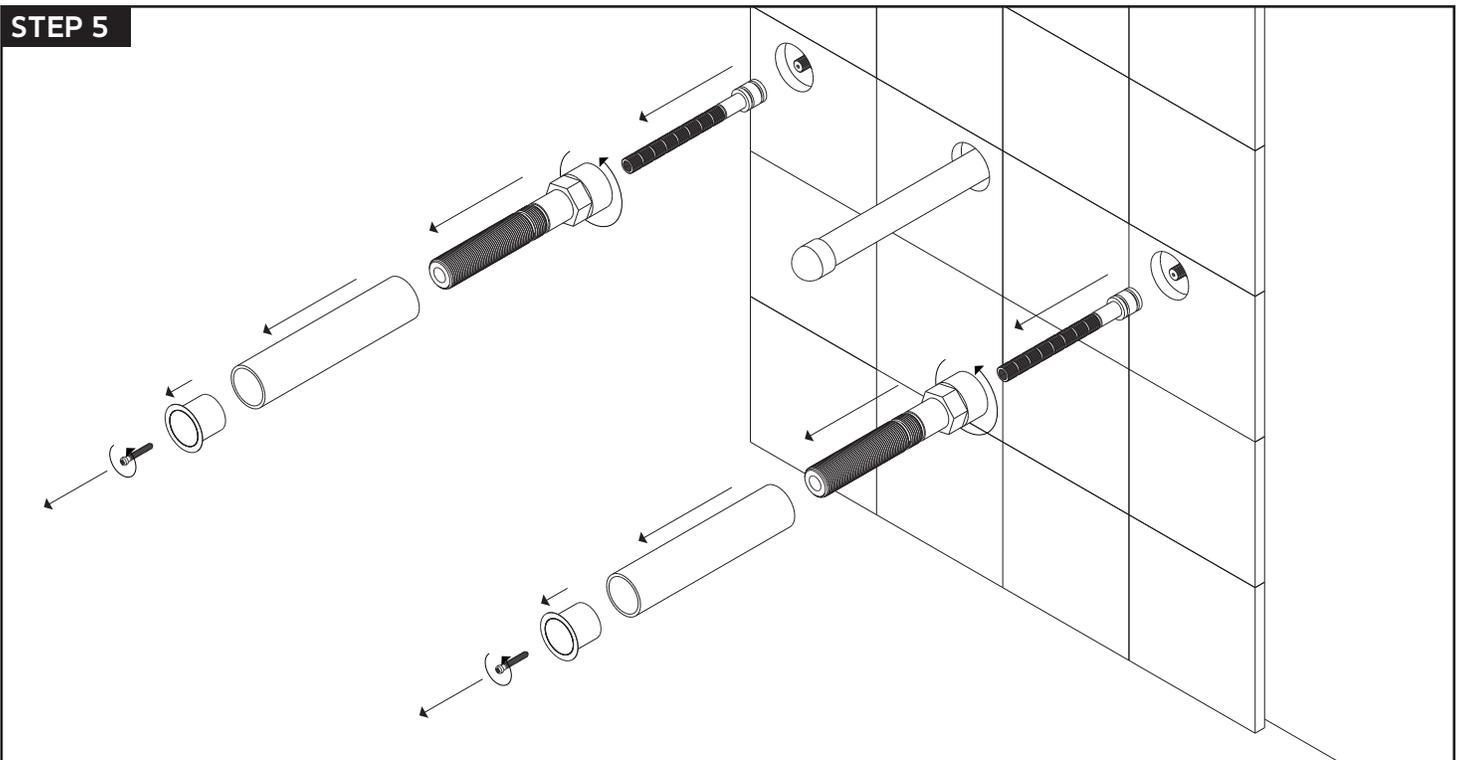


INSTALLATION STEPS

STEP 6 REFIT OUTER SPINDLES ONLY.

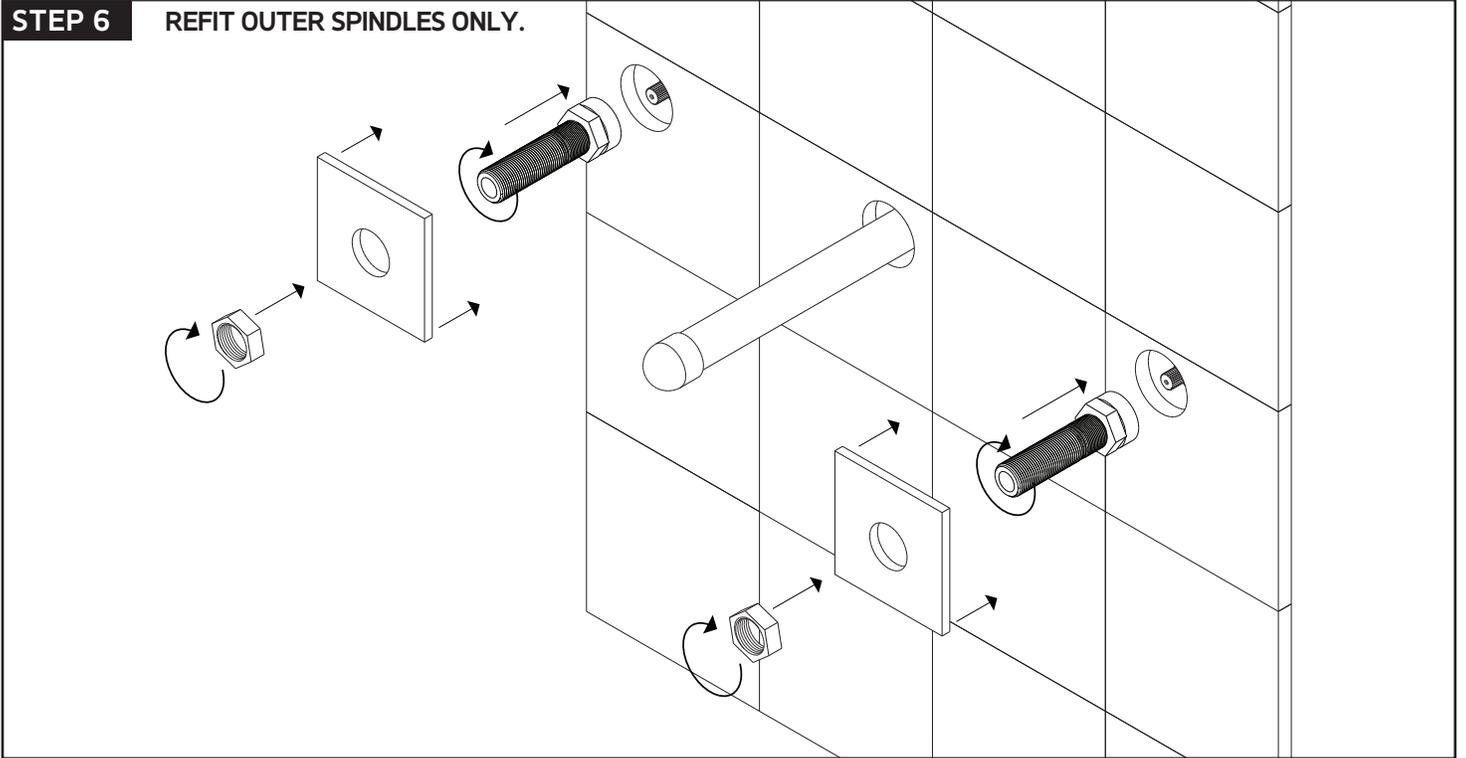

STEP 7

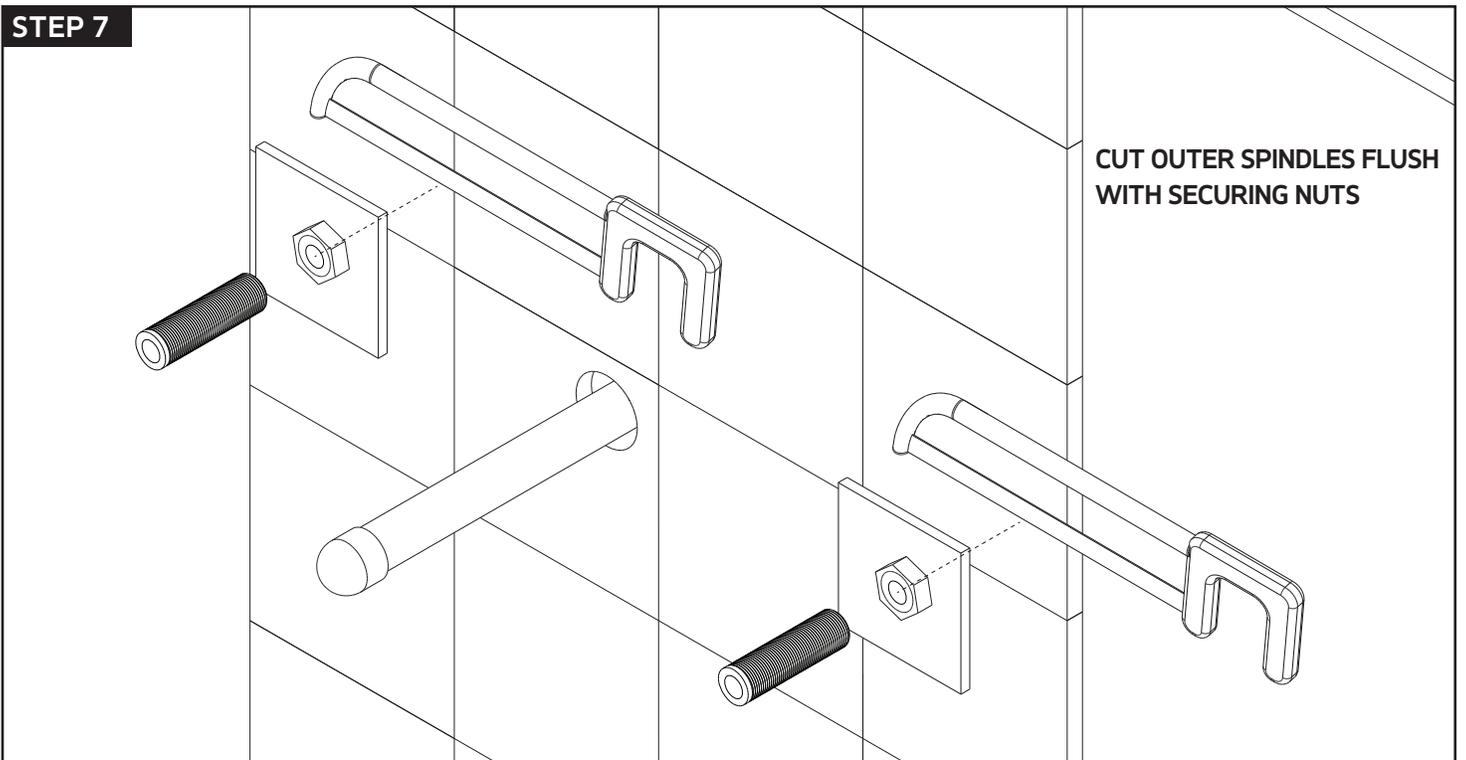


artos[®]


F202ALT-14

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

STEP 8

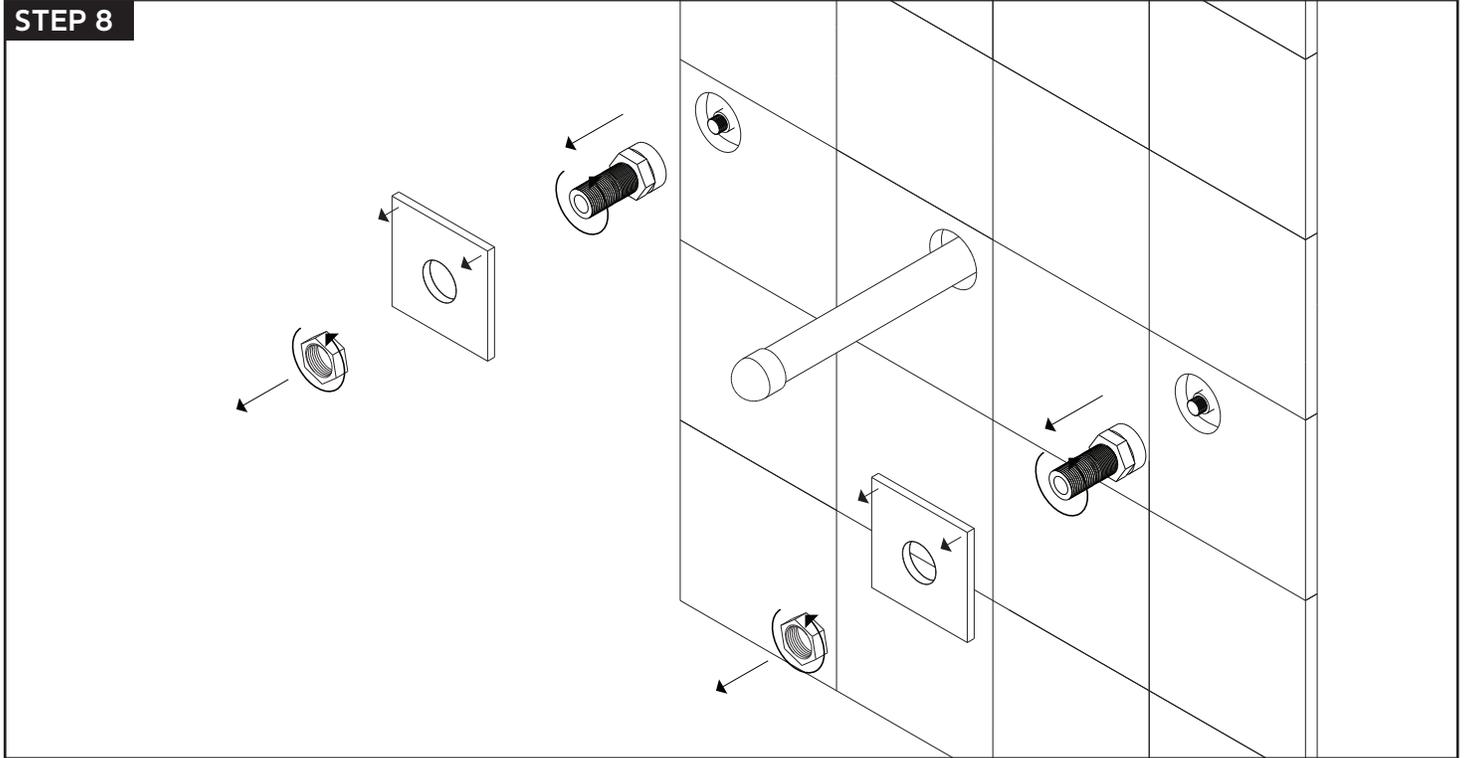


STEP 9

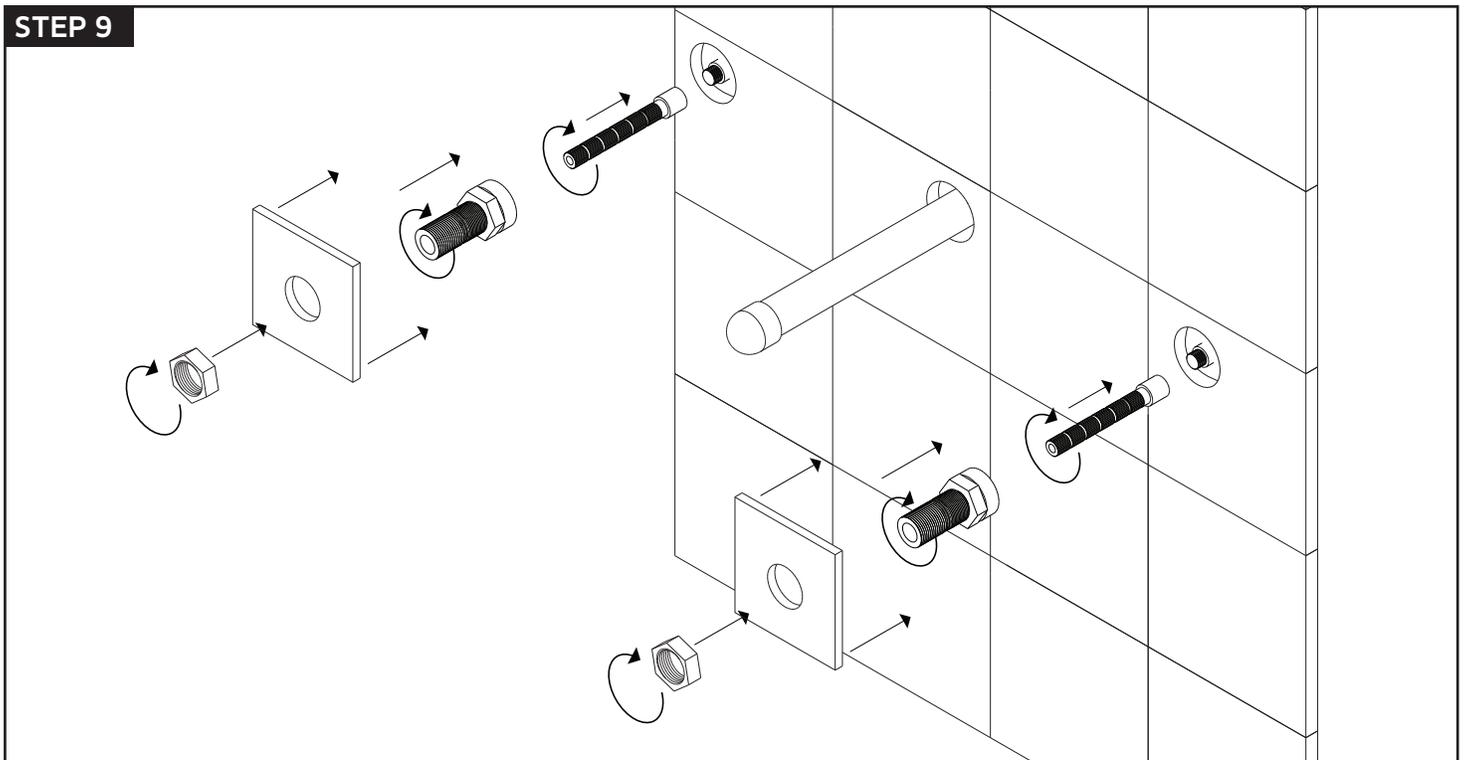


INSTALLATION STEPS

STEP 10

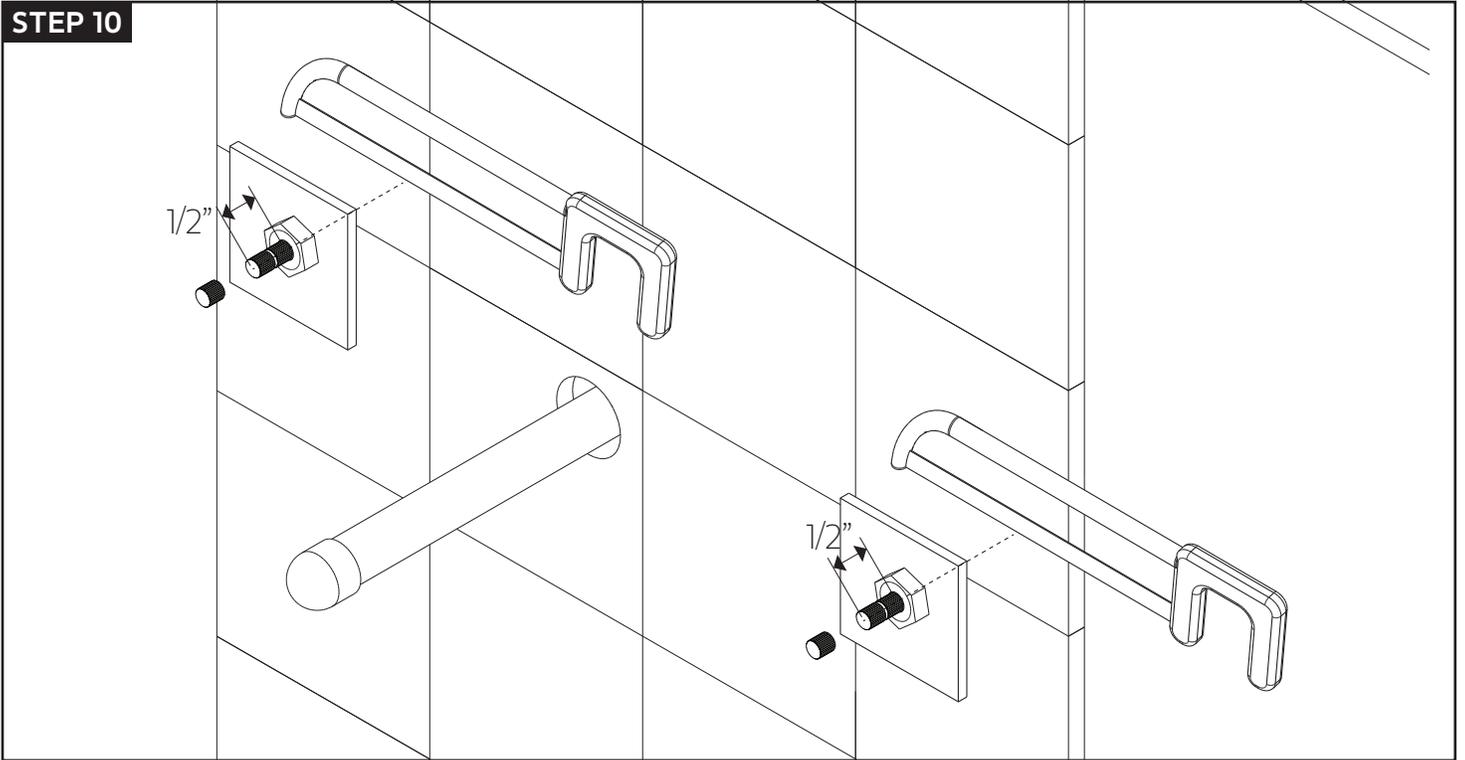


STEP 11

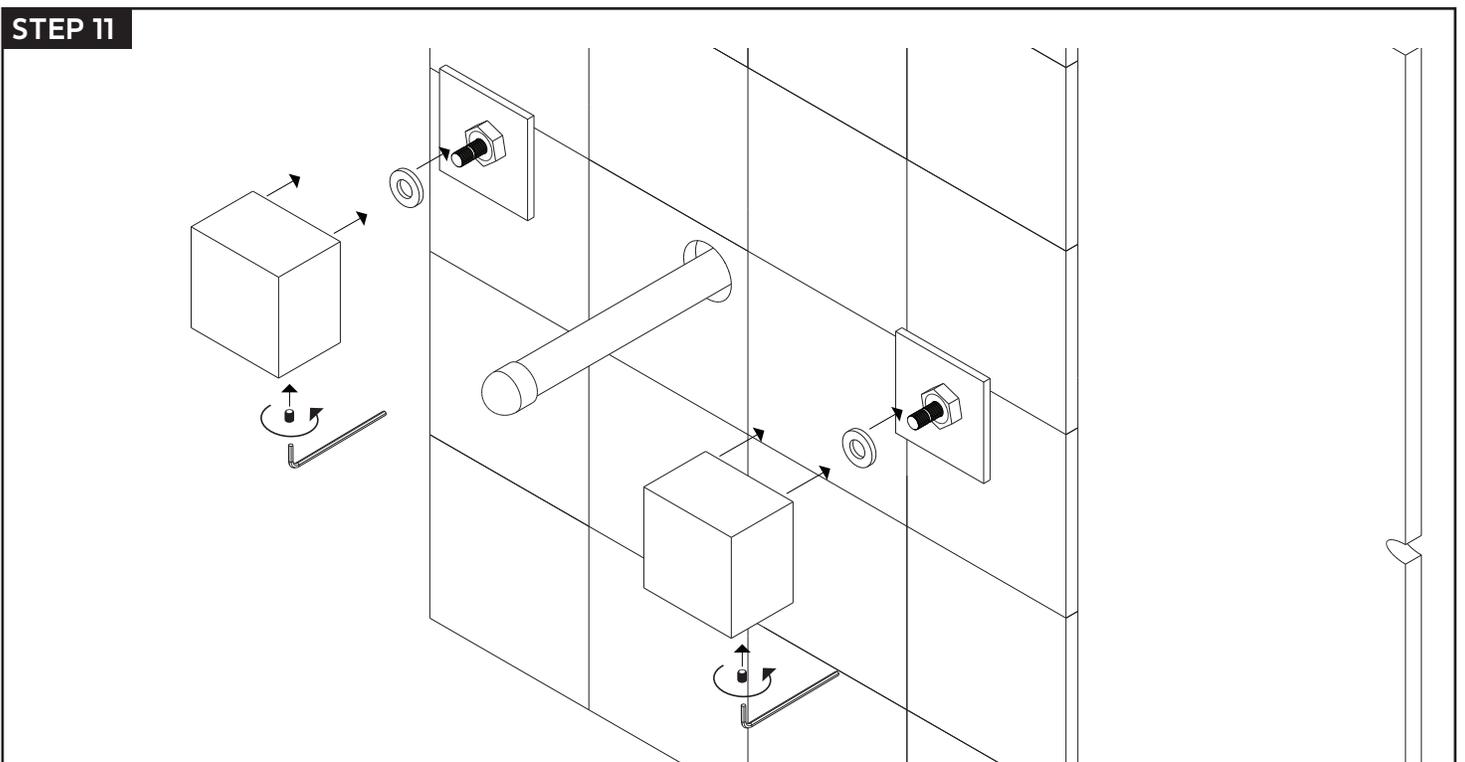


F202ALT-14

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

STEP 12

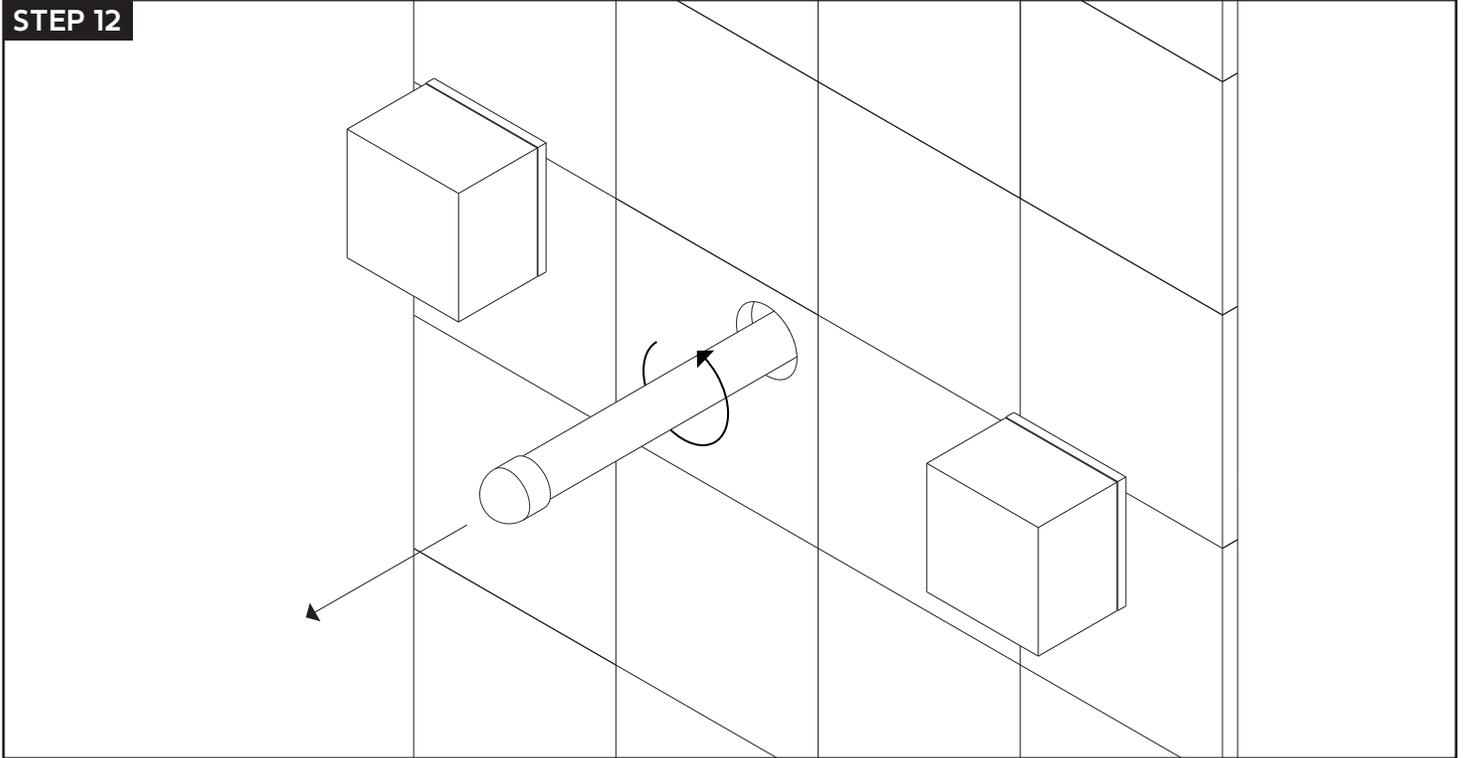


STEP 13

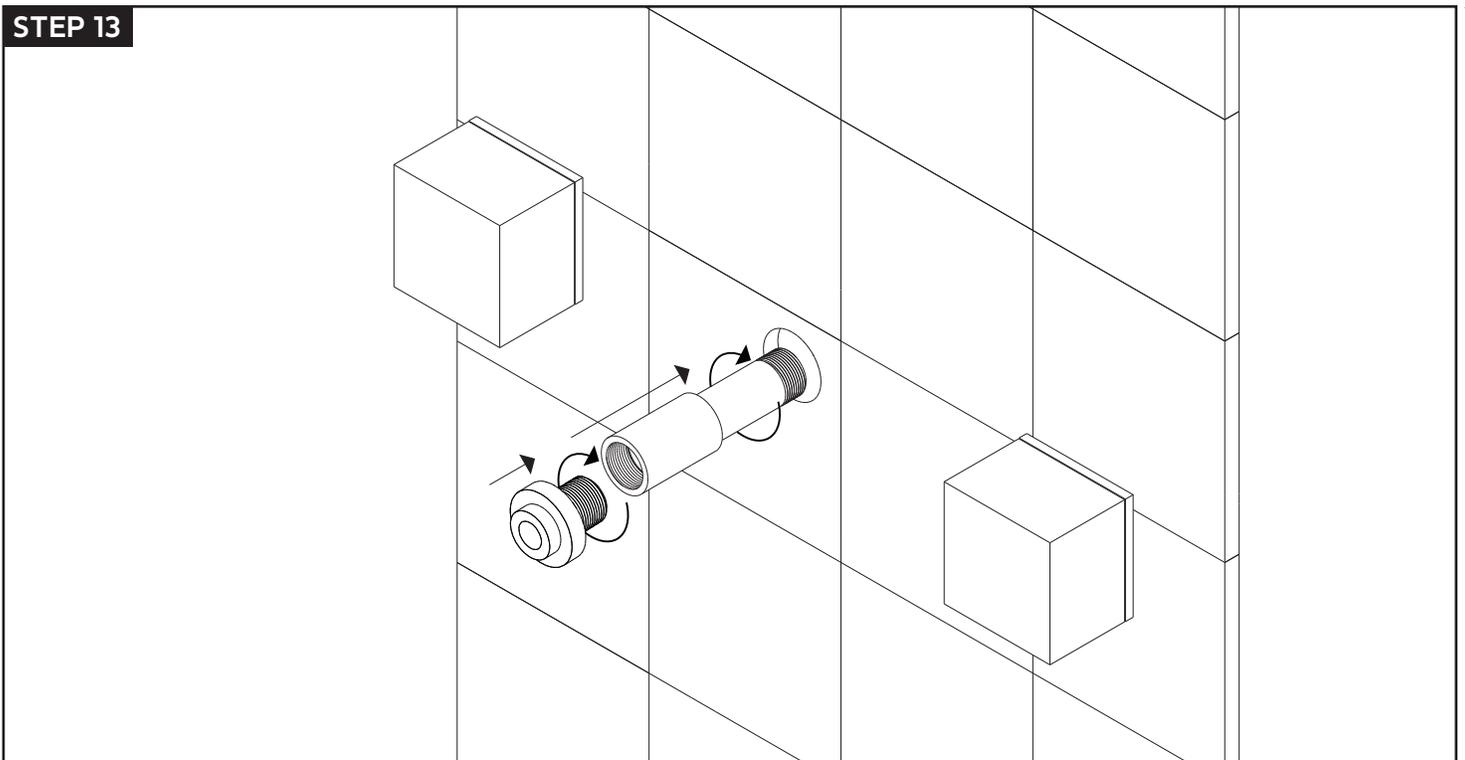


INSTALLATION STEPS

STEP 14

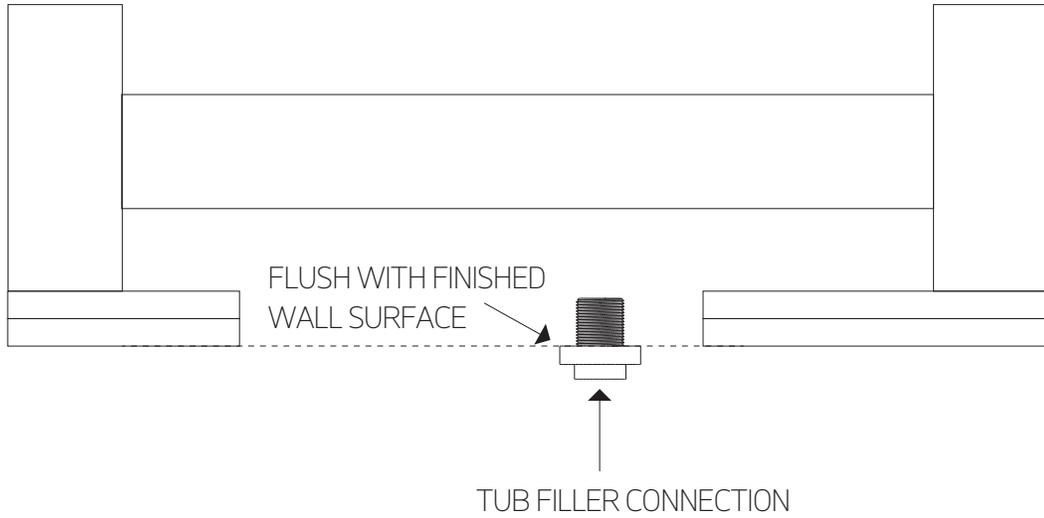


STEP 15

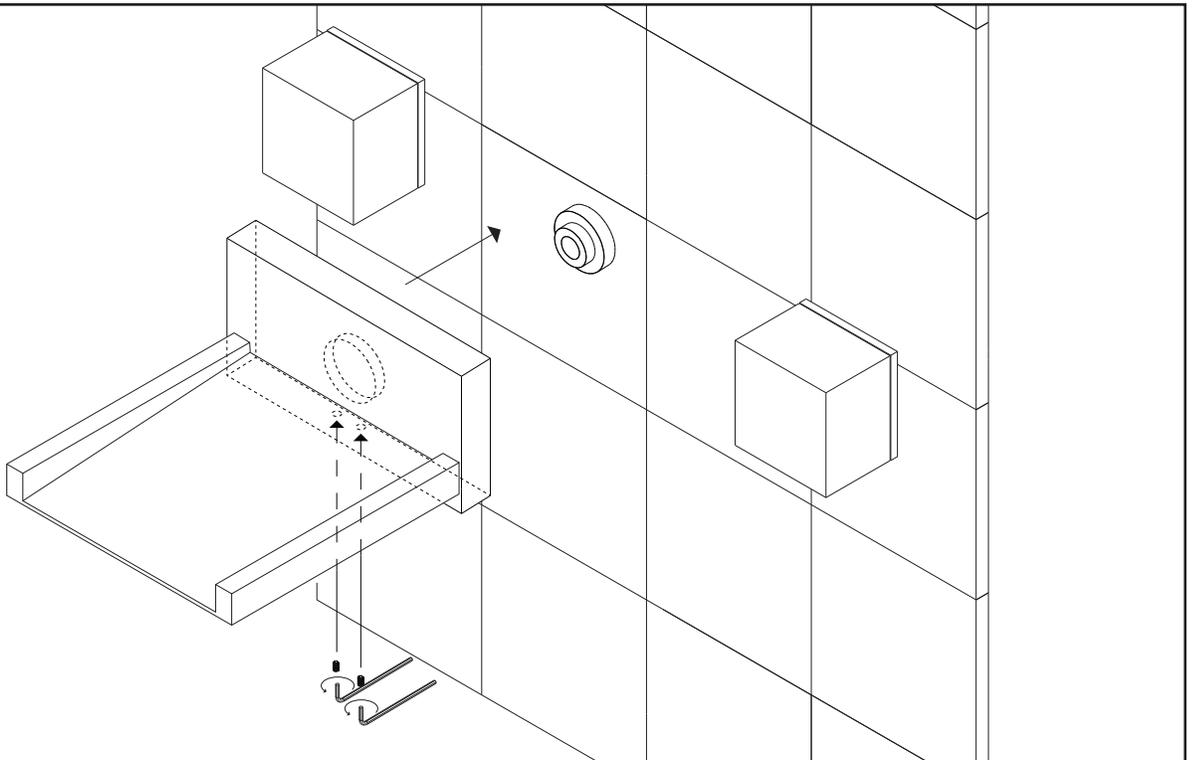

artos[®]


F202ALT-14

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

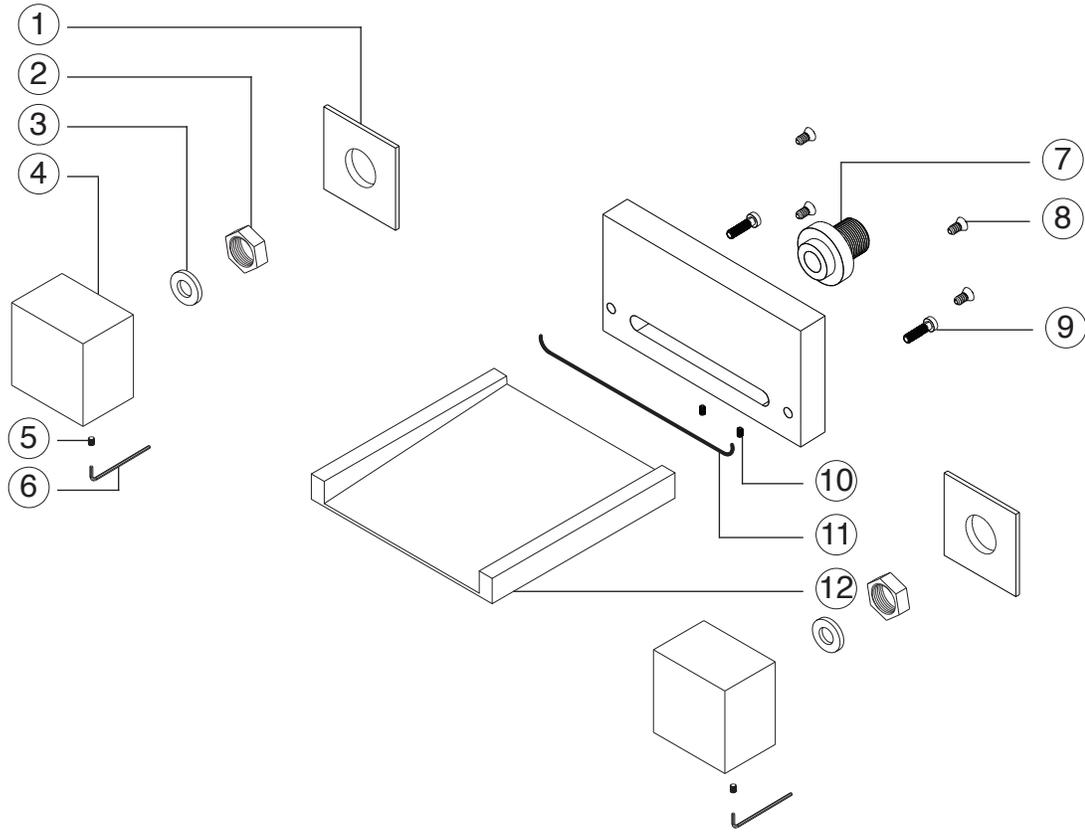

- ① HANDLE ESCUTCHEON (2) F202ALT-14 XP1
- ② ESCUTCHEON LOCKING NUT (2) F202ALT-14 XP2
- ③ NYLON WASHER (2) F202ALT-14 XP3
- ④ HANDLE (2) F202ALT-14 XP4
- ⑤ HANDLE SET SCREW (2) F202ALT-14 XP5
- ⑥ HANDLE ALLEN WRENCH (2) F202ALT-14 XP6
- ⑦ TUB FILLER CONNECTION INLET F202ALT-14 XP7
- ⑧ TUB FILLER SCREWS (4) F202ALT-14 XP8
- ⑨ TUB FILLER BODY TO SPOUT SCREWS (2) F202ALT-14 XP9
- ⑩ TUB FILLER SET SCREWS (2) F202ALT-14 XP10
- ⑪ TUB FILLER GASKET F202ALT-14 XP11
- ⑫ TUB FILLER SPOUT F202ALT-14 XP12

PARTS BREAKDOWN

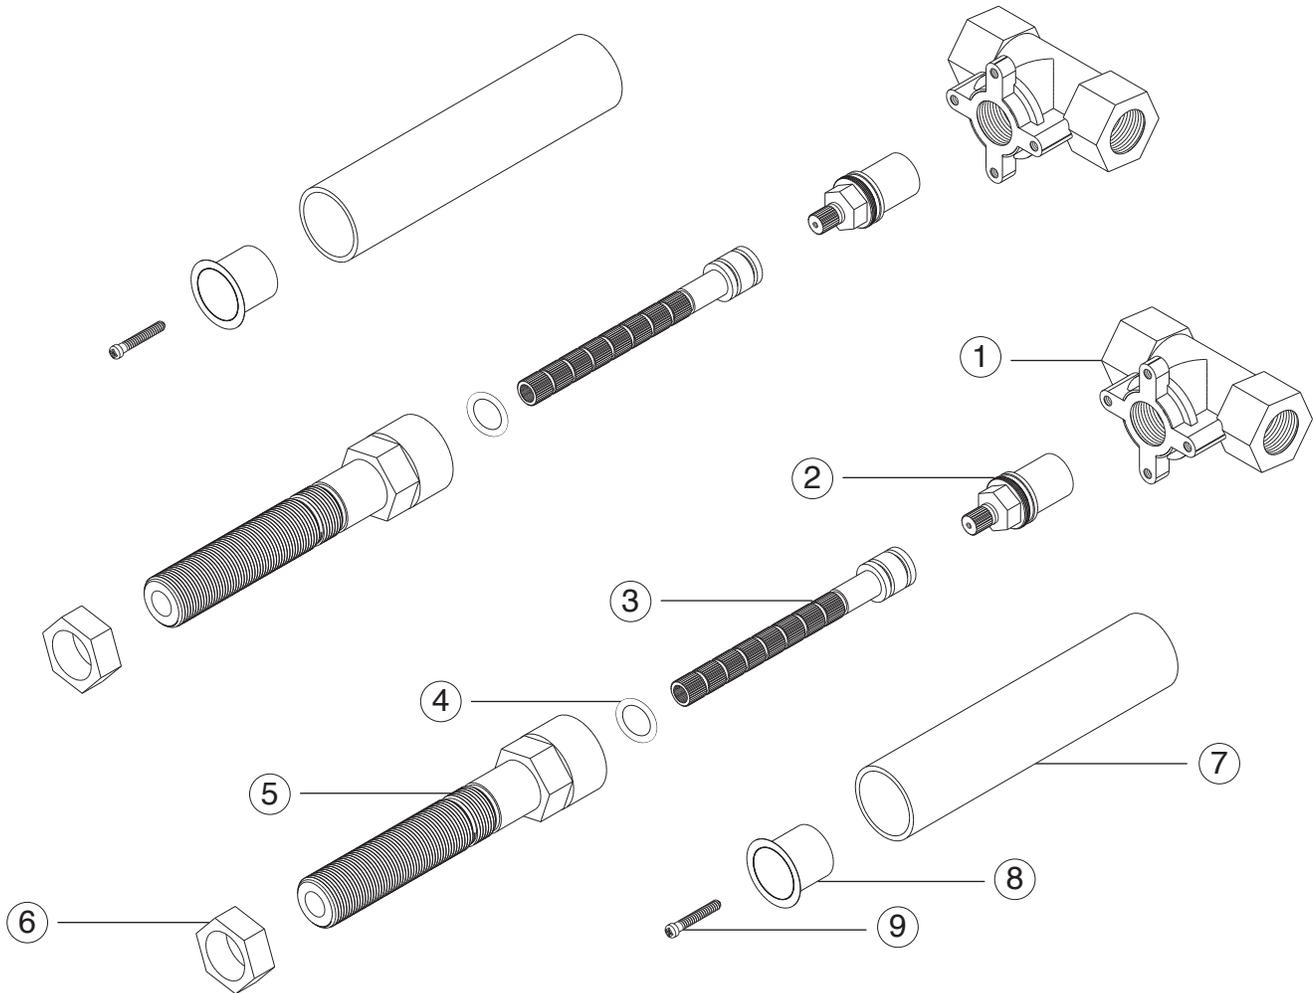

- ① **VALVE BODY(2)** F906A-V0 XP1
- ② **CARTRIDGE (2)** F906A-V0 XP2
- ③ **HANDLE STEM (2)** F906A-V0 XP3
- ④ **STEM WASHER (2)** F906A-V0 XP4
- ⑤ **ESCUTCHEON STEM (2)** F906A-V0 XP5
- ⑥ **PLATE SECURING NUT (2)** F906A-V0 XP6
- ⑦ **PLASTER GUARD (2)** F906A-V0 XP7
- ⑧ **PLASTER GUARD CAP (2)** F906A-V0 XP8
- ⑨ **PLASTER GUARD SCREW (2)** F906A-V0 XP9

artos®

F202ALT-14

quarto 6 inch 3-hole wall
mount tub filler, open
extended spout

CARE & MAINTENANCE

For best results, keep the following in mind to retain the high quality finish of your artos® faucets:

- Use a soft, dampened sponge or cloth. On no account should you use an abrasive material such as a brush, scouring pad or steel wool to clean surfaces.
- Test your cleaning agent solution on an inconspicuous area before applying to the entire faucet.
- Wipe surfaces clean and rinse completely with water immediately after applying cleaning agent.
- An ideal cleaning technique is to rinse faucet thoroughly and blot dry any water from the surface after each use.

LIMITED LIFETIME WARRANTY

Artos® Limited Lifetime Warranty

Artos® faucets have been manufactured under the highest quality and manufacturing standards. Artos® faucets are guaranteed for life against leaks and manufacturing defects for as long as the original consumer purchaser owns it. This warranty applies to installations in the US, Canada and Mexico (North America). Commercial, Industrial or business uses are warranted for a period of one year from the original date of purchase.

This warranty is non-transferable and applies exclusively to the original owner or end-user. If a defect is found during normal use, Artos® will, at its election, repair, replace or make an appropriate adjustment. Damage caused by accident, misuse, abuse, improper installation or alteration will void the warranty. This warranty does not cover replacement parts where damage is caused by normal wear and tear. Labor charges, installation or other incidental or consequential costs will not be covered.

Replacement parts that qualify for warranty repair can be obtained by contacting Artos® at 1-877-9ARTOS9 or by e-mail at info@artos.us.com. Proof of purchase (original sales receipt) from the original consumer purchaser must accompany all warranty claims. When submitting your claim in writing, please provide your name, address and telephone number.

Please register this product online at WWW.ARTOS.US.COM

Item No: **F202ALT-14**
Serial No: