

artos[®]

F7802-V0

INSTALLATION GUIDE

Floor Mount Tub Filler Valve



artos[®]

F7802-V0

Floor Mount Tub Filler Valve

OPERATING SPECIFICATIONS



FEATURES

- Built in level indicator
- Easy level adjustment
- Allows rough in to be installed at any orientation to suit supply pipe direction

OPERATING PRESSURE

- Minimum: 15 psi
- Maximum: 75 psi
- Above 90psi it may be necessary to install a pressure reducer

OPERATING TEMPATURE

- Maximum: 176°

APPROVALS




artos[®]


F7802-V0

TECHNICAL SPECIFICATIONS

Floor Mount Tub Filler Valve

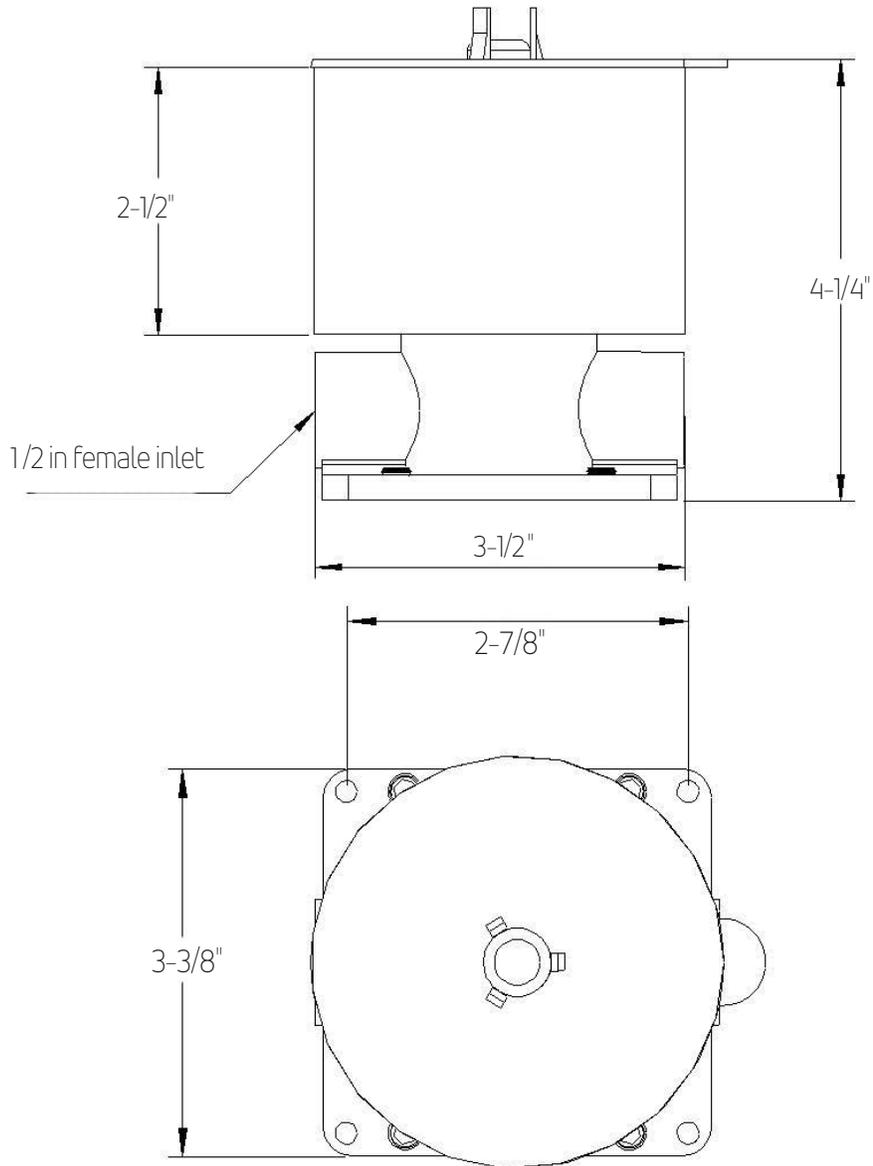


STEP 1

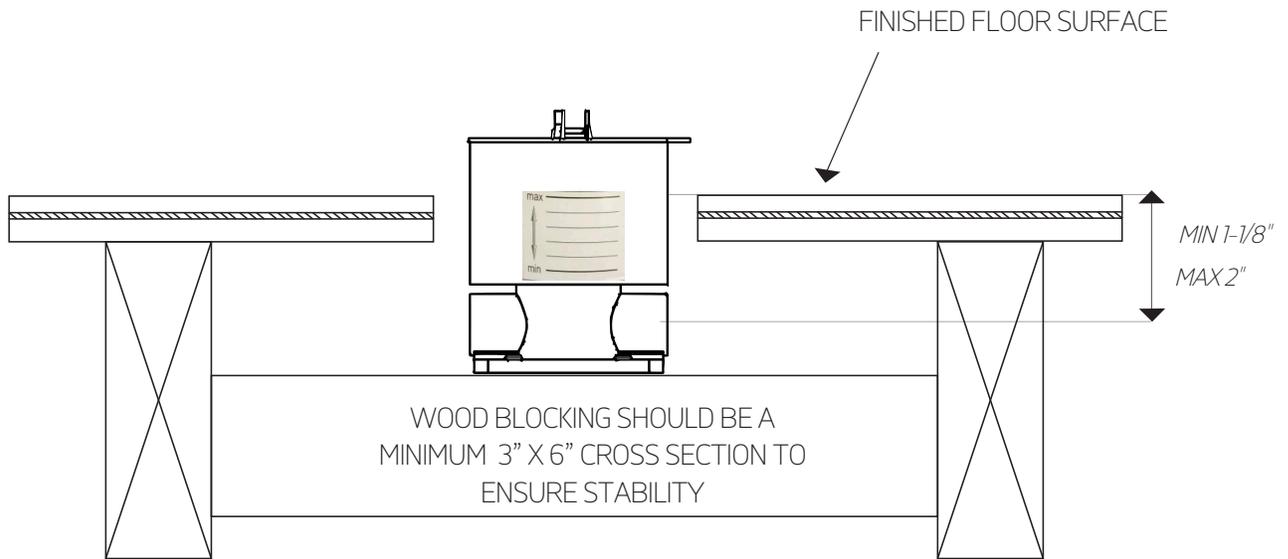

STEP 2


ONCE LEVEL, SECURE ROUGH-IN, USING 4 LAG BOLTS, INTO BLOCKING

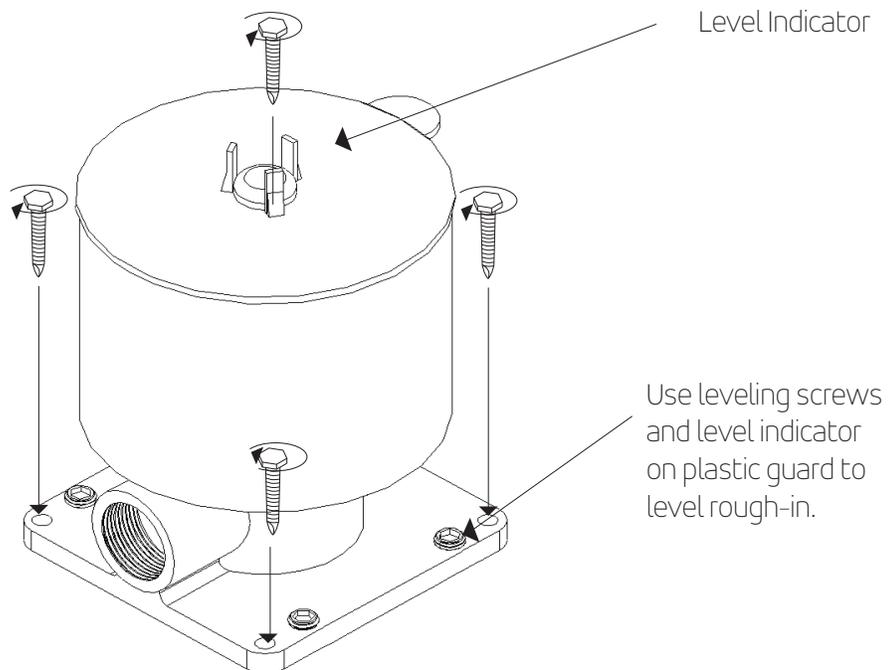

INSTALLATION STEPS


STEP 3

ENSURE HOT AND COLD SUPPLY LINES ARE CONNECTED TO THE CORRECT INLETS

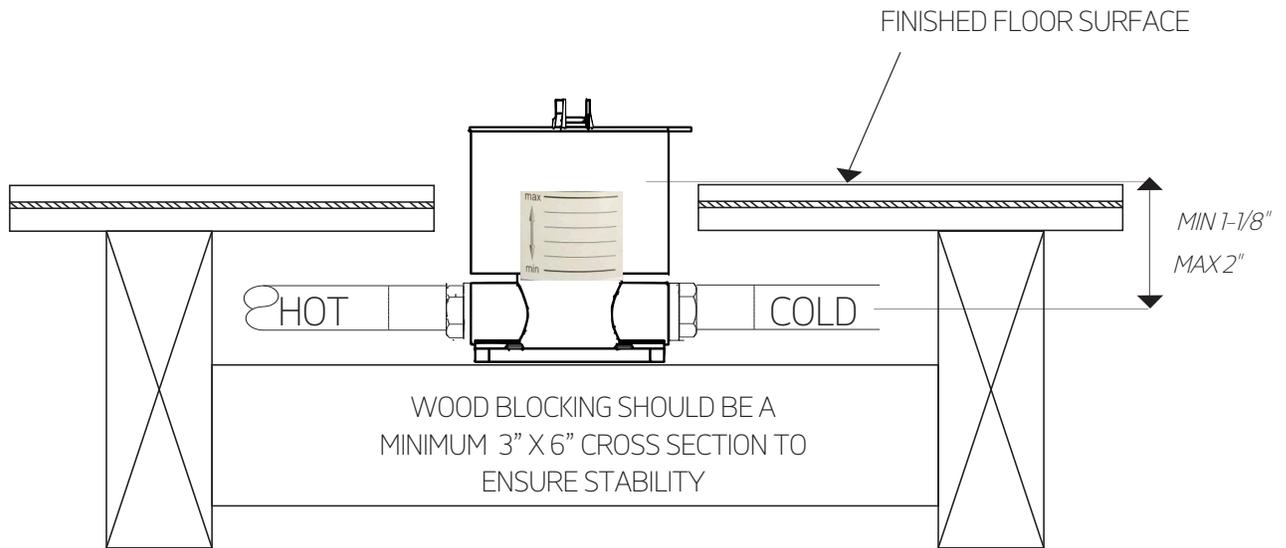


STEP 4

REMOVE FLANGE, BLANK PLUG COVER, BLANK PLUGS, AND PLASTER GUARD

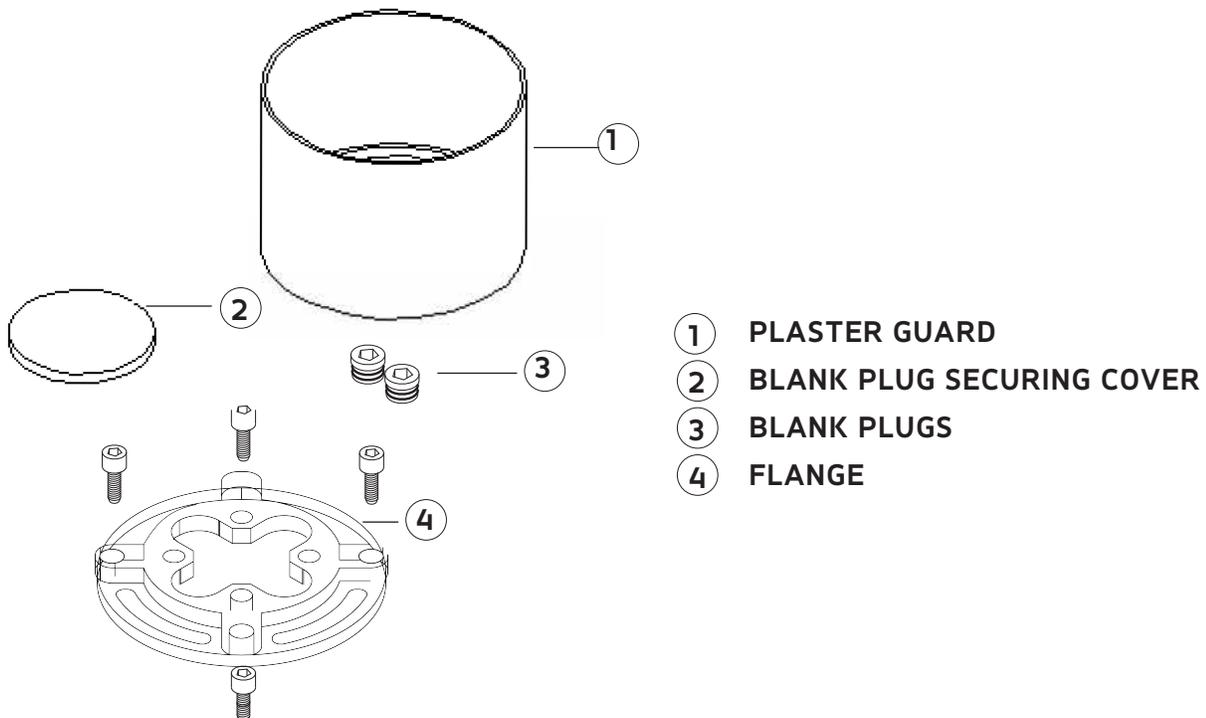


STEP 5

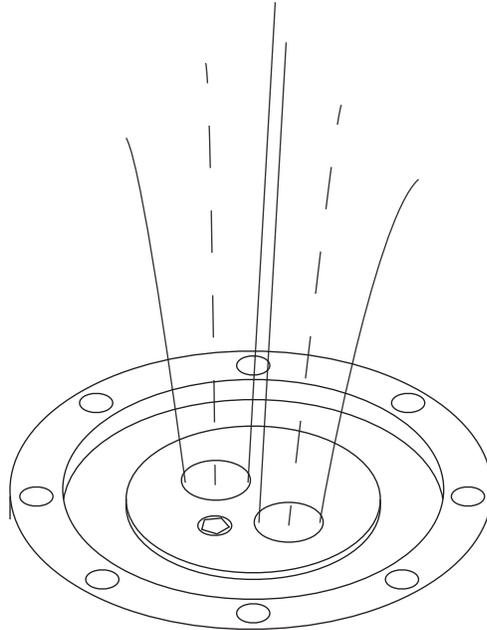

1. FLUSH TO CLEAR DEBRIS.
2. REPLACE PLASTER GUARD, BLANK PLUGS, BLANK PLUG COVER AND FLANGE
3. CHECK CONNECTIONS FOR WATER TIGHTNESS

Floor Mount Tub Filler Valve

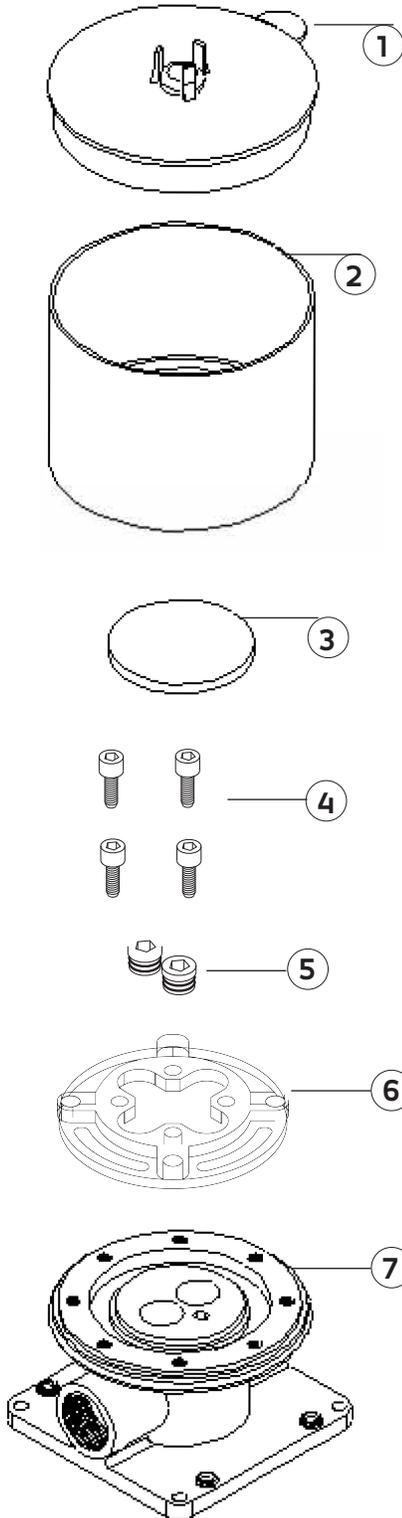

- ① PLASTER GUARD COVER
- ② PLASTER GUARD
- ③ BLANK PLUG SECURING COVER
- ④ M6x12 FLANGE SECURING SCREWS
- ⑤ BLANK PLUGS
- ⑥ FLANGE
- ⑦ ROUGH BODY

artos[®]

F7802-VO

Floor Mount Tub Filler Valve

CARE & MAINTENANCE

For best results, keep the following in mind to retain the high quality finish of your artos[®] faucets:

- Use a soft, dampened sponge or cloth. On no account should you use an abrasive material such as a brush, scouring pad or steel wool to clean surfaces.
- Test your cleaning agent solution on an inconspicuous area before applying to the entire product.
- Wipe surfaces clean and rinse completely with water immediately after applying cleaning agent.
- An ideal cleaning technique is to rinse faucet thoroughly and blot dry any water from the surface after each use.

LIMITED LIFETIME WARRANTY

artos[®] faucets are guaranteed for life against leaks and finishing defects for as long as the original purchaser owns it.

Damage caused by accident, misuse, abuse, improper installation, improper cleaning or alteration will void the warranty. This warranty does not cover replacement parts where damage is caused by normal wear and tear. Westover, Inc is not responsible for labor charges, installation or other incidental or consequential costs. Proof of purchase must be provided with all claims.

Please register this product online at WWW.ARTOS.US.COM

ITEM NO. **F7802-VO**
SERIAL NO.