


ARTOS[®]

www.artos-westover.com

Installation Guide

Isis Wall Mounted Towel Warmer T-IWALLP (plug-in version)

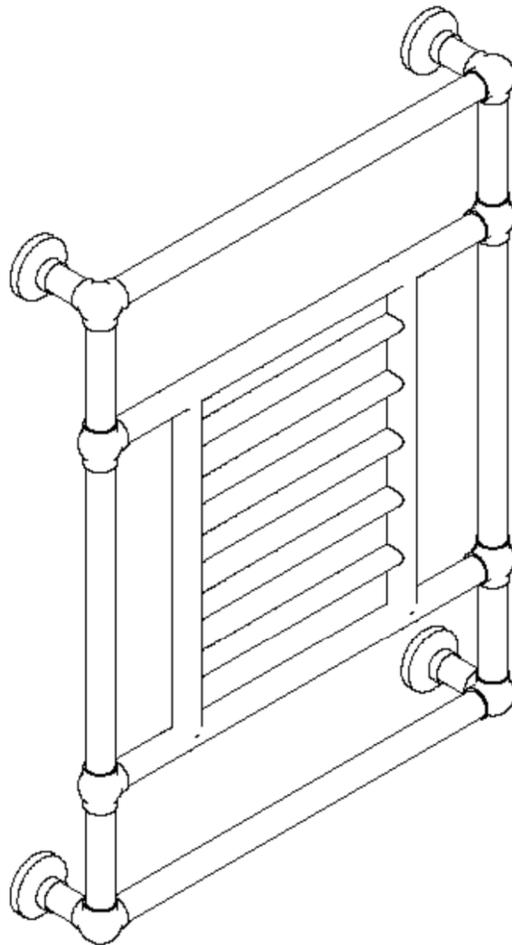

USE

The Isis Wall Mounted Towel Rack is intended for towel warming/drying, auxiliary heating or as a decorative product.

The average heat up time is about thirty minutes, but would depend on

- a) the size of the unit and
- b) the initial temperature of the unit.

Typically the unit is programmed to be on an hour before expected use and remain on for an hour afterwards.

The running cost of the towel rack, is usually similar to the running cost of lights in the same room.

Clean with a soft cloth and use non abrasive cleaners.

INSTALLATION

Do not connect heater to the network before having read and understood the following instructions.

Electrical and plumbing connections must be carried out by qualified personnel and the unit should be securely mounted to the wall in a vertical position and such that it will not fall into water if the brackets should loosen. Check with local regulations to verify whether a GFI is required or not. The following pages are to assist in installation.

In case of damages or failures of the rail/connection, the towel rail should be returned to the manufacturer or their distributor. The warranty from the manufacturer is NOT VALID in case of improper use or installation. Product designed for use in Canada and USA only.

See page 4 for detailed installation steps.

TECHNICAL SPECIFICATIONS



TECHNICAL SPECIFICATIONS

Rev 01/08

MODEL# T-IWALL

ELECTRIC VERSION Element specifications 300W, 110V, 48" cord, UL approved. Hardwire Kit CSA-US Approved. File ref: 229718

HYDRONIC VERSION Heat output 2600 BTU. 1/2" BSPT tapings. Steel towel warmers should only be used in a closed water system, incorporating a rust inhibitor.

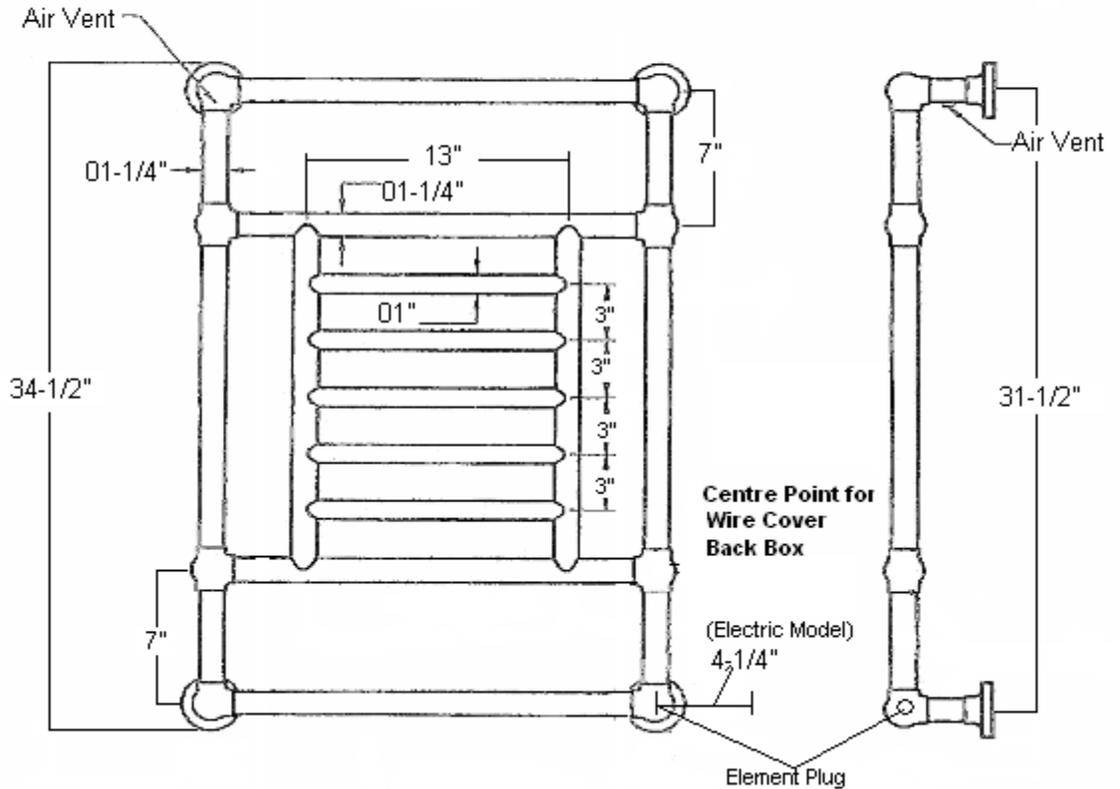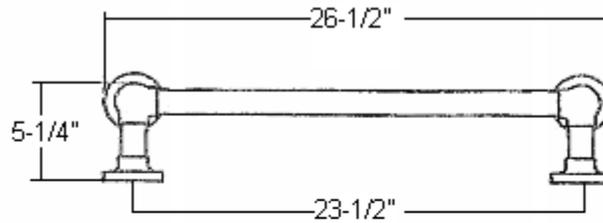

CARE & MAINTENANCE A periodic wash using warm water and a soft cloth will retain the high quality finish of your towel warmer for many years to come. **ON NO ACCOUNT** should any household bleaches, detergents, abrasive polish, steel wool or similar cleaning agents be used on this product.

WALL FIXING Towel warmer brackets must be securely fastened to either masonry, wall studs or plywood board in accordance with the fitting instructions.

PACKAGING Packaged for regular UPS type shipping.

WARRANTY Frame 5 years – Heating element 5 years.

NOTE: towel warmer **MUST** be mounted such that element cord comes out of **bottom right** of unit.

INSTALLATION STEPS

1. Check that all the installation pack contents have been received. There should be 3 items as shown below:

Installation Pack:


- 16 wood screws
- 4 wall plates
- 12 set screws
- 1 allen wrench

2. Determine location of towel warmer near an electrical outlet. The towel warmer cord is 4 ' long. **Note: where possible, locate unit so that at least one of the upper brackets is attached to a firm wall stud.**

Bracket Installation: (use diagram 1 below as a guide)

3. Determine location of wall plates ' A ' by either holding the towel warmer in desired location or by using the approximate dimensions on page 3. Attach plates using the wood screws provided.
4. Attach towel warmer to plates using the set screws ' B ' and allen wrench provided.

Diagram 1

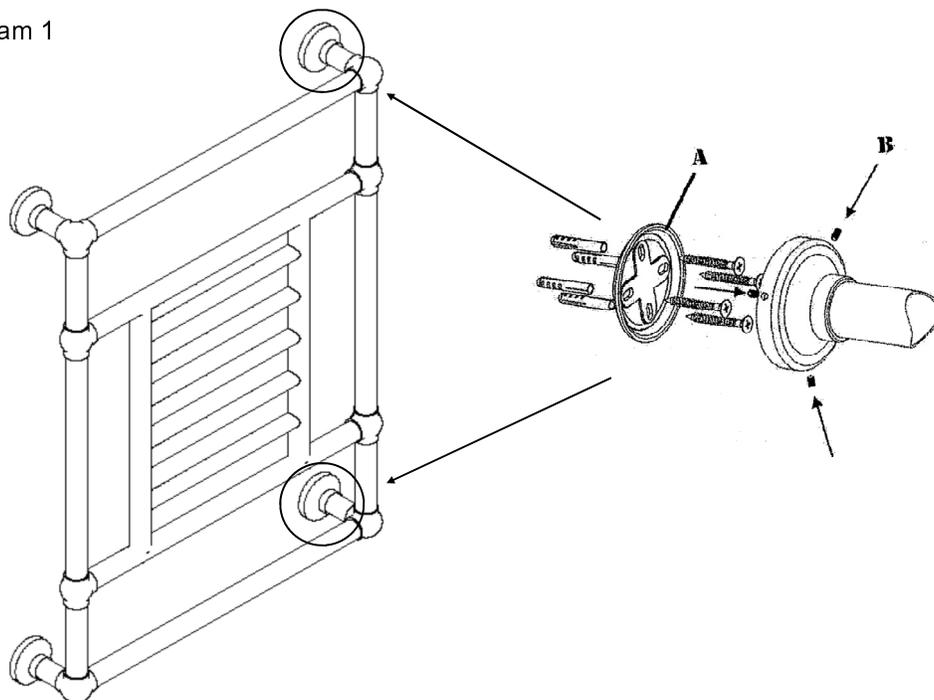

CARE & MAINTENANCE

For best results, keep the following in mind to retain the high quality finish of your *ARTOS* towel warmer:

- Use a soft, dampened sponge or cloth.
- On no account should you use an abrasive material such as a brush, scouring pad or steel wool to clean surfaces.
- Polish with a soft dry cloth

WARRANTY

This warranty covers against defective products for a period of five years. Under the warranty we will provide replacement components or products at our discretion. Damage caused by accident, misuse, abuse, improper installation, improper cleaning or alteration will void the warranty. Westover, Inc is not responsible for labor charges, installation or other incidental or consequential costs.

PLEASE REGISTER THIS PRODUCT ONLINE AT WWW.ARTOS-WESTOVER.COM

Item No: T-IWALLP-
Serial No