

## INSTALL HANDLES

## **CROSS HANDLE**

- Push ADAPTER (2) into HANDLE BASE (3) in a way that the male square on the ADAPTER (2) fits in the female 8 point star of the HANDLE (4).
- Turn HANDLE STEM (1) to the off position. Push HANDLE BASE (3), ADAPTER (2) and HANDLE (4) onto VALVE STEM (1).
- Tighten HANDLE SCREW (5).
- Push INDEX CAP (6) in top of HANDLE (4).

## LEVER HANDLE

- Push ADAPTER (2) into LEVER HANDLE BASE (7) in a way that the male square on the ADAPTER (2) fits in the female star of the HANDLE BASE (7).
- Turn HANDLE STEM (1) to the off position. Push LEVER HANDLE BASE (7) and ADAPTER (2) onto VALVE STEM (1).
- Tighten HANDLE SCREW (6).
  Check alignment, if not satisfactory aligned;
  - Push out ADAPTER (2) carefully.
  - Turn ADAPTER (2) either 45° or 90° so that male square on ADAPTER (2) catches different female square in LEVER HANDLE BASE (7).
- Assemble and tighten HANDLE SCREW (6). Push INDEX CAP (8) in top of LEVER HANDLE BASE (7).





