

94XXD- / 94XXS-Decorative Grab Bar & Grab Bar with Slide

Installation Instructions

CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Read all instructions prior to installation and provide copy of instructions to consumer.


PREPARING WALL FOR GRAB BAR

IMPORTANT: It is the **RESPONSIBILITY** of the **INSTALLER** to provide a proper cross BRACE (1) to provide adequate support for the grab bar.

 Securely mount a suitable cross BRACE (1) with the front surface flush between studs in wall to provide proper support for grab bar

NOTE: Mount BRACE (1) depending on horizontal or vertical installation of grab bar as shown.

• Take note of where the BRACE (1) is mounted once the tile or drywall are in place

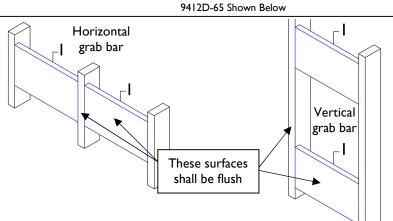



2


POSITIONING GRAB BAR

IMPORTANT: Grab BAR (2) must be installed on finished wall (e.g. tile or drywall).

- Wall MOUNT (2b) holes must be rotated in plus pattern
 "+" on grab BAR (2)
- Ensure grab BAR (2) is positioned over cross BRACE (1) or studs
- Place the grab BAR (2) to its desired location on the finished wall, using a level as necessary
- Mark the first 2 visible holes when viewing from the front
- Use the hex KEY (3) and loosen the SETSCREW (2c) to remove the wall MOUNT (2b) from the grab BAR (2)
- Line up the first 2 marked holes for each wall MOUNT
 (2b) and mark the last 2 holes

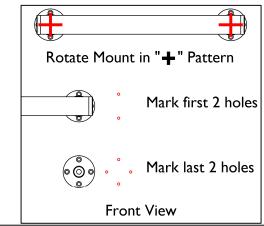

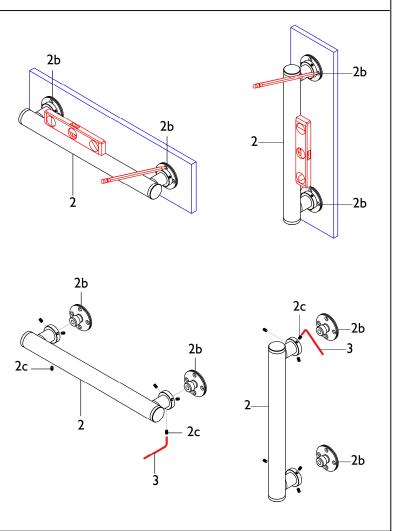

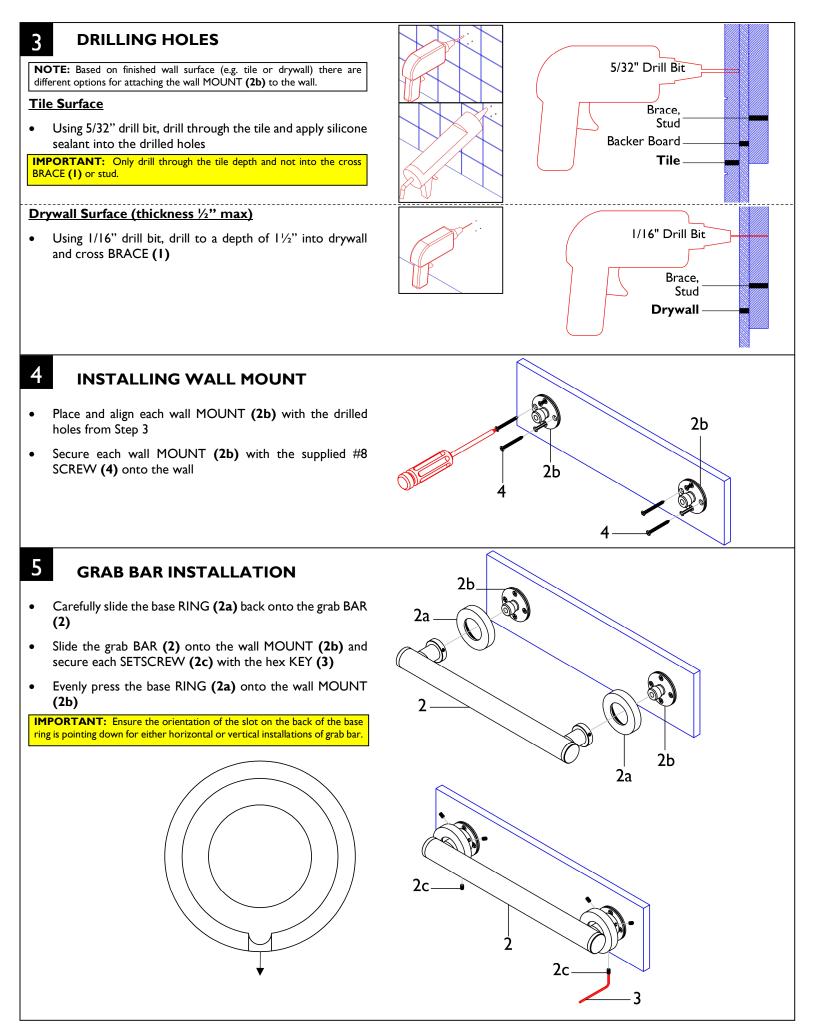


The following steps are for Models: 94XXS-XX, Grab Bar with Slide products





RIGHT OR LEFT HANDED INSTALLATION

• The holder may be mounted in either a right or left handed position. This is determined at the installation stage by positioning the handle to the right or left

NOTE: If handle requires re-positioning due to contacting finished wall surface in locked position, use supplied hex KEY **(3)** to loosen SETSCREW **(4a)** on HANDLE **(4)**, remove HANDLE **(4)** from holder and reposition to desired angle.

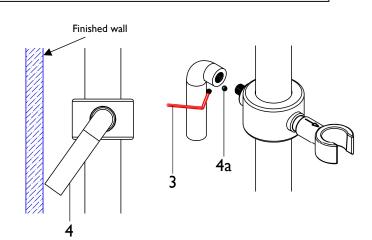

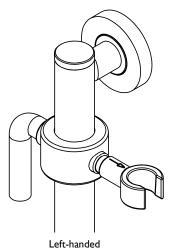

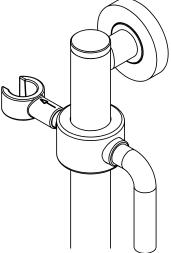

Right-handed

HOLDER OPERATION

- To adjust HOOK (5) angle, pull hook away from the body
- Rotate HOOK (5) forward or backward to desired position
- Release HOOK (5) to lock into position

NOTE: If HOOK **(5)** does not fully retract, rotate a small amount to allow to fully seat.

