



Model 99982

HunterSMART™ Wall Panel Quick Start Guide

Meet your new smart home command center.

Works with your favorite smart assistants to control all your HunterSMART and Matter-enabled devices – lights, fans, plugs, thermostats, and more – from one sleek wall panel.



3D INTERActive GUIDE

Step 1:

Scan QR code with smart phone or tablet

Step 2:

Follow on screen instructions

Step 3:

Register your product



SCAN ME

Where to Start

Inside Your Box:

- Mounting hardware
- Decorative wall plate
- Installation screws
- Quick Start Guide (this guide)

Tools Needed:

- Phillips screwdriver 
- Wire stripper (set to 10 mm) 
- Voltage tester or test pen (optional) 
- Smartphone with HunterSMART App

Pro Tip:

Take a photo of your existing wiring before you remove anything to make reconnection a breeze.

Safety First: Read Before You Begin

- Turn OFF power at the breaker before installation.
- Follow national and local electrical codes.
- Do not use with aluminum wire.
- Minimum wall box depth: 35mm.
- If your wall box has no neutral wire, call a licensed electrician.

This product conforms to UL standard 1917.

Input: 100-240V, 50/60Hz, 5A MAX

Max load ratings: Single 200W; Total 400W

Wireless protocol: Wi-Fi, BLE



If you're not comfortable with wiring, we recommend professional installation.

Tips

- Wi-Fi is required for setup through the HunterSMART app.
- The panel also acts as a Matter controller, no hub needed.
- If your internet is down, you can still control devices locally over your Wi-Fi network.
- Updates happen automatically through the app.

Troubleshooting

- Panel not responding? Separate the touchscreen from the power supply, wait 10 seconds, and reattach to restart.
- Need to reset? Swipe down on the panel, select Settings > Devices & system > Restore factory.
- Weak Wi-Fi? Move your router closer or use Ethernet for stronger performance.
- Selling your home? Decommission the panel in the HunterSMART App.

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm during normal operation.

ISED Notice

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF Exposure Statement

This device complies with ISED RSS-102 RF exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the IC RSS-102 RF exposure limits, human proximity to the antenna shall not be less than 20cm during normal operation.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la CNR-102 définies pour un environnement non contrôlé. Afin d'éviter la possibilité de dépasser les limites d'exposition aux fréquences radio de la CNR-102, la proximité humaine à l'antenne ne doit pas être inférieure à 20 cm pendant le fonctionnement normal.

The device is restricted to indoor use only when operating in the 5150 to 5250 MHz frequency range.

L'appareil est réservé à l'intérieur seulement lorsqu'il fonctionne dans la gamme de fréquences 5150 à 5250 MHz

Install in 5 Easy Steps

1 Remove Your Old Switch(es)

- Turn power OFF at the circuit breaker.
- Remove the switch plate and old switch(es).

2 Prepare the Wiring

- Uncap the wire connectors and gently pull wires forward. Take note of which wires are Live (L), Neutral (N), and Ground (G).
- Straighten wire ends and strip 10mm of insulation if needed.

3 Connect the HunterSMART Wall Panel


 
- Separate the power supply from the touchscreen by pulling apart.
- Connect Live (L) to house Live wire.
- Connect Neutral (N) to house Neutral wire.
- Optional: Connect Load 1 and/or Load 2 if controlling wired devices.
- Optional: Connect ethernet cable.
- Tighten all terminals with a screwdriver.

4 Secure the Panel

- Align arrow on the power supply upward toward ceiling and use included screws to secure firmly.
- Snap the wall panel touchscreen into place evenly across the face.



5 Power Up

- Restore power at the circuit breaker.
- The panel will light up and begin initializing.
- Proceed to connect to HunterSMART.

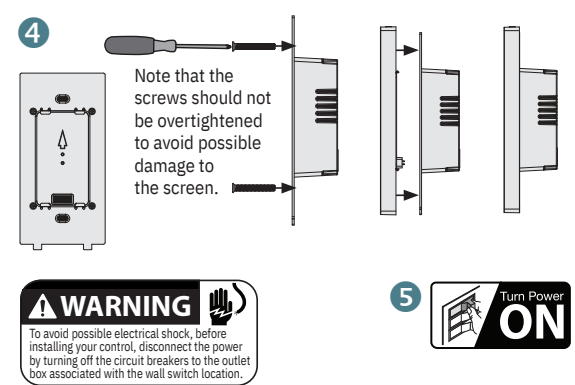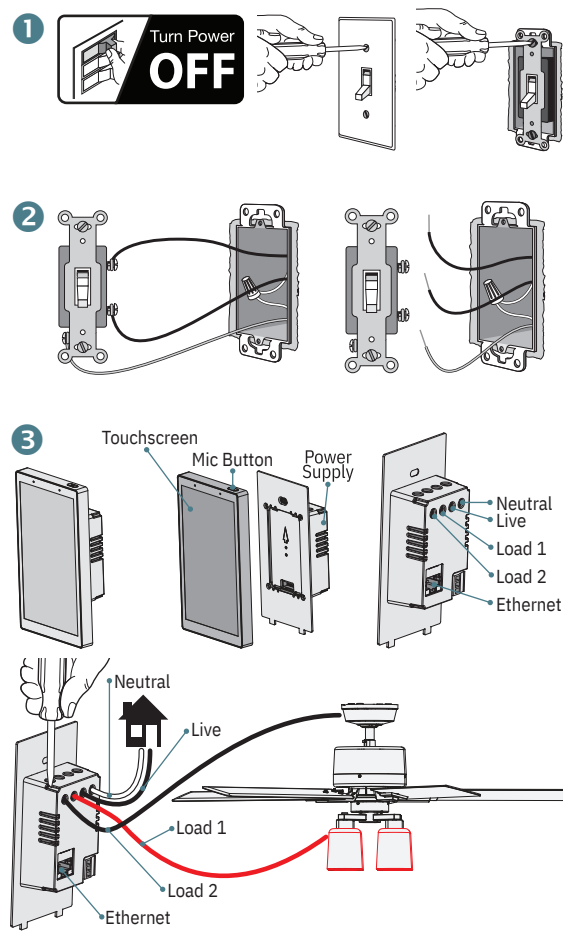

Connect to HunterSMART™

  After completing installation and powering your panel, open the HunterSMART app or download from the App Store or Google Play.

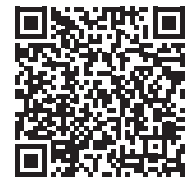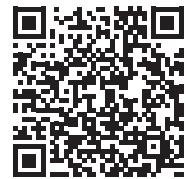

- In the app, select add device, then follow the on-screen prompts in the app.
- When prompted, scan the QR code displayed on your panel to connect.

Warranty

We've Got You Covered

1-Year Limited Warranty

The Hunter Fan Company makes the following limited warranty to the original purchaser of the Control ("Control"): Your Control is warranted to be free from defects in material and workmanship for a period of one year from the date of sale. If the Control malfunctions or fails within the warranty period due to a defect in material or workmanship we will replace it free of charge. IF THE ORIGINAL PURCHASER CEASES TO OWN THE CONTROL, THIS WARRANTY AND ANY IMPLIED WARRANTY, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE VOIDED. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THE DURATION OF ANY IMPLIED WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IN RESPECT TO ANY CONTROL, IS EXPRESSLY LIMITED TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE FOR SUCH CONTROL. This warranty excludes malfunctions or failures which were caused by repairs by persons not authorized by us, mishandling, improper installation, modifications, or damage to the Control while in your possession, or unreasonable use. To obtain a replacement, return your Control postage prepaid along with proof of purchase to Hunter Fan Company Service Department at 7130 Goodlett Farms Pkwy., Memphis, TN 38016. IN NO EVENT SHALL HUNTER FAN COMPANY BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For full details or support, [visit support.hunterfan.com](https://support.hunterfan.com).