

# TECHNICAL SPECIFICATION SHEET




ph 1.306.757.8930  
fx 1 306 757 8940


## Master Thermostat / Slave Unit Installation

Master thermostats/ slave units required	Conditions:
<input type="checkbox"/> X T5301 12VDC Master Thermostat	<ul style="list-style-type: none"> <li>The master thermostat can control up to 10 slave units.</li> <li>The slave units can operate on different voltages (120/240V).</li> <li>Each slave unit can control a different zone.</li> </ul>
<input type="checkbox"/> X T5302 110V Slave Unit	<ul style="list-style-type: none"> <li>All electrical work must be completed in compliance with the Canadian electrical code, the national building code and any local amendments.</li> <li>Installation of all in-floor heating components must be completed in compliance with the cosyfloor installation guide.</li> </ul>
<input type="checkbox"/> X T5303 220V Slave Unit	<ul style="list-style-type: none"> <li>Please check all heatmat ratings on-site before proceeding with installation.</li> <li>A 3-wire 20 AWG cable is recommended to connect the Master thermostats and slave units.</li> </ul>

### INSTALLATION DIAGRAM

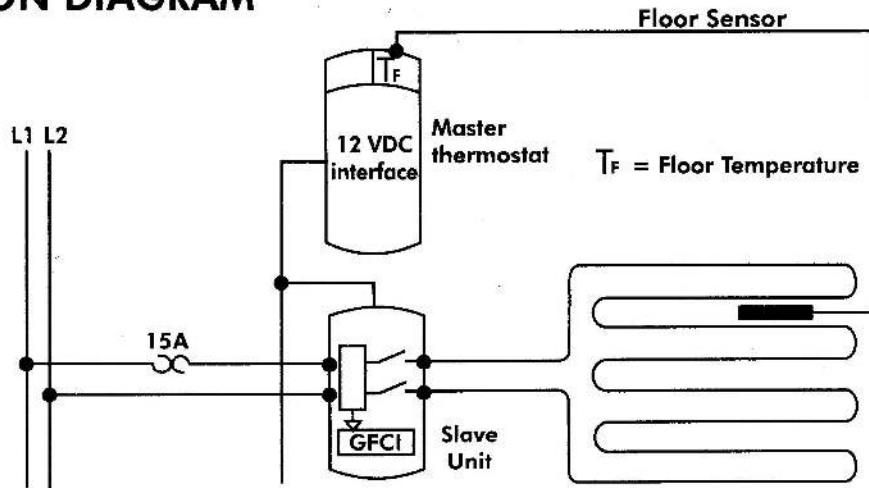

### WIRING DIAGRAM

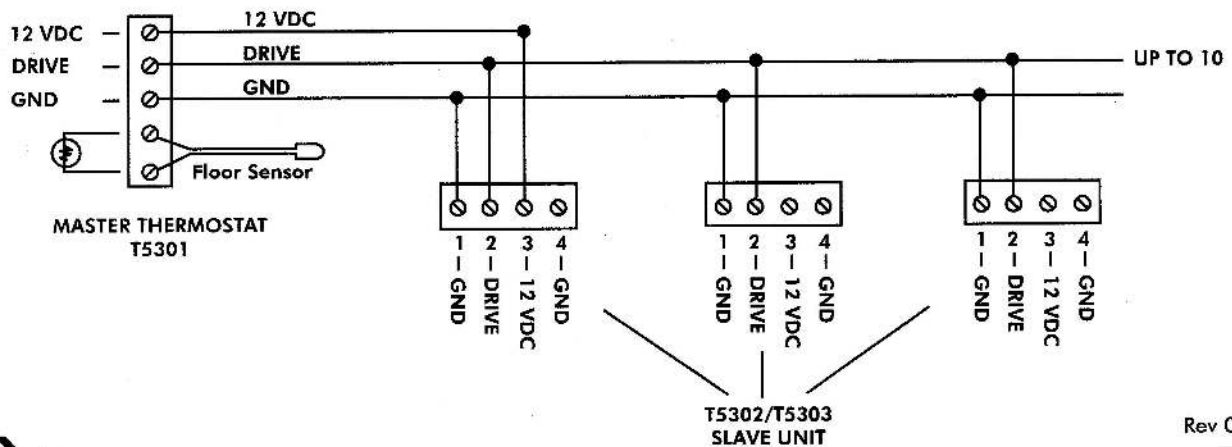

Rev 02/07

