

 
 
 


Exhilarating by Design

Volkano Erupt Soap Dish Holder

Installation Guide

Code: V1513, V1514, V1515

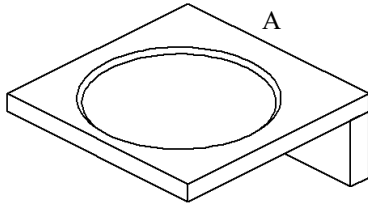

| Parts Included | QTY |
|----------------------|-----|
| A - Soap Dish Holder | 1 |
| B - Screw | 2 |
| C - Set Screw | 1 |
| D - Allen Key | 1 |
| E - Bracket | 1 |

| Model # | Description | Finish | Weight (lb) | WxHxD (mm) | WxHxD (Inches) | Metal Type |
|---------|------------------------|----------------|-------------|----------------|----------------|------------|
| V1513 | Erupt Soap Dish Holder | Chrome | 1.8 | 100 x 30 x 100 | 4 x 1.1 x 4 | Brass |
| V1514 | Erupt Soap Dish Holder | Brushed Nickel | 1.8 | 100 x 30 x 100 | 4 x 1.1 x 4 | Brass |
| V1515 | Erupt Soap Dish Holder | Matte Black | 1.8 | 100 x 30 x 100 | 4 x 1.1 x 4 | Brass |

Warranty: 2 Years

Care & Maintenance: A periodic wash using warm water and a soft cloth will retain the high quality finish of your Volkano product for many years to come. ON NO ACCOUNT should any household bleaches, detergents, abrasive polishes, steel wool or other cleaning agents be used on this item.

