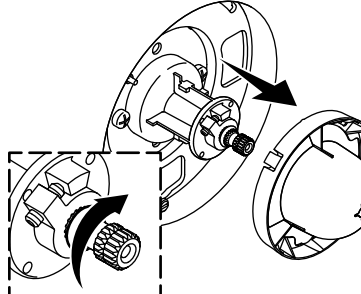
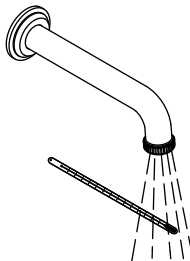
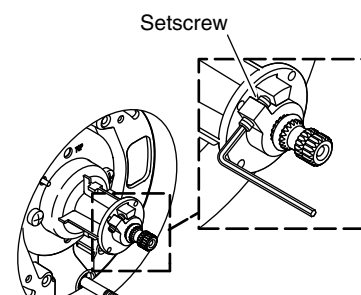
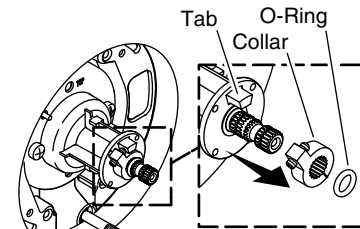
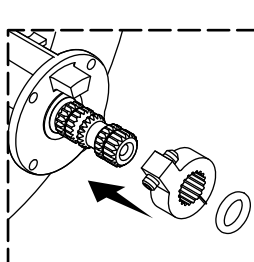
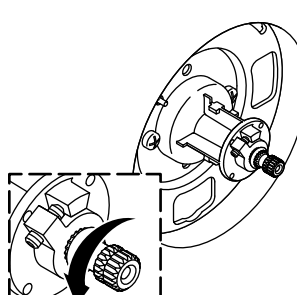
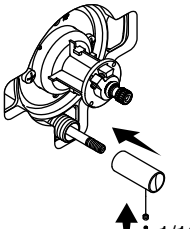
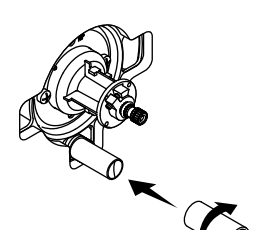
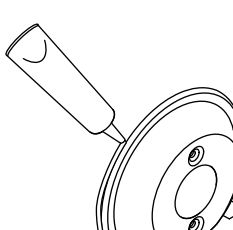
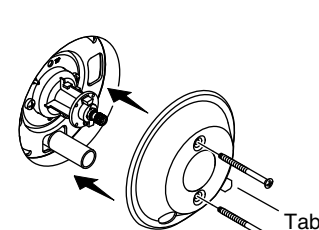
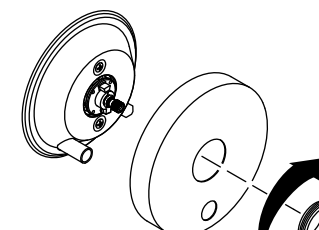
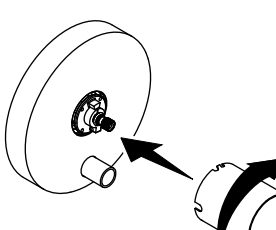
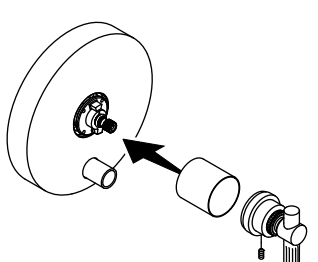


<p>Record your model number.</p>	<p>⚠ WARNING: Risk of scalding. High water temperature can cause severe burns. Set the water temperature at or below 120°F (49°C) following the adjustment procedure in the valve Installation and Care Guide.</p>	<p>Important Information Follow all local plumbing and building codes.</p>	<p>1 Remove the plaster guard. Turn on the water.</p> 	<p>2 Check the maximum water temperature. Refer to the next steps for minor or major temperature adjustments.</p> 
<p>Minor Temperature Change: Adjust the setscrew and recheck the temperature.</p> 	<p>Major Temperature Change: Remove the O-ring and collar. Turn the valve stem and recheck the temperature.</p> 	<p>Reinstall the O-ring and collar with the setscrew against the tab.</p> 	<p>Turn off the water.</p> 	<p>3 Install the button and secure with the setscrew.</p> 
<p>4 Install the guide.</p> 	<p>5 Tiled Wall Installations Only: Apply sealant to the back of the seal plate.</p> 	<p>6 Break off the tab. Install the seal plate.</p> 	<p>7 Install the faceplate. If the collar does not engage, loosen the seal plate screws.</p> 	<p>8 Tighten the collar with the notched tool.</p> 
<p>9 Install the sleeve and handle. Secure with the setscrew.</p> 				

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.