

# TUBING CUTTER COUPE-TUYAU CORTADOR DE TUBO

1/8" to 5/8" o.d. / 3 mm à 16 mm / 3 mm a 16 mm

1. Place tubing between rollers and cutter wheel ❶.
2. Rotate wheel 360° around tubing.
3. Continue to tighten knob slightly and rotate.

- 
1. Placer le tube entre les rouleaux et le couteau rotatif ❶.
  2. Tourner le couteau 360° autour du tube.
  3. Continuer de serrer légèrement le bouton et tourner.

- 
1. Coloque el tubo entre los rodillos y la rueda del cortador ❶.
  2. Gire la rueda 360° alrededor del tubo.
  3. Siga apretando ligeramente la perilla y continúe girando.

