


# Retractable Clothesline

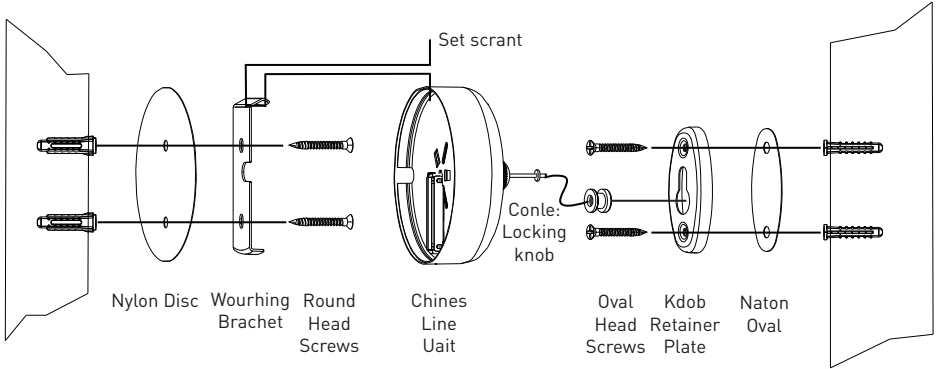

1. Select location for clothesline unit and for knob retainer plate on opposite wall.
2. Attach mounting bracket in vertical position to finish wall with screws furnished placing white nylon disc between wall and mounting bracket.
3. Attach retainer plate on opposite wall and placing white nylon oval between wall and retainer plate so the top of retainer plate is at same height from floor as top of mounting bracket. The cord will then be level when in use.
4. Place set screw at top of mounting bracket and place unit on mounting bracket correctly.
5. Tighten set screw to secure unit to mounting bracket.

## OPERATION

Pull out clothesline and hook cord knob into retainer plate on opposite wall. Turn center locking knob clockwise to keep strain off cord when in use. Nylon cord retracts by spring actuated reel, when center Locking knob is released and clothes line is removed from retainer plate.