Rohl.

www.rohlhome.com



UNIVERSAL 1/2" THERMOSTATIC ROUGH VALVE WITH INTEGRATED THREE OUTLET DEDICATED DIVERTER

ROHL Spa Shower

R1053BD

FEATURES

- Top handle diverts the water three ways
- CALGreen compliant.
- Service stops included
- Primary screens at the cartridge
- Temperature control with integrated three outlet diverter; factory setting at 100°F
- Cast brass construction
- Bottom outlet for tub filler only. A separate flow control valve and/or trim required for this application.
- Back of valve to finished wall 3 1/2" min., 5 1/2" max.
- Flow rate 6.7 GPM at 60 PSI
- 1/2" male inlets, 3 x 1/2" male outlets
- Complete with mud guard for installation
- If PEX is utilized, oversize the supply line to 3/4" for full flow capacity
- If only two outlets are being utilized,
- cap is included to close "dead" outlet
- Bottom control sets temperature
- Extension kit included, may be cut to length required
- Must order trim to complete
- Shared function cartridge available, order 11417

7 3/4" CUT OUT FOR TILE 3"MAX. x 6 1/2"MAX. 3"MAX. x 6 1/2"MAX.

ON


(1:30)

OFF (3:30)

120°

3 3/8

· Rough only

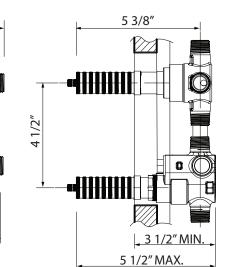

The R1053BD valve is Calgreen compatible The operation is dedicated and only one outlet will operate at a time.

There are 3 on positions and 3 off positions. It is suggested the 12 O'clock position be the off position.

Installer will need to set:

- The on positions will then be 10:30, 6:00 and 1:30
- The off positions will be 8:30, 3:30 and 12:00

• Turn counterclockwise for HOT

Turn clockwise for COLD

ON (6:00)

OFF (12:00)

ON (10:30)

OFF

(8:30)

80°

COLOR/FINISH

Limited Lifetime


WARRANTY




INSTALLATION INSTRUCTIONS

R1050BD- SINGLE FUNCTION OPERATION 1/2" THERMOSTATIC VALVE R1053BD- SINGLE FUNCTION OPERATION 1/2" THERMOSTATIC VALVE R1055BD- SHARED FUNCTION OPERATION 1/2" THERMOSTATIC VALVE For use with shower heads rated at 1.3 gpm - 4.9 L/min or higher WE RECOMMEND THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL

IMPORTANT: Thoroughly read instructions before installation.

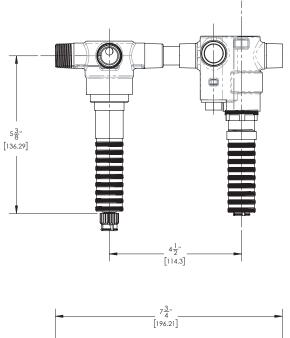

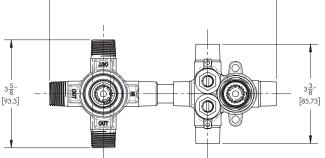



www.rohlhome.com

INSTALLATION INSTRUCTIONS

The valve is designed with two outlets for ease of installation, but are not intended to be used concurrently with each other. Using both outlets will reduce the performance of the valve.

WARNING: IF THIS VALVE IS INSTALLED UPSIDE-DOWN A REVERSE CARTRIDGE IS NOT AVAILABLE, CONSEQUENTLY, VALVE MUST BE REMOVED AND REINSTALLED RIGHT-SIDE UP.

HOT SUPPLY HOT SUPPLY CONNECTION VALVE MOUNING TABS (2)

 $\label{eq:value} \begin{array}{l} \mbox{ValVE SPECIFICATIONS} \\ \mbox{Female 1/2" NPT inlets and outlets} \\ \mbox{Factary temperature setting = 100°F [38°C]} \\ \mbox{Temperature norse 52° to 118°F [11°-48°C]} \\ \mbox{Temperature cold supply = 149° to 180°F [65°-82°C]} \\ \mbox{Temperature cold supply = 50° to 72°F [10°-22°C]} \\ \mbox{Temperature stability = $32°F [0°C]} \end{array}$

Recommended supply pressure = 20 to 80 psi (1,38-5,52 bar) Recommended hot water supply temperature = 120° to 140° F (48°-60°C)

Operating pressures between hot and cold supplies should vary no more than 30 psi (2,07 bar). If water pressure exceeds 70 psi (4,83 bar), install a pressure reducing valve.

Ensure the mixing valve is in compliance with local plumbing codes when setting the temperature on the water heater.


It is the installer's responsibility to verify correct temperature setting to prevent any risk of scalding prior to consumer use. MAINTENANCE (continued)

CHECK VALVES Shut off water supply at main or upstream from valve body.

Remove check valve with a 5/8" (16mm) socket wrench from the body.

Clean check valve by rinsing it under running water to remove any possible debris.

Wipe check valve and housing seat clean and apply a thin film of NON-PETROLEUM GREASE to o-rings. NOTE: Do NOT use oil based lubricants as this may cause o-rings to dry out over time and crack.

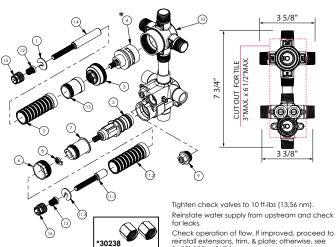

*30238 re CAPS TO CLOSE UNUSED P/ OUTLETS INCLUDED ne

SE UNUSEI JDED	D	PARTS		KOUT for any replacement parts	
	QTY.	ITEM	PART	DESCRIPTION	QTY.
	1	10	2-132	BRAZED THERMO W/ DIVERTER VALVE	1

ITEM	PART	DESCRIPTION		ITEM	PART	DESCRIPTION	QTY.
1	10333	C-WASHER STABILIZER		10	2-132	BRAZED THERMO W/ DIVERTER VALVE	1
2	10334	M24X1.0 EXTENSION		11	3-056	EXTENSION KIT, M24 - 20PT - STABILIZER	1
3	10349	NUT CAP FOR 3WAY DIVERTER		11.1	10332	20 POINT BROACH EXTENSION	1
4a	11297	CARTRIDGE, DIVERTER 3 POSITION NON-SHARED (R1050BD)		11.2	10334	M24X1.0 EXTENSION	1
4b	11417	CARTRIDGE, SHARED DIVERTER (R1055BD)		11.3	10333	C-WASHER STABILIZER	1
		CARTRIDGE VALVE, MINI THERM.		12	30230	STEM ADAPTOR FOR PERRIN & ROWE	2
5	11573	THERMOSTAR S18 TYP 2	1			EXTENSION SLEEVE.	
6	11318	RETAINER NUT FOR THERM CARTRIDGE		13	30232	M24 INT./EXT. THERM W/ DIVERTER	1
7	11319	CARTRIDGE RETAINER SLEEVE, THERM		14	30233	20 POINT BROACH EXTENSION	1
8	11320	SAFETY AND MECHANICAL STOP		15	30238	COUNTRY ADAPTOR	2
9	2-130	SHUTOFF NUT, MINI THERMO	2				

Authentic Luxury for Kitchen and Bath®

www.rohlhome.com

INSTALLATION INSTRUCTIONS

MAINTENANCE

THERMOSTATIC CARTRIDGE Carefully remove the trim and plate and place in a safe location for the time being.

Use a flat head screwdriver to shut off the water supply to the cartridge by turning the temporary shutoff screws clockwise until screw stops. Ensure to close both the hot and cold sides of the water supplies.

Remove extensions to gain access to the cartridge nut. Unscrew the cartridge nut using a 11/16" adjustable wrench, if possible

Gently pull the cartridge out of the housing body (rotating cartridge while pulling may assist in removal)

Clean the cartridge by rinsing it under running water to remove any possible debris.

Wipe cartridge and rough housing clean and apply a thin film of NON-PETROLEUM GREASE to o-rings on cartridae

NOTE: Do NOT use oil based lubricants as this may cause the o-rings to dry out over time and crack.

3 5/8'

ľο

3 3/8

 
CUT OUT FOR TILE 3"MAX. × 6 1/2"MAX.

7 3/4"

Carefully install the cartridge back into the housing body and tighten nut to 10 ft-lbs (13,56 nm).

ATTENTION: Ensure the INDICATOR NOTCH on cartridge and GREEN LINE on stem are orientated at the 12 O'Clock position. The Temperature stop must be in the 6 O'Clock position.

Fully open temporary shutoff screws and check for leaks Check operation of flow. If improved, proceed to reinstall extensions, trim & plate; otherwise, CHECK VALVES.




FRONT VIEW



ROUGH IN VALVE TO FRAME Once the desired location has been determined, install a cross support beam to wall studs.

Ensure to level the valve and secure to the cross support. The valve should be level horizontally, vertically, and parallel to finished wall.

Placement of valve and cross support within the wall shall be determined by the MIN/MAX limits shown on MUDGUARD. For complete detailed valve dimensions see ROUGH-IN DIMENSIONS.

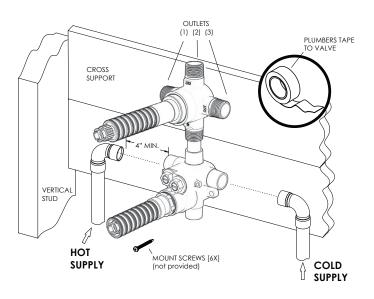

WATER CONNECTIONS

Attach OUTLET [1] to the shower head and outlets [2] and [3] to any optional devices, such as hand shower or body sprays. Any outlet not being used must be plugged.

Pre-assemble fittings before attaching to valve. Attach the "COLD" INLET to COLD SUPPLY and "HOT" INLET to HOT SUPPLY using copper supply lines.

IMPORTANT: Thoroughly flush supply lines to remove any debris prior to installation to prevent damage and malfunction of thermostatic cartridge.

ATTENTION: Use plumbers tape or thread sealant to all threaded port joints and attach to valve. All soldering/brazing of fittings shall be performed a minimum of 4" away from valve.

WARNING: DO NOT APPLY HEAT DIRECTLY TO THE VALVE AS THIS MAY DAMAGE RUBBER & PLASTIC SEALS AND WILL VOID WARRANTY.

Turn on water supplies to valve and check for leaks.




 
www.rohlhome.com

INSTALLATION INSTRUCTIONS

ROUGH IN DIMENSIONS

(All dimensions shown are to the nearest 1/16")

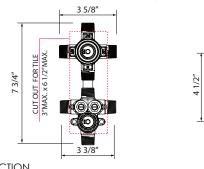




FUNCTION

The R1050BD valve is Calgreen compatible

The operation is dedicated and only one outlet will operate at a time. There are 3 on positions and 3 off positions. It is suggested the 12 O'clock position be the off position.

Installer will need to set:

The on positions will then be 10:30, 6:00 and 1:30 The off positions will be 8:30, 3:30 and 12:00

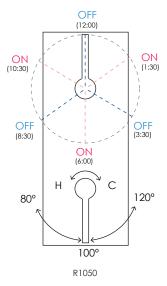

FUNCTION

The R1055BD valve has two shared positions. The operation is dedicated and only one outlet will operate at a time. There are 5 on positions and 1 off positions. It is suggested the 12 O'clock position be the off position.

Installer will need to set:

The on positions will then be 10:30, 8:30, 6:00, 3:30 and 1:30 The off positions will be 12:00

