
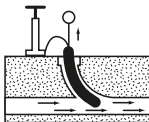
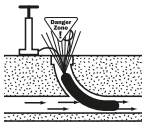
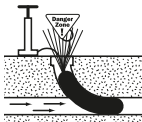


Installation Instructions

882-E Series Inflatable Test Plug

Failure to follow these instructions could result in serious personal injury or property damage

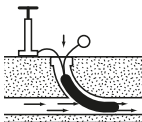

Always wear safety glasses, hardhat, and gloves.

Do NOT allow plug to protrude from pipe.

Min installation depth = 1½ times pipe diameter

Designed to temporarily seal gravity flow drainage pipes only.

Not for use with any other liquids, chemicals or gasses that are under any kind of pressure.

Must be inspected for possible damage or defects before every use. If damage is found **DO NOT USE**

Use only in the correct pipe size

Be sure drain pipe is clean and free of debris where plug is to be inserted.

Always use an inflation extension hose so the plug can be inflated and deflated from outside the danger zone.

Never remove plug until all pressure has been released.

After use, rinse plug with clean water and store in a dry area, out of sunlight.

Item Number	Pipe Size	Inflation Pressure	Max. Air Test Pressure	Max. Water Test Pressure
882-ES12	2"	40 PSIG	10 PSIG	30 FT HD
882-ES23	3"	40 PSIG	10 PSIG	30 FT HD
882-ES34	4"	35 PSIG	10 PSIG	30 FT HD
882-ES46	6"	30 PSIG	10 PSIG	30 FT HD
882-ES23	3"	45 PSIG	10 PSIG	30 FT HD
882-ES34	4"	40 PSIG	10 PSIG	30 FT HD
882-ES46	6"	30 PSIG	10 PSIG	30 FT HD