

INSTALLATION INSTRUCTIONS

For Outdoor Lantern (Rev. 09/11/2011)

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

PREPARATION (Fig. 1)

1. Shut off power at the fuse box or circuit breaker box. If necessary, remove old fixture and all mounting hardware from wall junction box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Attach the Crossbar (B) to the junction box (A) with the Junction box screws (C) (Size: #8-32N*L0.5") as shown. The side of the Crossbar marked "GND" must face out.
4. Thread the Nipple (D) part way into the center hole of the Crossbar (B).

CONNECTING THE WIRES (Fig. 2)

5. Connect the fixture wires to the junction box wires as shown in Fig.2. Making sure all wire connectors are secured and do not easily pull off with a slight tug. If your outlet has a ground wire, connect the fixture ground wire to it. If there is no Green Ground wire from the junction box, connect the Fixture Ground Wire to the Crossbar with the green Screw provided.

COMPLETING THE INSTALLATION

6. Thread Back-plate of the fixture body (E) onto Nipple (D) and secure with Cap nut (F).
7. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back-plate where it meets the wall leaving a space at bottom to allow moisture a means to escape (Fig.3).
8. Install the PL bulb (G) (included) in accordance with the fixture's specification. **(DO NOT EXCEED THE SPECIFIED WATTAGE!)** (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!).
9. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig 4.
- 10.11. This fixture is rated for a minimum start temperature of 0 degrees Fahrenheit (-17 degree Celsius).
12. This fixture is ETL Listed for Wet Location applications.

Your installation is now complete. Return the power to the junction box and test the fixture.

Note: Illustration (Fig. 1) on this manual is for installation purposes only. It may or may not be identical to the fixture purchased.

"U.S. Patent: D429,018

This product is protected by United States Federal and/or State Law, including Patent and/or Copyright laws."

© 1998 Minka Lighting, Inc.

Fig. 1

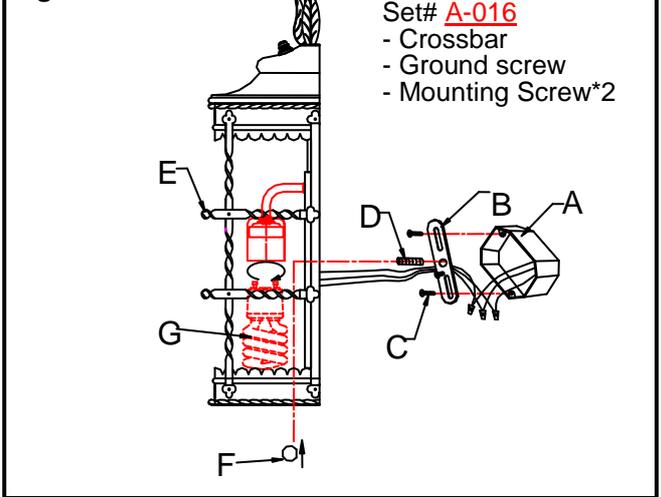


Fig. 2

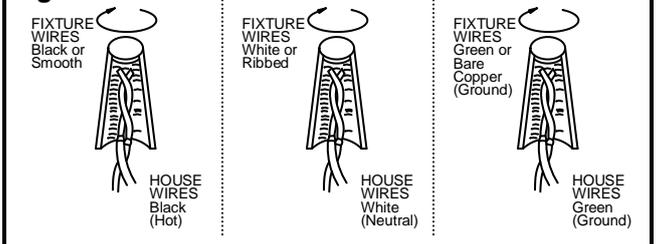


Fig. 3


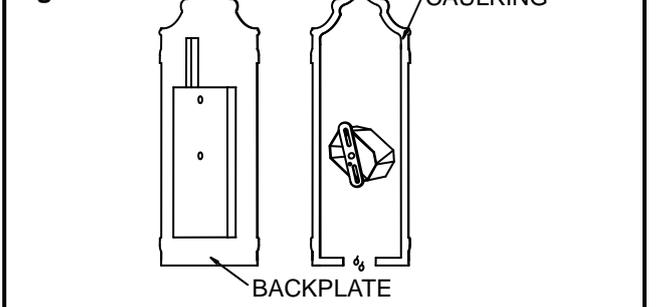


Fig. 4



LA-1043E-B

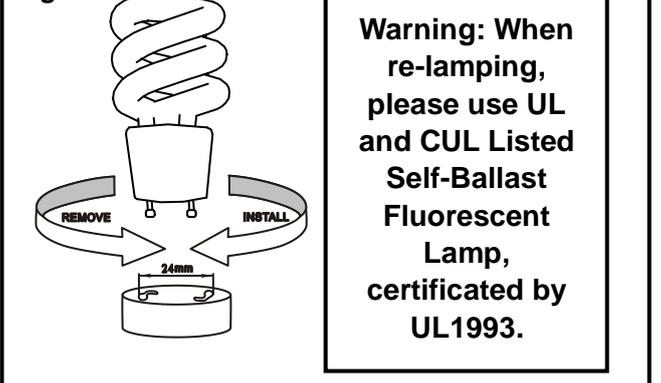

american lighting association