


ASSEMBLY INSTRUCTIONS

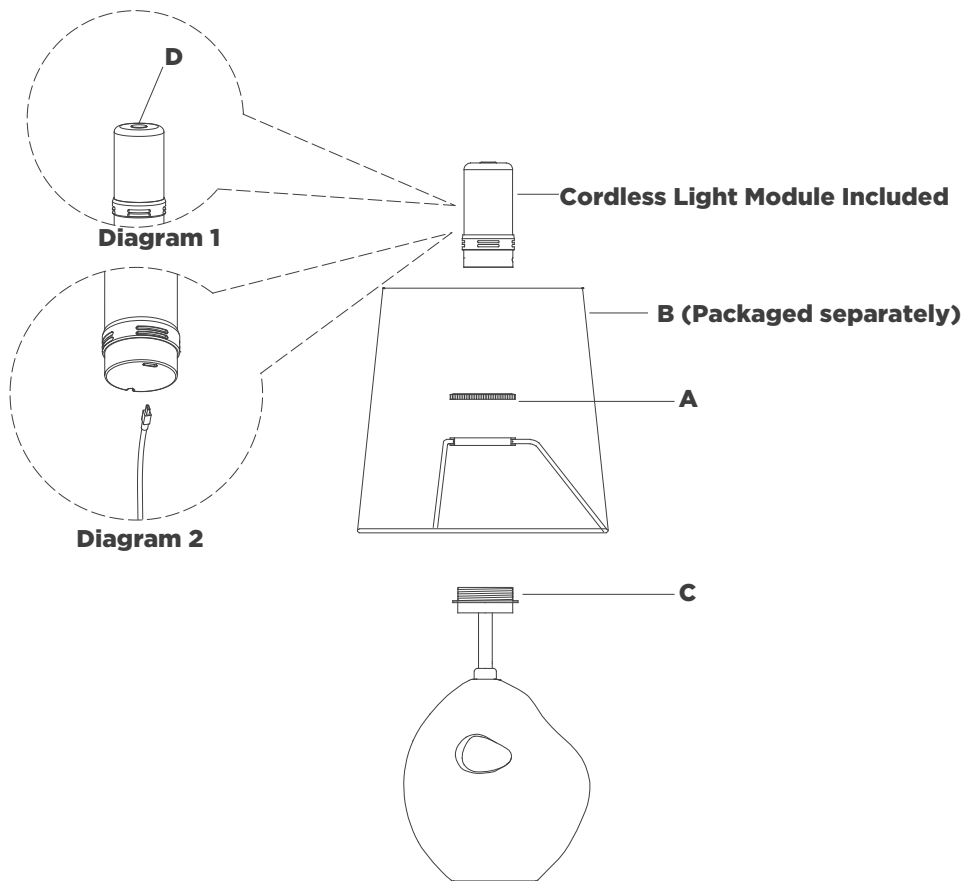

Adria 16" Cordless Table Lamp

Item # ARN3395-CL

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove threaded ring **(A)** from cordless module holder **(C)**.
3. Remove shade **(B)** from packaging and install to cordless module holder **(C)** and secure with threaded ring **(A)**.
4. Place cordless light module into cordless module holder **(C)**.
5. For best results fully charge battery before use.
6. Test the lamp.


NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.

NOTE: 10W minimum USB power source recommended.

Dimmer switch operation: Touch dimmer **(D)** to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

NOTE: For convenience, USB-C to USB-A adapter is included.

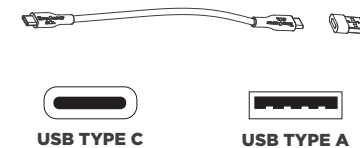

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

UNPACKING NOTICE

Adria 16" Cordless Table Lamp


Item # ARN33951

NOTICE:

Please follow instructions below to avoid possible damages caused by improper removal.

1. Open box and remove top layer of packaging.
2. Evenly lift fixture in areas indicated by arrows until clear of box as show in digram.

NOTE: Remove slowly to avoid damages.

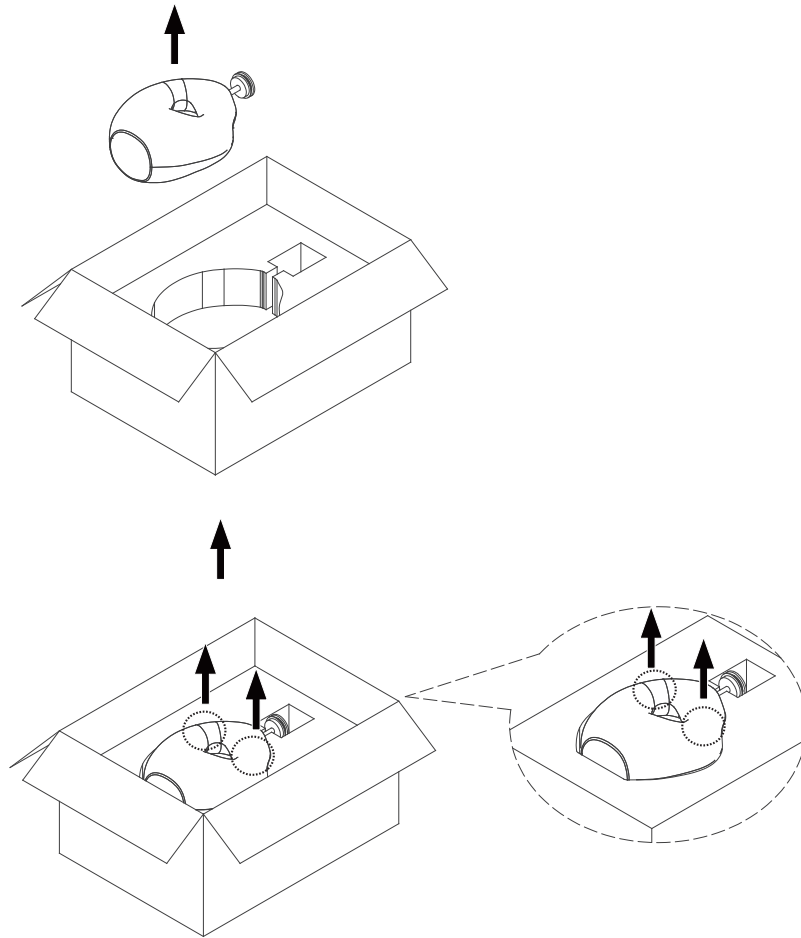

VISUAL COMFORT & CO.

