 


## ASSEMBLY INSTRUCTIONS

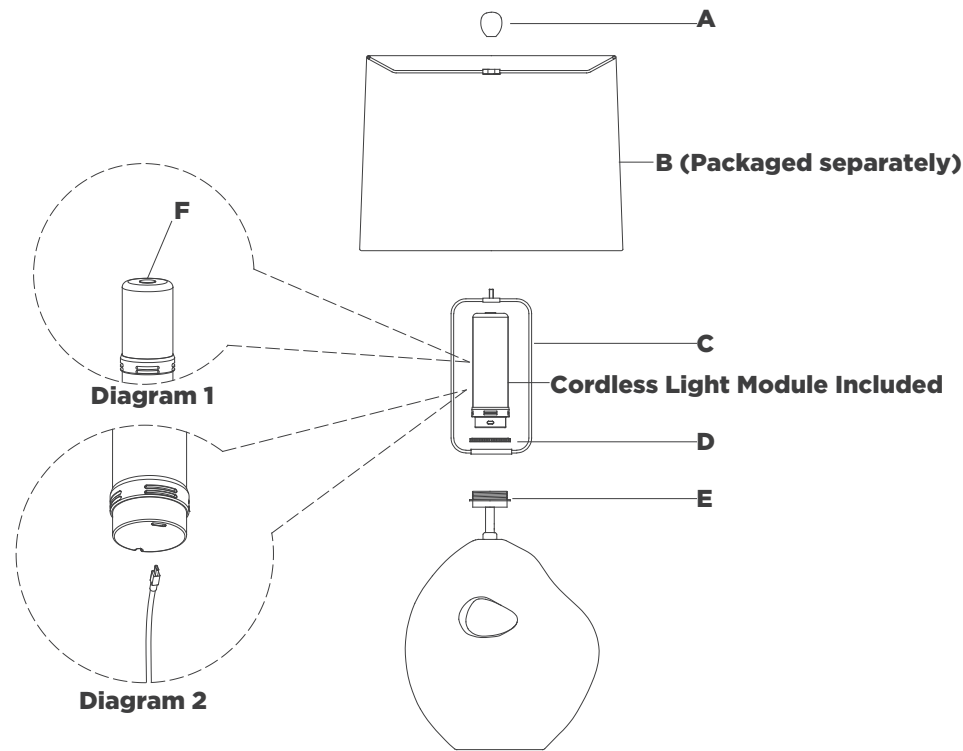

## Adria 25" Cordless Table Lamp

Item # ARN3997-CL

### NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove threaded ring **(D)** from cordless module holder **(E)**.
3. Install harp **(C)** to cordless module holder **(E)** and secure with threaded ring **(D)**.
4. Remove finial **(A)** from harp **(C)**.
5. Remove shade **(B)** from packaging and install to harp **(C)** using finial **(A)**.

**NOTE:** If shade has additional packaging, carefully cut from interior of shade to avoid damage.

6. Place cordless light module into cordless module holder **(E)**.
7. For best results fully charge battery before use.

**NOTE:** 10W minimum USB power source recommended.

8. Test the lamp.

**Dimmer switch operation:** Touch dimmer **(F)** to adjust between high, medium, low and off settings (see diagram 1).

**Charging Instructions:** Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

**NOTE:** For convenience, USB-C to USB-A adapter is included.



**CARE INSTRUCTIONS:** Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & CO.



## UNPACKING NOTICE

Adria 25" Cordless Table Lamp

 
Item # ARN39971

### NOTICE:

Please follow instructions below to avoid possible damages caused by improper removal.

1. Open box and remove top layer of packaging.
2. Evenly lift fixture in areas indicated by arrows until clear of box as show in digram.

**NOTE:** Remove slowly to avoid damages.

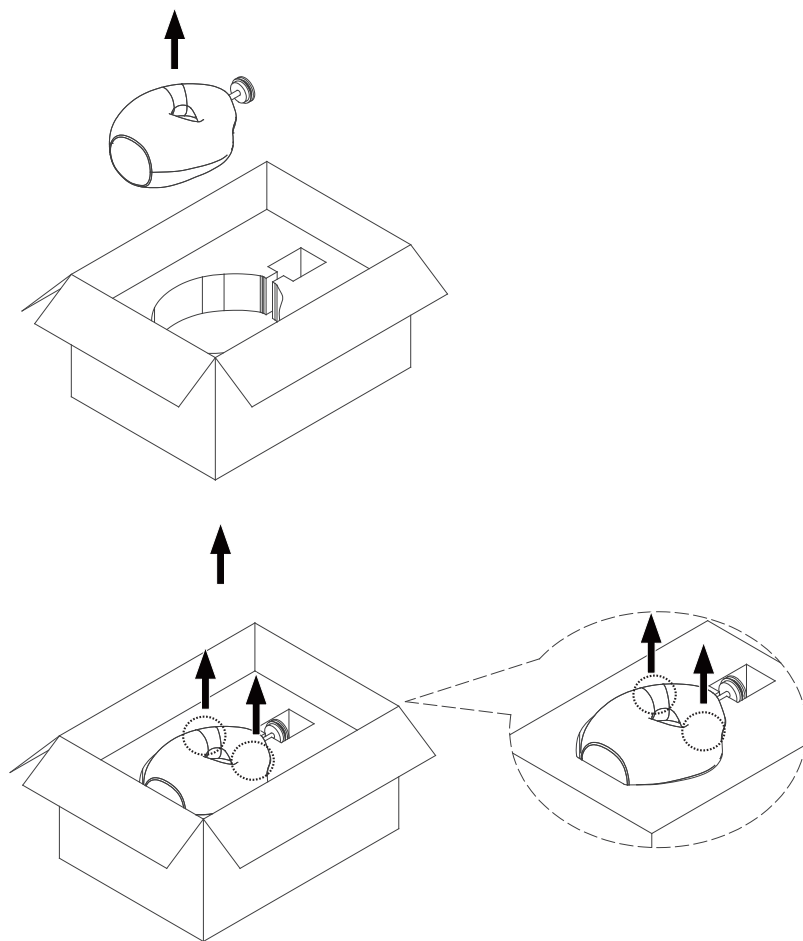

VISUAL COMFORT & CO.

