


ASSEMBLY INSTRUCTIONS

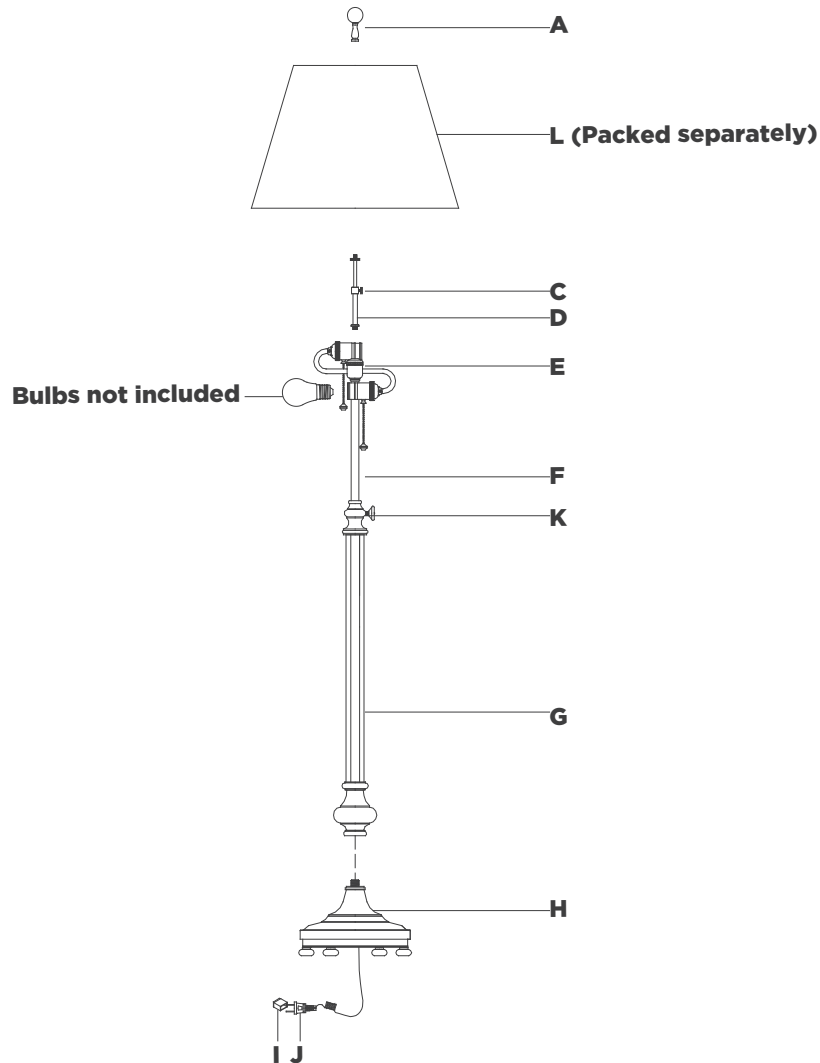

Overseas Adjustable Club Floor Lamp

Item # CHA9124

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Thread rod (G) to base (H).
3. Loosen adjustment knob (K) to adjust rod (F) to desired height, then tighten adjustment knob (K).

NOTE: Help feed electrical cord in or out of lamp for smoother adjustment.

4. Remove finial (A) from riser (D).
5. Thread riser (D) to fixture body (E).
6. Loosen adjustment knob (C) to adjust riser (D) to desired height. Tighten adjustment knob (C).
7. Remove shade (L) from packaging and install to riser (D) by securing with finial (A).

NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.

8. Install light bulbs into the sockets.
9. Remove protective cover (I) from plug (J).
10. Plug into electrical outlet and test the fixture.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.