 


ASSEMBLY INSTRUCTIONS

Portable assembly

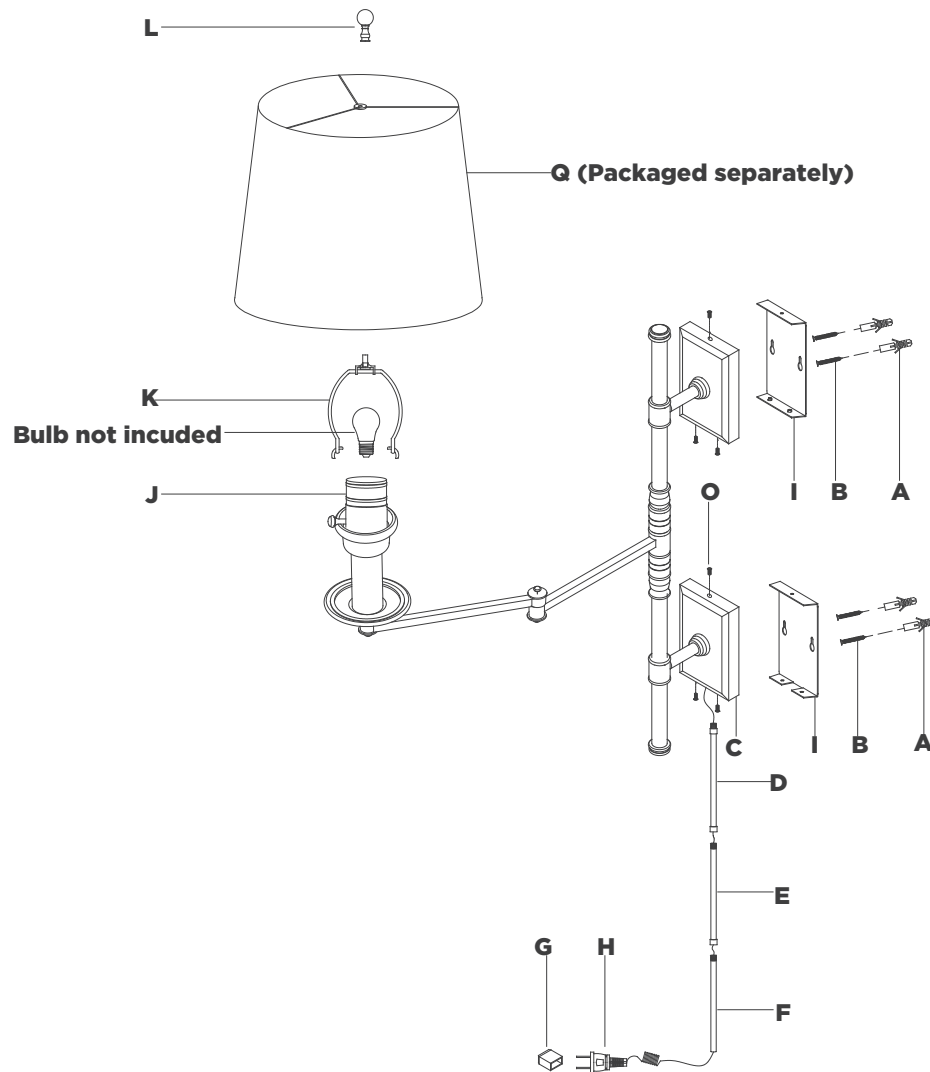

Dorchester Double Backplate Swing Arm

Item # CHD5102

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove portable mounting plates (**I**) from fixture (**C**) by removing screws (**O**).
NOTE: Carefully measure distance between mounting points for mounting plates (**I**) before moving to the next step.
3. Using portable mounting plates (**B**) as a guide, line up with the wall and mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (**A**) into the holes using a hammer.
5. Secure wood screws (**B**) to anchors (**A**), leaving 1/8" of exposed thread in order to hang fixture.
6. Install portable mounting plates (**I**) to fixture (**C**) by securing with screws (**O**).
7. Hang fixture (**C**) to wood screws (**B**).
8. Thread cord covers (**D**) & (**E**) & (**F**) to fixture (**C**).
9. Install harp (**K**) by squeezing together and inserting into the top of saddle (**J**).
10. Remove finial (**L**) from harp (**K**).
11. Remove shade (**Q**) from packaging and install to harp (**K**) using finial (**L**).

NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.

ASSEMBLY INSTRUCTIONS

 Portable assembly

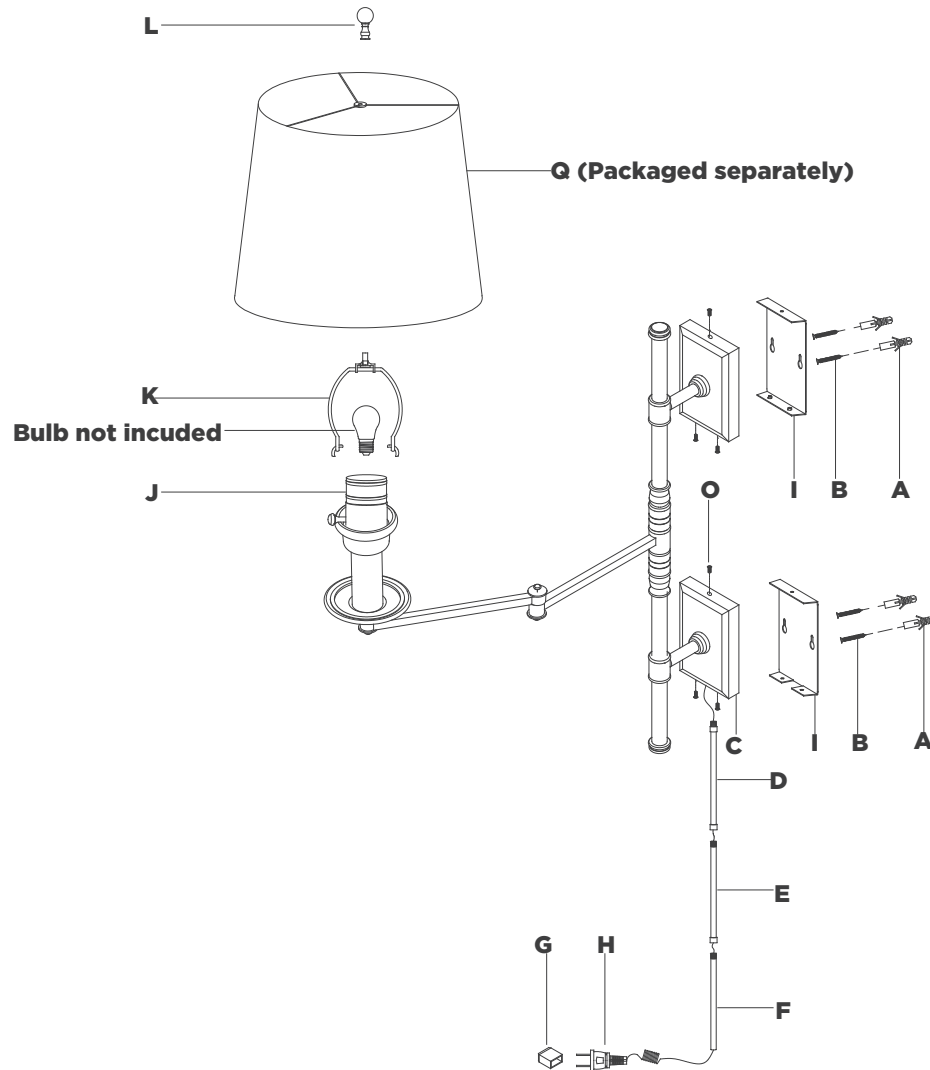

Dorchester Double Backplate Swing Arm

Item # CHD5102

NOTICE:

 
This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

12. Install light bulb into the socket.
13. Adjust fixture arms to desire angle.
14. Remove protective cover **(H)** from plug **(G)**.
15. Plug into electrical outlet and test the fixture.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

ASSEMBLY INSTRUCTIONS

Hardwire assembly

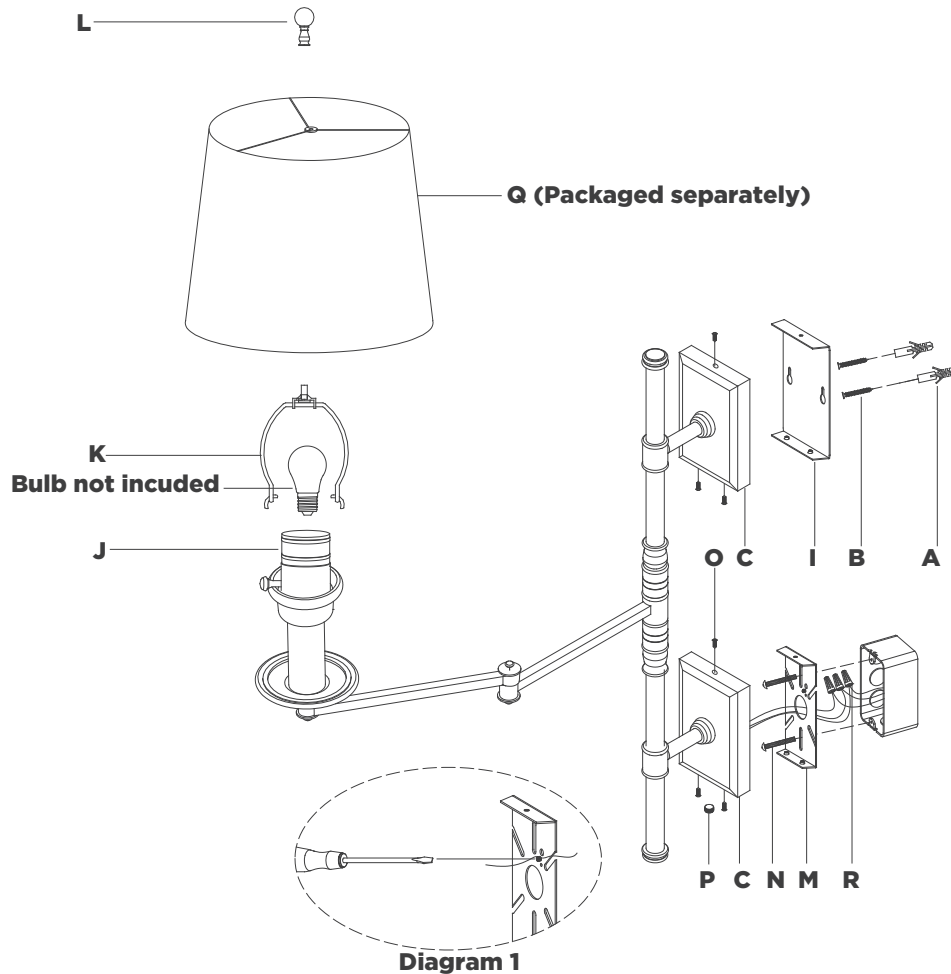

Dorchester Double Backplate Swing Arm

Item # CHD5102

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.


TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Hammer
Pencil	Drill	

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove portable mounting plates (**I**) from fixture (**C**) by removing screws (**O**).
NOTE: Carefully measure distance between mounting points for mounting plates (**I** & **M**) before moving to the next step.
3. Using portable mounting plate (**I**) as a guide, mark anchor positions.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (**A**) into the holes using hammer.
5. Install mounting plate (**M**) (located inside packaging) to the junction box and secure with mounting screws (**N**).
6. Install portable mounting plate (**I**) to wall by securing wood screws (**B**) to anchors (**A**).
7. Remove cord covers by loosening the wire nuts.
8. Insert direct wire plug (**P**) to the bottom of fixture (**C**).
9. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 1). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (**R**).
NOTE: It is imperative that the fixture is grounded.
10. Connect fixture neutral wire (white) to the supply neutral wire (usually white) using wire nut (**R**).

ASSEMBLY INSTRUCTIONS

 Hardwire assembly

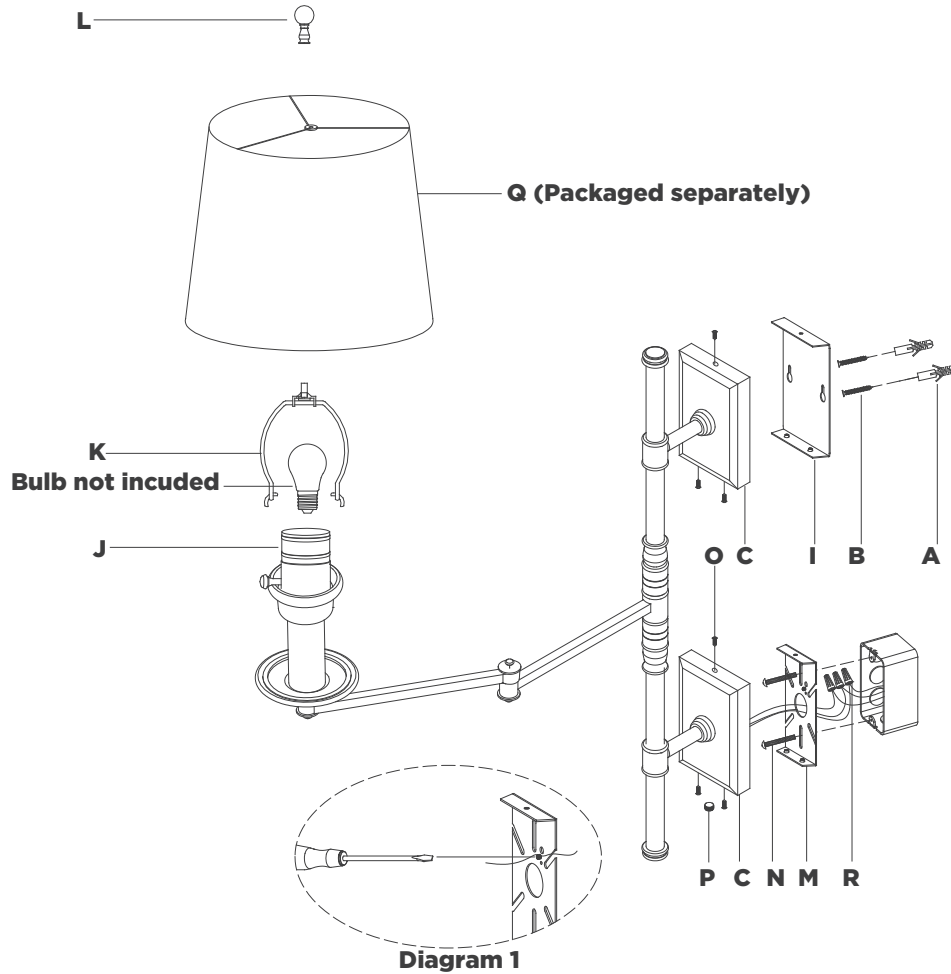

Dorchester Double Backplate Swing Arm

Item # CHD5102

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

11. Install harp (**K**) by squeezing together and inserting into the top of saddle (**J**).
 12. Remove finial (**L**) from harp (**K**).
 13. Remove shade (**Q**) from packaging and install to harp (**K**) using finial (**L**).
- NOTE:** If shade has additional packaging, carefully cut from interior of shade to avoid damage.
14. Install light bulb into the socket.
 15. Adjust fixture arms to desire angle.

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.