


ASSEMBLY INSTRUCTIONS

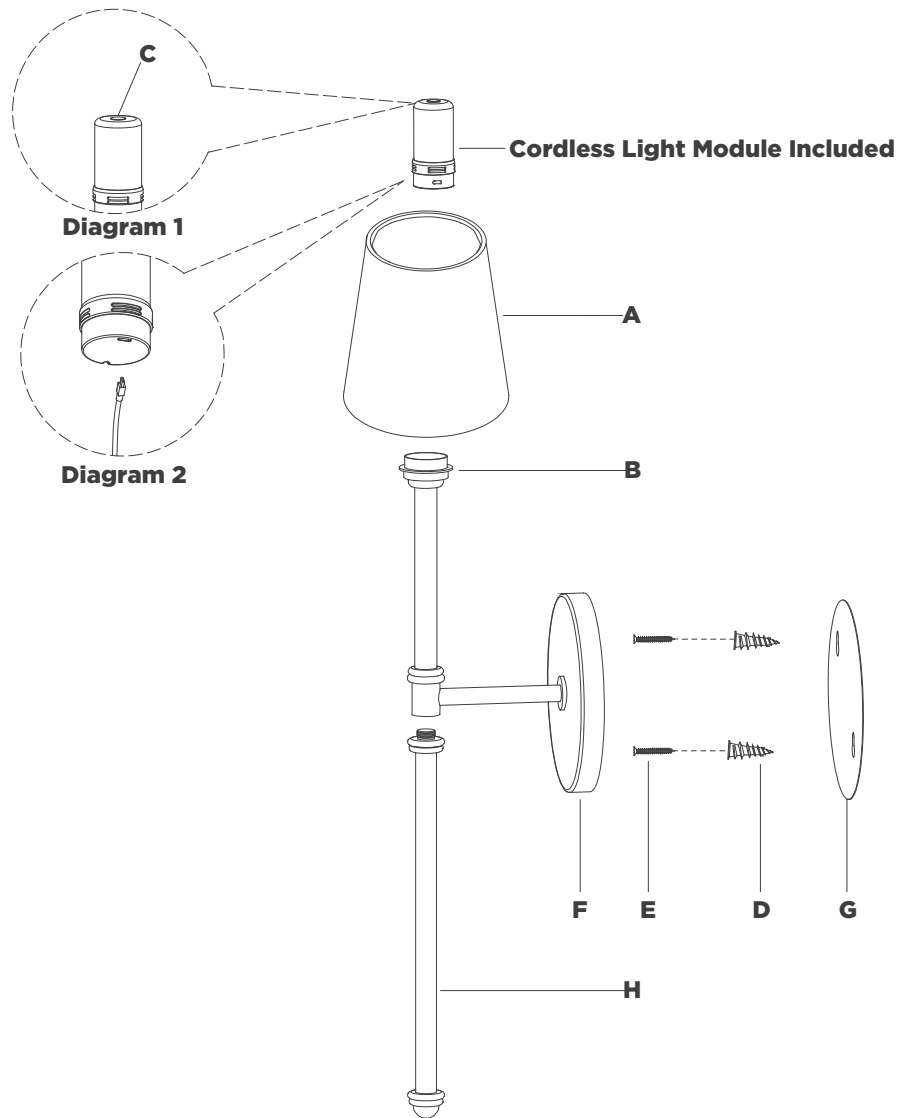

Camille 20" Cordless Sconce

Item # SK2019-CL

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

TOOLS REQUIRED (NOT INCLUDED):


Pencil

Hammer

Drill

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Using card template **(G)** as a guide, mark anchor positions.
3. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(D)** into the holes using a hammer.
4. Secure wood screws **(E)** to anchors **(D)**, leaving 1/8" of exposed thread in order to hang fixture.
5. Hook fixture **(F)** to wood screws **(E)**.
6. Place shade **(A)** onto top of cordless module holder **(B)**.
NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.
7. Thread rod **(H)** to bottom of fixture.
NOTE: Do not overtighten otherwise glass shade could be damaged.
8. Place cordless light module into cordless module holder **(B)**.
9. For best results fully charge battery before use.
NOTE: 10W minimum USB power source recommended.
10. Test the lamp.
Dimmer switch operation: Touch dimmer **(C)** to adjust between high, medium, low and off settings (see diagram 1).

ASSEMBLY INSTRUCTIONS

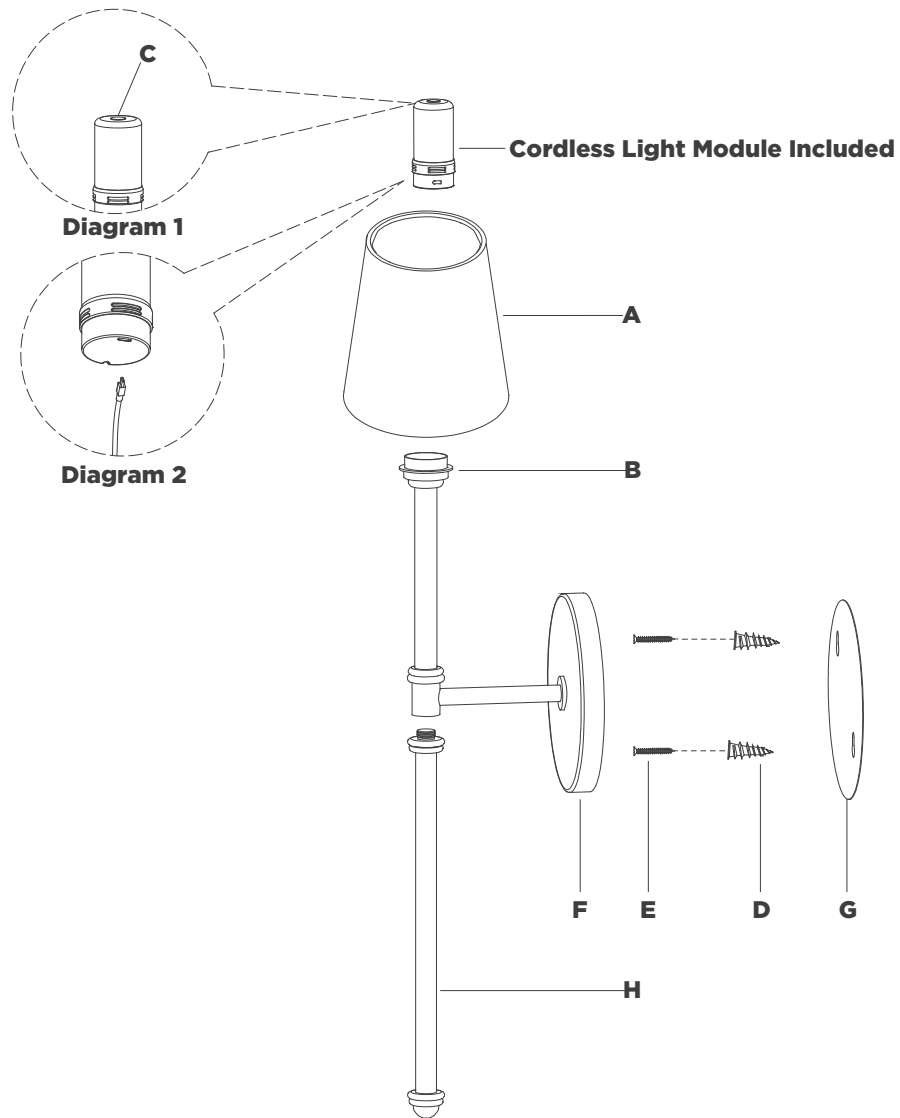

Camille 20" Cordless Sconce

Item # SK2019

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

NOTE: For convenience, USB-C to USB-A adapter is included.



USB TYPE C



USB TYPE A

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.