


ASSEMBLY INSTRUCTIONS

Linen Shade Version

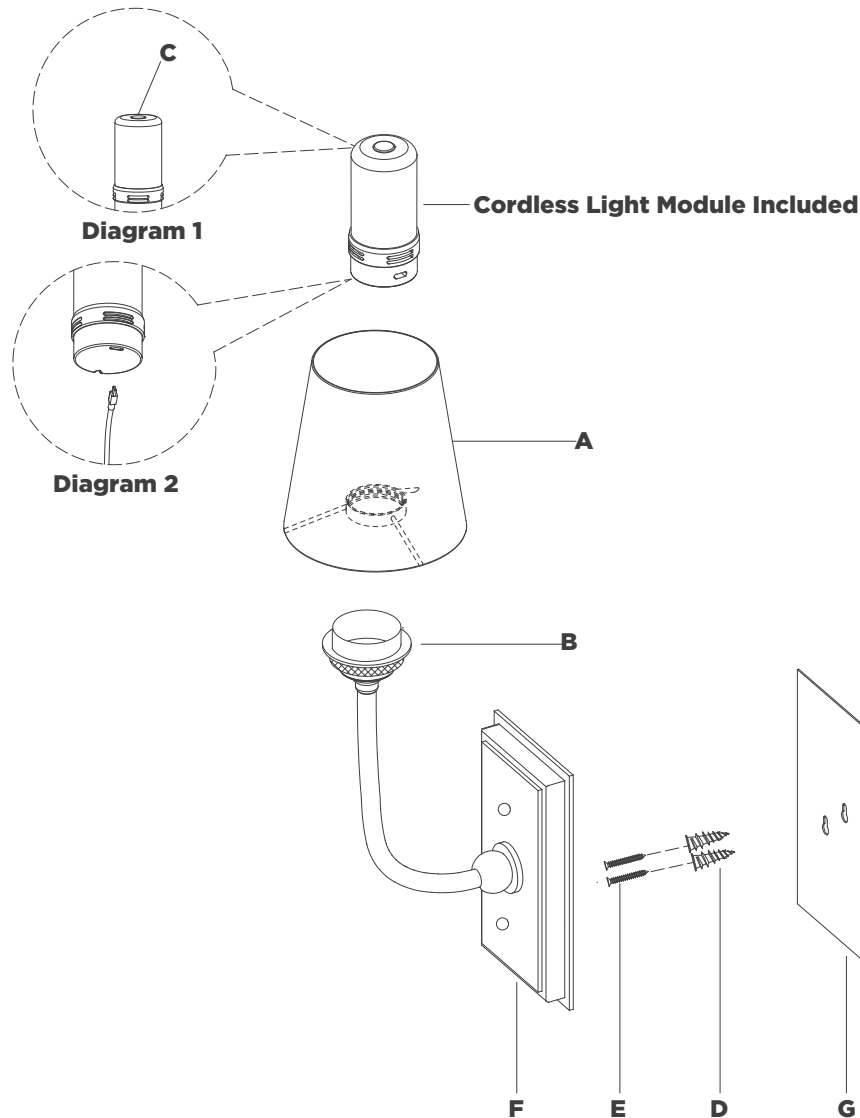

Hulton 17" Cordless Single Sconce

Item # TOB2189-CL

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

TOOLS REQUIRED (NOT INCLUDED):

Pencil

Hammer

Drill

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Using card template (**G**) as a guide, mark anchor positions.
3. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (**D**) into the holes using a hammer.
4. Secure wood screws (**E**) to anchors (**D**), leaving 1/8" of exposed thread in order to hang fixture.
5. Hook fixture (**F**) to wood screws (**E**).
6. Place cordless light module into cordless module holder (**B**).
7. Clip shade (**A**) onto cordless light module.

NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.

8. For best results fully charge battery before use.

NOTE: 10W minimum USB power source recommended.

9. Test the lamp.

Dimmer switch operation: Touch dimmer (**C**) to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

NOTE: For convenience, USB-C to USB-A adapter is included.



USB TYPE C



USB TYPE A


CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & CO.



ASSEMBLY INSTRUCTIONS

WG Glass Shade Version

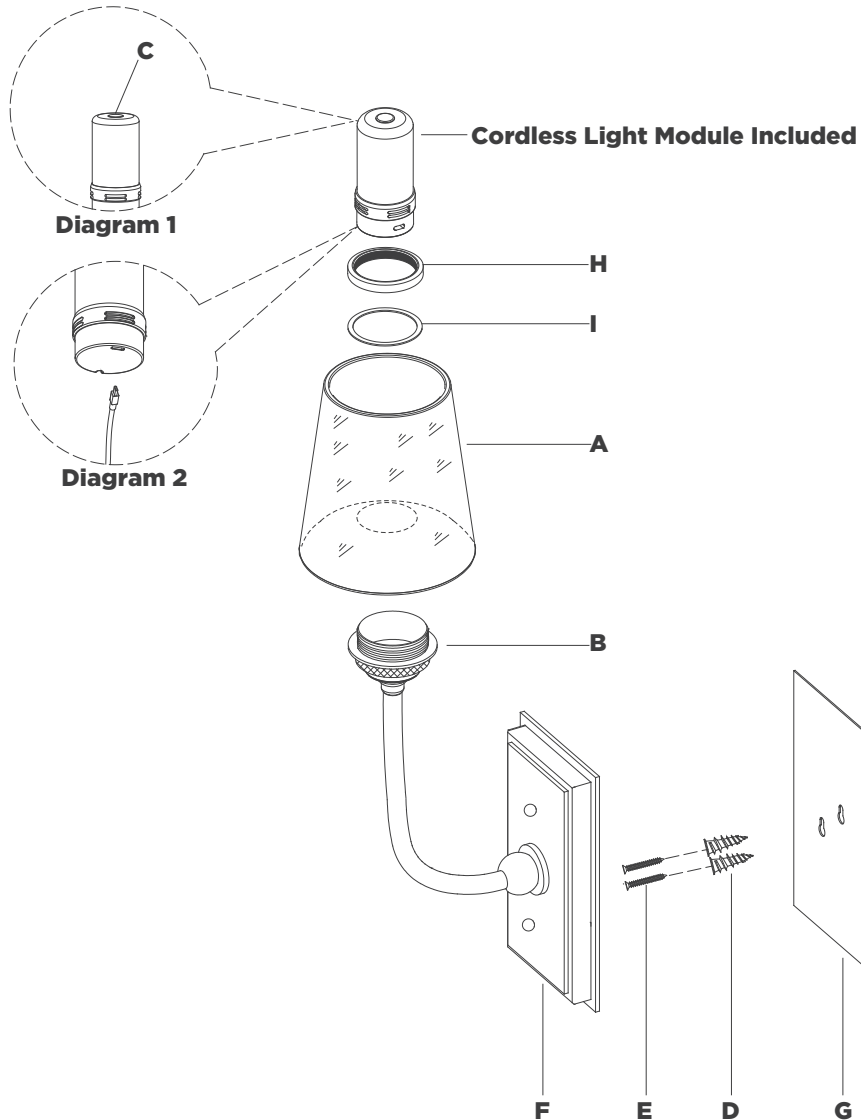

Hulton 17" Cordless Single Sconce

Item # TOB2189-CL

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

TOOLS REQUIRED (NOT INCLUDED):

Pencil

Hammer

Drill

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Using card template (G) as a guide, mark anchor positions.
3. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (D) into the holes using a hammer.
4. Secure wood screws (E) to anchors (D), leaving 1/8" of exposed thread in order to hang fixture.
5. Hook fixture (F) to wood screws (E).
6. Remove socket ring (H) and rubber washer (I) from cordless module holder (B), then install shade (A) to cordless module holder (B) and secure with rubber washer (I) and socket ring (H).
7. Place cordless light module into cordless module holder (B).
8. For best results fully charge battery before use.

NOTE: 10W minimum USB power source recommended.

9. Test the lamp.

Dimmer switch operation: Touch dimmer (C) to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

NOTE: For convenience, USB-C to USB-A adapter is included.



CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

VISUAL COMFORT & CO.

