


ASSEMBLY INSTRUCTIONS

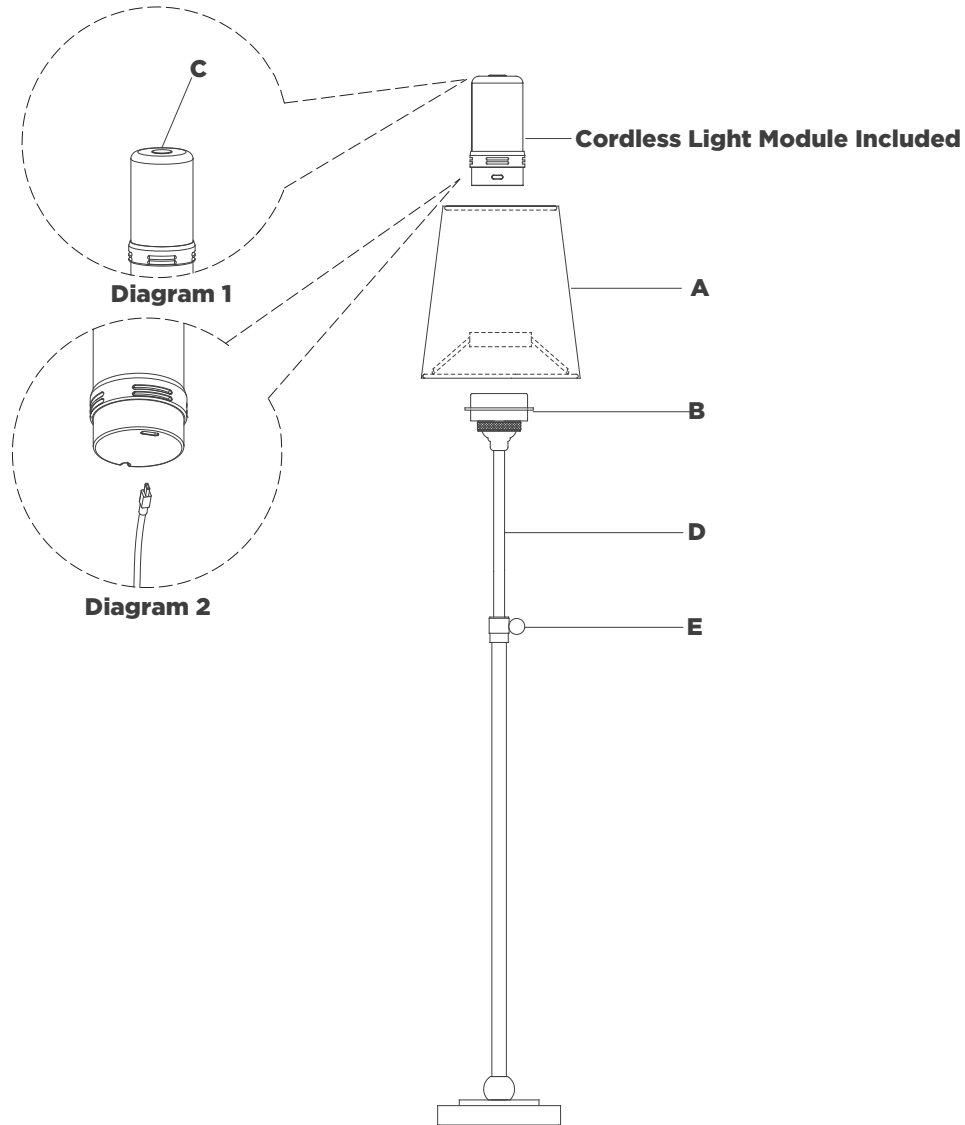

Bryant 27" Adjustable Cordless Table Lamp

Item # TOB3107-CL

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Loosen adjustment knob **(E)**, adjust rod **(D)** to desired height. Tighten adjustment knob **(E)**.
3. Remove shade **(A)** from packaging and place onto cordless module holder **(B)**.

NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.

4. Place cordless light module into cordless module holder **(B)**.
5. For best results fully charge battery before use.

NOTE: 10W minimum USB power source recommended.

6. Test the lamp.

Dimmer switch operation: Touch dimmer **(C)** to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (See diagram 2).

NOTE: For convenience, USB-C to USB-A adapter is included.



USB TYPE C



USB TYPE A

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.