



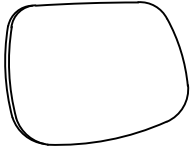


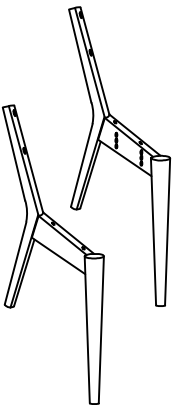








ITEM NAME/NOM D'ITEM: PRIEST LOUNGE CHAIR
ITEM #/NO.ITEM : 100152

PARTS LIST/LISTE DES PIÈCES


(1)	(2)	(3)	(4)	(5)	(6)
					A.  M6 x 50mm x4 B.  M6 x 30mm x4 C.  $\varnothing 6$ mm x8 D.  5 x 32mm x8 E.  8 x 35mm x8 F.  8 x 25mm x8 G.  14.5mm x4 H.  4mm x4
x2	x1	x1	x1	x1	

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE


I

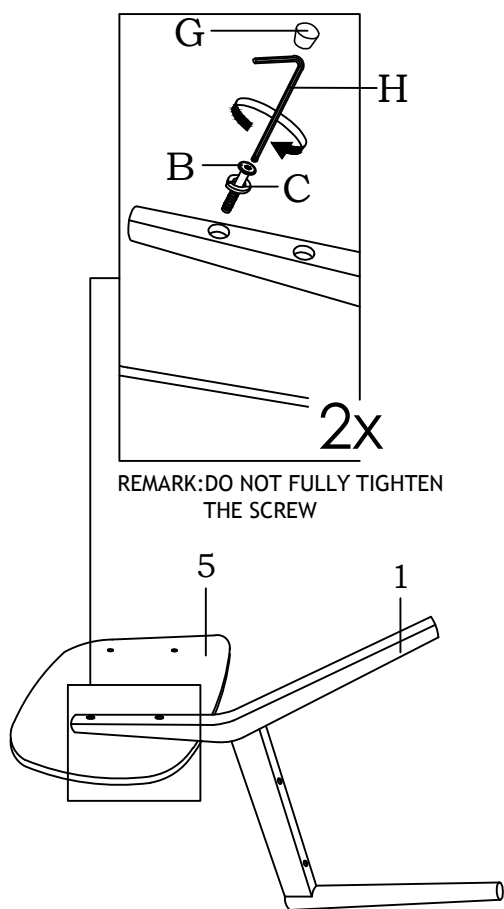


II

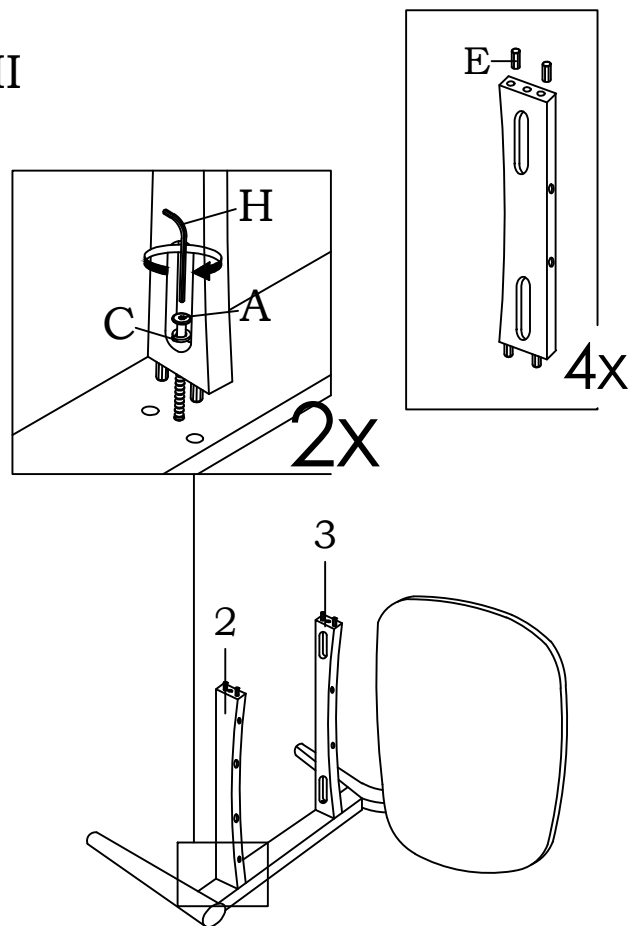



III

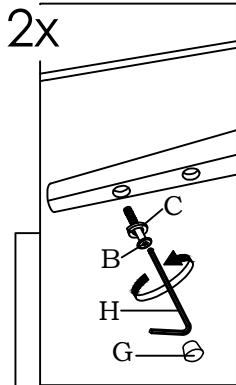




REMARK: FULLY TIGHTEN
ALL THE CHAIR
BACK SCREW

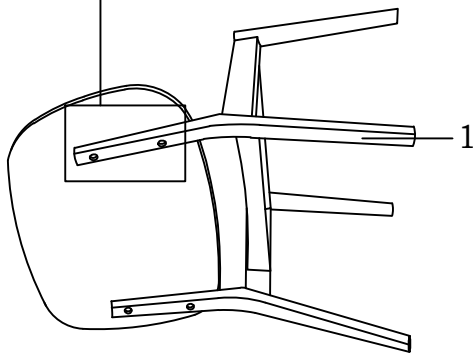

IV

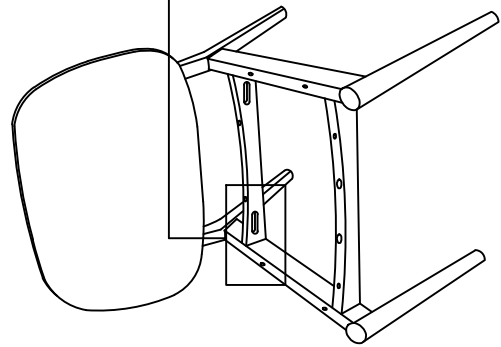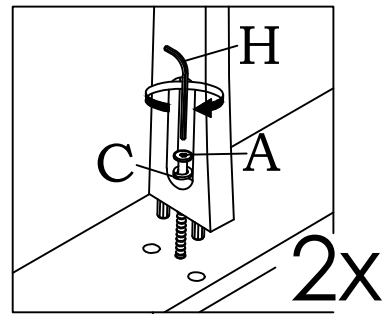

V

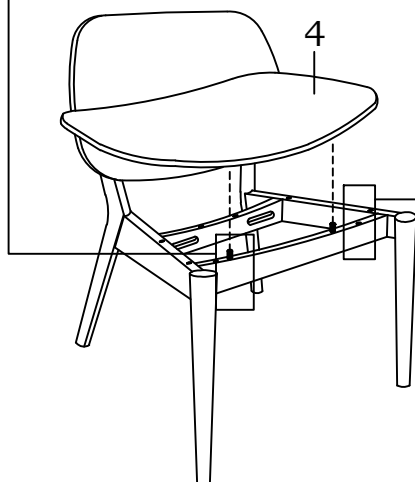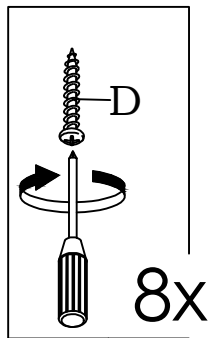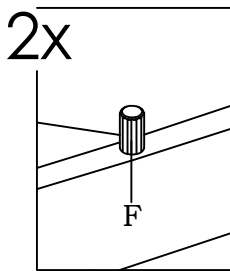

VI

