
 
 





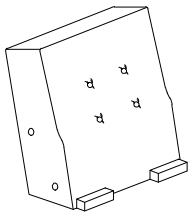





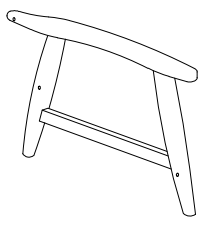





ITEM NAME/NOM D'ITEM: ROCKY ARM CHAIR

ITEM # /NO.ITEM: 100528/100529/100530/101683/101684

PARTS LIST / LISTE DES PIÈCES

| (1) | (2) | (3) | (4) | (5) |
|---|---|---|--|--|
|  |  |  |  | <ul style="list-style-type: none"> A.  M8 x 60mm x2 B.  Ø8mm x6 C.  5mm x1 D.  Ø8 x 18mm x2 E.  Ø10 x 40mm x4 F.  Wooden Cap x6 G.  M8 x 80mm x4 H.  4 x 50mm x2 I.  Paste Pad x4 J.  L - Bracket x2 K.  4 x 20mm x4 L.  Ø8mm x6 |
| x1 | x1 | x1 | x2 | |

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

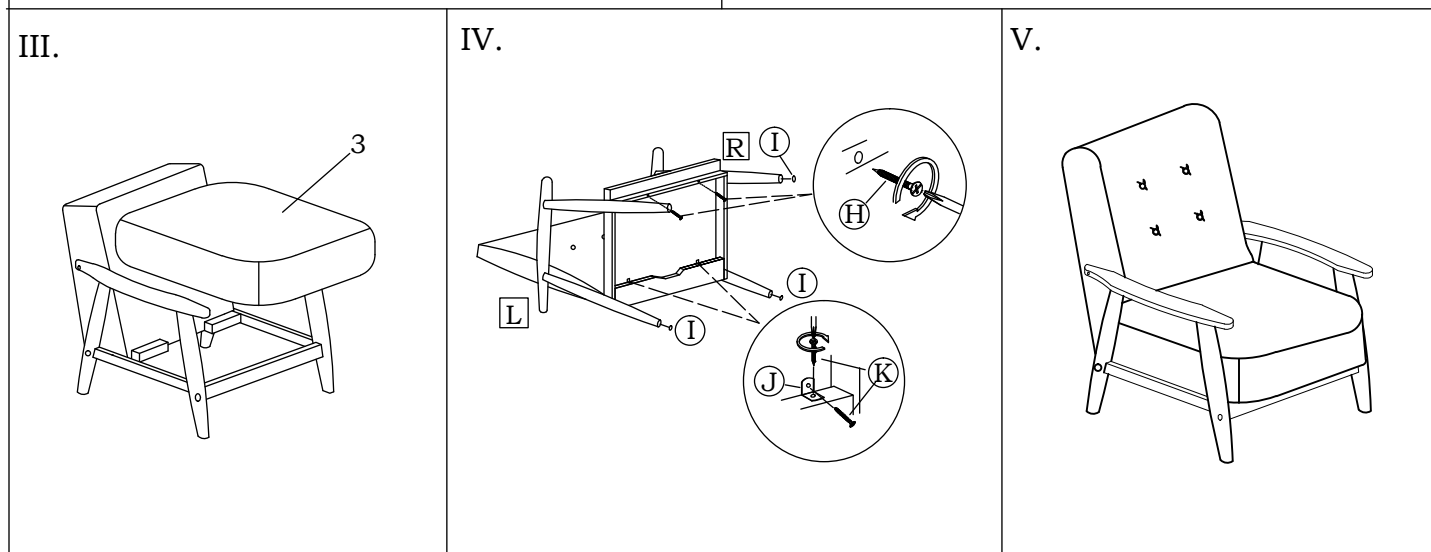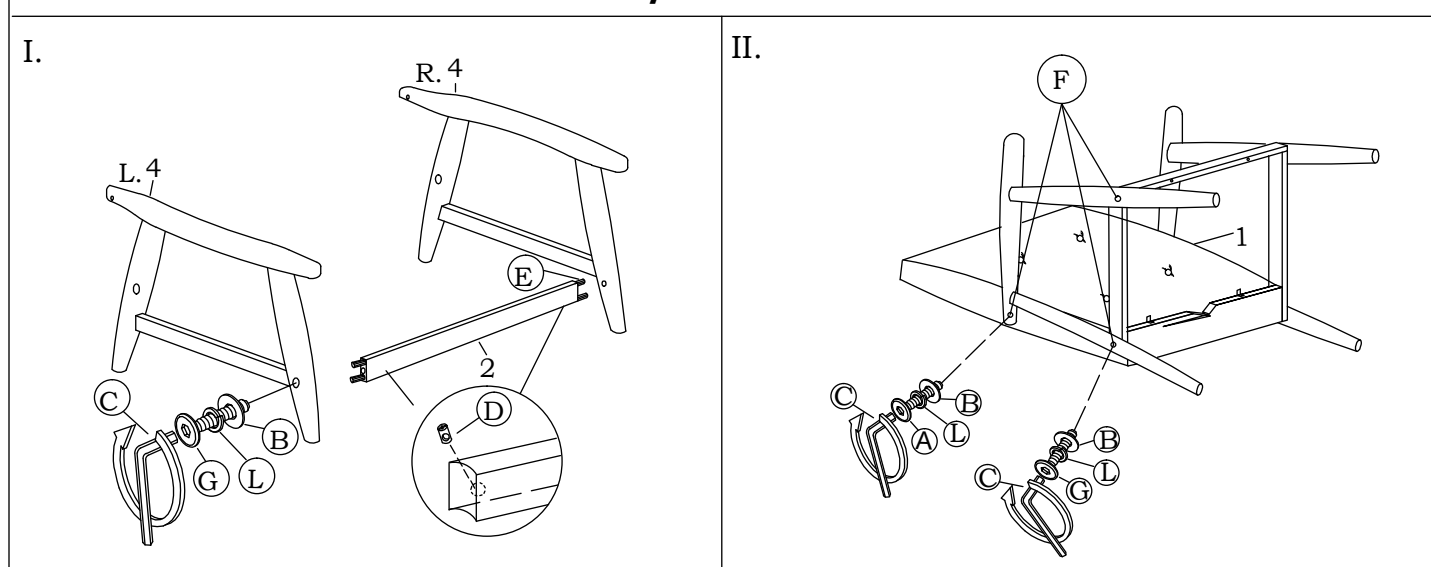

For missing parts or damaged parts, please call

USA :1-866-798-6663
 Canada :514-382-6661