



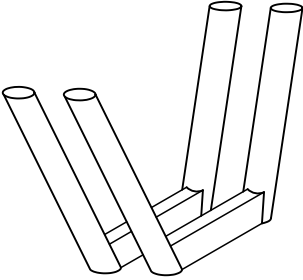

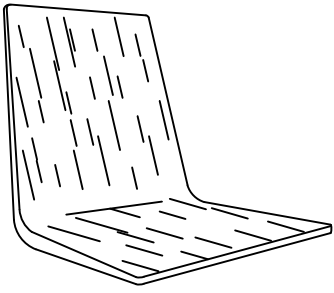





**ITEM NAME/NOM D'ITEM: AUDREY DINING CHAIR**  
**ITEM #/NO.ITEM : 100955**


**PARTS LIST/LISTE DES PIÈCES**

 (1)	(3)	(4)	
 <p style="text-align: right;"><b>x2</b></p>	 <p style="text-align: right;"><b>x1</b></p>	<p>A. JCBC SCREW M6 x 70MM <b>x4</b>  </p> <p>B. JCBC SCREW M6 x 50MM <b>x4</b>  </p> <p>C. SPRING WASHER 1/4" <b>x8</b>  </p> <p>D. M4 ALLEN KEY (BALL SHAPE) LONG <b>x1</b>  </p> <p>E. BASE GLIDE C89(Screw) M6 x 23 <b>x4</b>  </p> <p>F. WOOD DOWEL DIA 8 x 35MM <b>x8</b>  </p>	
<p>(2)</p>			
 <p style="text-align: right;"><b>x2</b></p>			


**ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE**

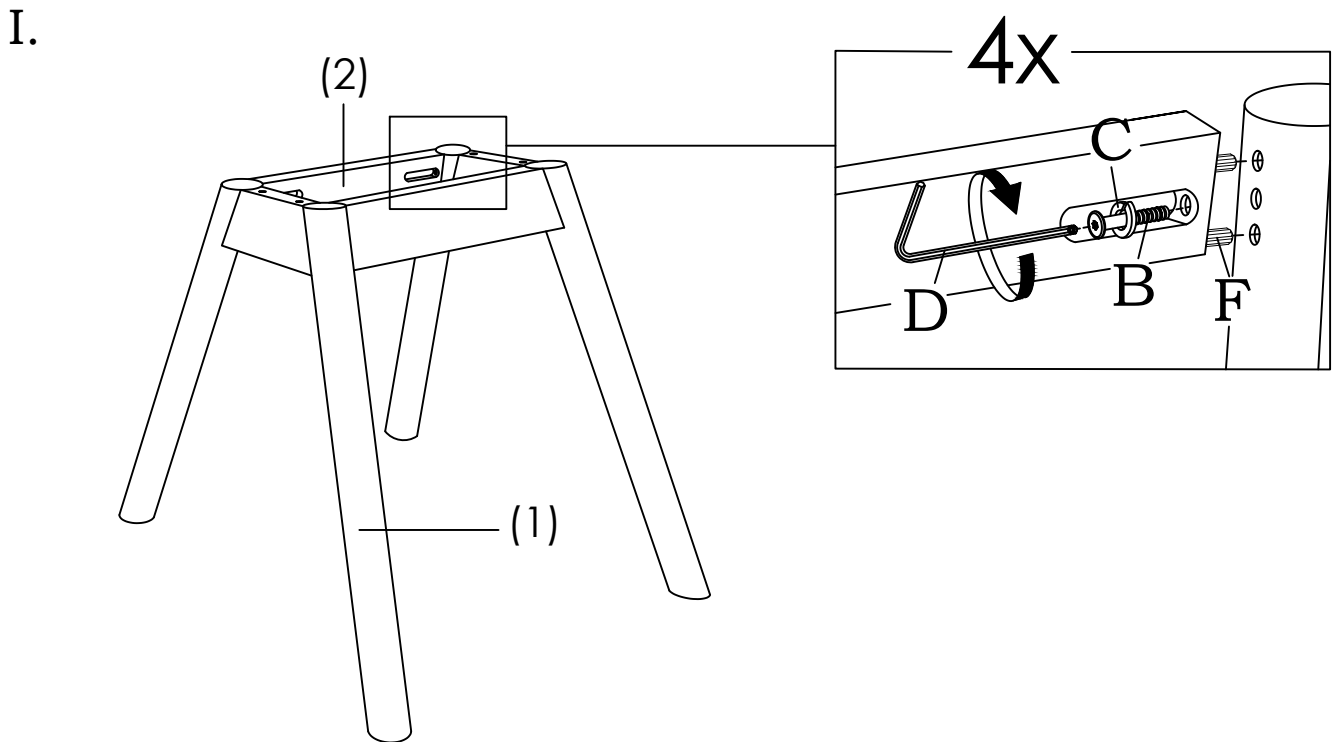

II.

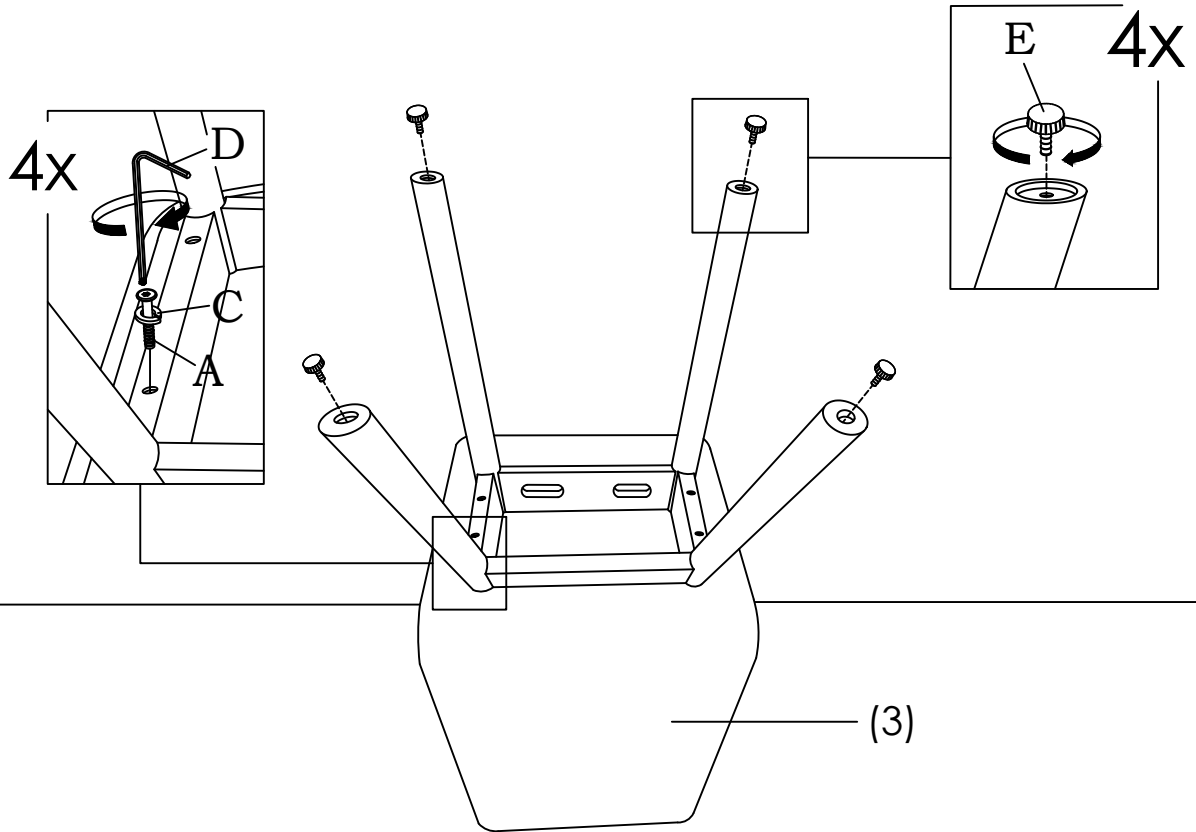

III.

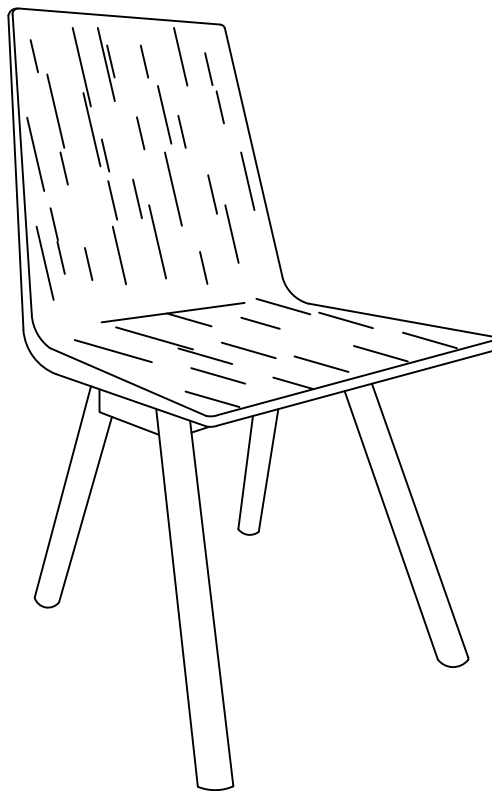

For missing parts or damaged parts, please call USA : 1-866-798-6663  
CANADA : 514-382-6661