

READ AND SAVE THESE INSTRUCTIONS

The illustrations in this document are generic; your control appearance may be slightly different from the ones shown.

⚠ WARNING


Wear safety glasses and gloves while performing these instructions (steps 1 to 5).

This auxiliary control must be paired with the Advanced Touchscreen Control.


INSTALLATION

- 1 Unplug the ventilation unit.

NOTE: If the control is to be installed in an electric box, go to step 5.

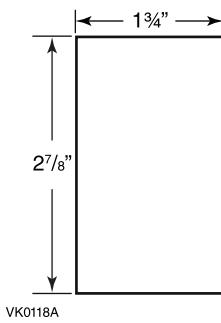


- 2 Cut a 2 7/8" x 1 3/4" hole in a wall, at a convenient location for the control. See figure at right.

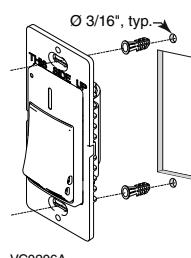


- 3 Temporarily place the control over the hole and mark both mounting screw hole positions.

- 4 Remove the control, drill both screw holes (3/16" Ø) in wall and insert the wall anchors (included).

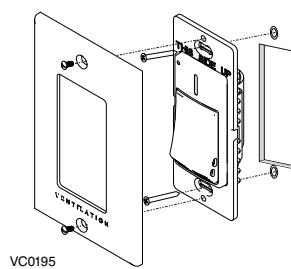

- 5 Mount the control to the wall.

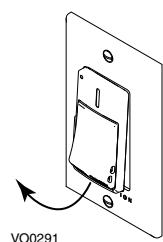


- 6 Plug the ventilation unit.

- 7 Disengage the control from its support by lifting and tilting the bottom part of the control.

NOTE: This wall control requires 2 AAA 1.5 V batteries (included).

- 8 Install the batteries at the back of the control.

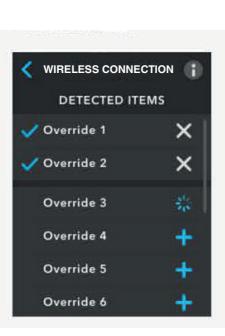


- 9 Keep the auxiliary control in hand. Go to the main control. Reach the Wireless Connection screen (see figure at right) following this path: HOME PAGE (press on the gear at the bottom right)\SETTINGS\INSTALLATION\WIRELESS CONNECTION. Press on the auxiliary control button for 5 seconds. The LED indicator will fade in and out to indicate the system is trying to pair the auxiliary control with the main control. The main control will detect the item. This procedure will take 30 s max. Press on + to complete pairing. Once the pairing is done, the item will move in the upper part of the screen and a ✓ will appear at the left of the item.

NOTE: It is possible to unpair an item by pressing on x.


- 10 If needed, reach the Automatic Auxiliary Control screen (see figure at right) following this path: HOME PAGE (press on the gear at the bottom right)\PREFERENCES\AUTOMATIC AUXILIARY CONTROL to modify the humidity detection feature.



- 11 Install the auxiliary control back in its support. Insert the top brackets in the notches. Push on the bottom part of the control until it clicks in place.

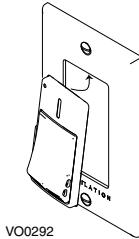

- 12 Test the wall control.

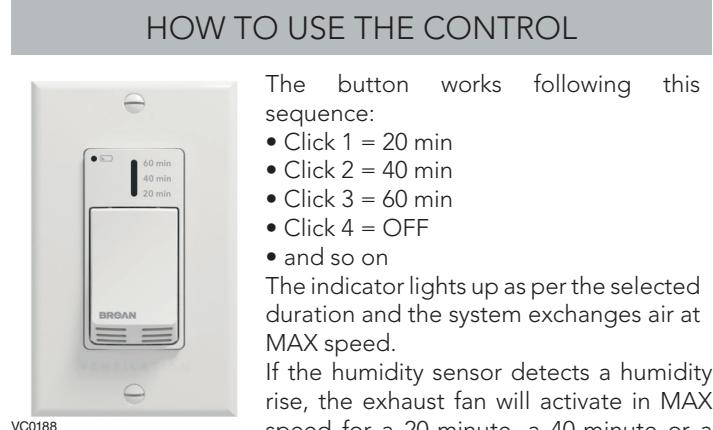

The button works following this sequence:

- Click 1 = 20 min
- Click 2 = 40 min
- Click 3 = 60 min
- Click 4 = OFF
- and so on

The indicator lights up as per the selected duration and the system exchanges air at MAX speed.

If the humidity sensor detects a humidity rise, the exhaust fan will activate in MAX speed for a 20-minute, a 40-minute or a 60-minute period as per the Automatic Auxiliary Control setting.

HOW TO CHANGE THE BATTERIES

If a batteries change is required, the low batteries indicator will flash for 5 seconds when pressing on the button.

Perform step 7 to access the batteries.

Remove the old batteries. Dispose of used batteries as per local rules and regulations.

Replace the batteries. The use of rechargeable batteries is not recommended.

Perform step 11 to install the auxiliary control back in its support.

TROUBLESHOOTING

PROBLEM	CAUSE
No detected item on Wireless Connection screen	The batteries are not installed
	Low batteries
LED indicator does not light up when pressing on the button	The batteries are not installed
	Low batteries
Range too high between the auxiliary control and the main control	Range too high between the auxiliary control and the main control
	Low batteries
Humidity sensor does not work	Low batteries
	Sensitivity too low, set sensitivity to High in the Automatic Auxiliary Control screen

LEA Y GUARDE ESTAS INSTRUCCIONES

Las ilustraciones en este documento son generales; su control puede tener un aspecto ligeramente diferente.

ADVERTENCIA


Lleve siempre lentes y guantes de seguridad al ejecutar estas instrucciones (etapas 1 a 5).

Este control auxiliar debe combinarse con el control Avanzado con Pantalla Táctil.


INSTALACIÓN

- 1 Desenchufar el aparato.


NOTA: Si el control se monta en una caja eléctrica, pasar a la etapa 5.

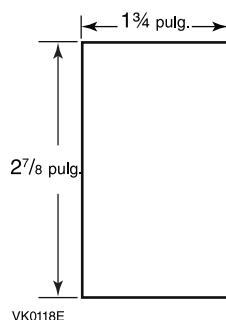


- 2 Cortar un agujero de 2 7/8 pulg. x 1 3/4 pulg. en un lugar conveniente de la pared para el control mural. Ver la ilustración a la derecha.

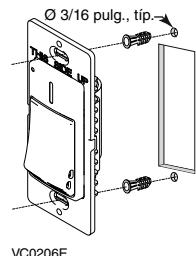


- 3 Colocar temporalmente el control mural en el agujero y marcar la ubicación de los orificios de los tornillos de montaje.

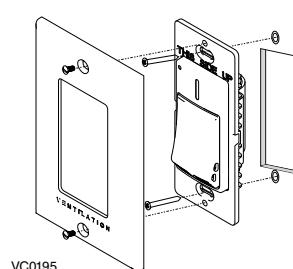


- 4 Retirar el control mural, taladrar dos orificios (3/16 pulg. de diámetro) en la pared e introducir los dispositivos de sujeción para paredes incluidos.

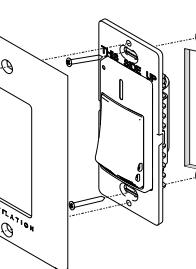

- 5 Montar el control mural en la pared.

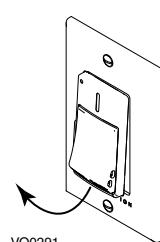

- 6 Enchufar el aparato de ventilación.

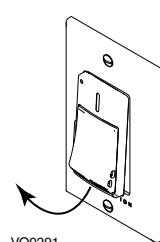

- 7 Retirar el control de su soporte, elevando y inclinando la parte inferior del control.

NOTA: Este control mural necesita 2 pilas tipo AAA 1,5 V (incluidas).

- 8 Instalar las pilas en la parte posterior del control.



- 9 Tener el control auxiliar a mano. Ir al control principal. Acceder a la pantalla CONEXIÓN INALÁMBRICA (ver la ilustración a la derecha) siguiendo este camino: PÁGINA PRINCIPAL (presionar el icono de engranaje en la parte inferior a la derecha)\PARÁMETROS\INSTALACIÓN\CONEXIÓN INALÁMBRICA. Presionar el botón del control auxiliar durante 5 s. El indicador de LED aparecerá y desaparecerá gradualmente para indicar que el sistema está intentando emparejar el control auxiliar con el control principal.

El control principal detectará el elemento. Este procedimiento llevará 30 s máx. Presionar + para completar el emparejamiento. Una vez el emparejamiento completado, el elemento se moverá en la parte superior de la pantalla y un ✓ aparecerá a la izquierda del elemento.


NOTA: Es posible desemparejar un elemento presionando el x.

- 10 Si es necesario, acceder a la pantalla Control auxiliar automático (ver la ilustración a la derecha) siguiendo este camino: PÁGINA PRINCIPAL (presionar el icono de engranaje en la parte inferior a la derecha)\PREFERENCIAS\CONTROL AUXILIAR AUTOMÁTICO para modificar la detección de humedad.



VC0208E

- 11 Reinstalar el control auxiliar en su lugar. Insertar los soportes superiores en las muescas. Empujar en la parte inferior del control hasta que encaje en su lugar.

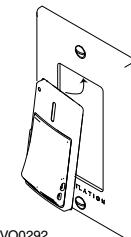

- 12 Probar el control mural.

CÓMO FUNCIONA EL CONTROL

El botón funciona de la siguiente manera:

- Clic 1 = 20 min
- Clic 2 = 40 min
- Clic 3 = 60 min
- Clic 4 = OFF
- etcétera

El indicador se enciende según la duración elegida y la unidad distribuye aire a velocidad MAX.

Si el sensor de humedad detecta un aumento de la humedad, el ventilador de salida se activará a velocidad MAX por un período de 20 minutos, 40 minutos o 60 minutos conforme al ajuste del Control auxiliar automático.

CÓMO CAMBIAR LAS PILAS

Si un cambio de pilas es necesario, el indicador de pilas bajas parpadeará durante 5 segundos al presionar el botón.

Ejecutar la etapa 7 para acceder a las pilas.

Sacar las pilas usadas. Desechar las pilas usadas según las regulaciones locales.

Cambiar las pilas. El uso de pilas recargables no se recomienda.

Ejecutar la etapa 11 para reinstalar el control auxiliar en su lugar.

RESOLUCIÓN DE PROBLEMAS

PROBLEMA	CAUSA
No elemento detectado en la pantalla Conexión inalámbrica	Pilas no instaladas
El indicador de LED no se enciende al presionar el botón	Pilas bajas
Distancia demasiado grande entre el control auxiliar y el control principal	Pilas no instaladas Pilas bajas Distancia demasiado grande entre el control auxiliar y el control principal
El sensor de humedad no funciona	Pilas bajas Sensibilidad demasiado baja, ajustar la sensibilidad a Alta en la pantalla Control auxiliar automático