



INSTALLATION INSTRUCTIONS

IMPORTANT

Before assembling your access lighting fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.

GENERAL INFORMATION

All electrical connections must be in accordance with all ordinances, Local and National Electrical Codes. These fixtures are intended for mounting to a standard 4" x 2 1/2" metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized.

STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

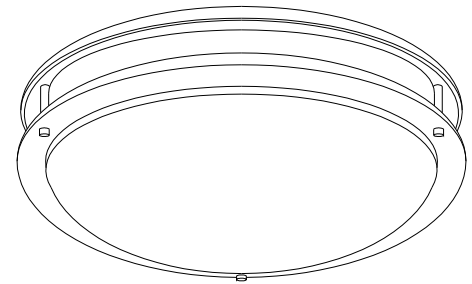

COLLECTION

SOLERO

APPLICATION

Ceiling

MODEL NO.


20467GU

WHAT WE PROVIDE

- Mounting Hardware
- 1 x Acrylic Shade
- 1 x Metal frame

WHAT YOU NEED


- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified by Electrical Code
- 6 x 13W GU24 Bulbs

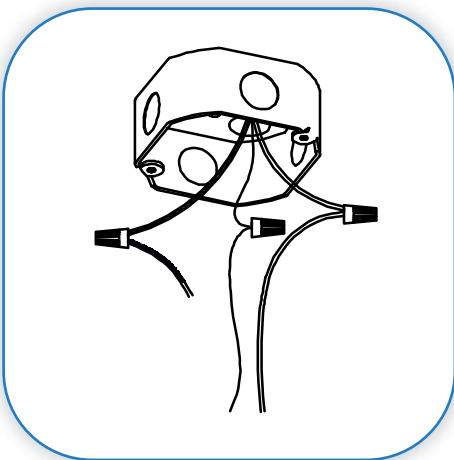

PREPARE FIXTURE

1


If there is an existing fixture remove it.
 Expose the supply wires from the J-box .
 Connect the black supply wire to the black fixture wire.
 Secure with the supplied wire nut. Connect the white supply wire to the white fixture wire. Secure with the supplied wire nut. Either wrap the green wire around one of the protruding screws or connect it to the supply ground wire.
 Secure all wires with U.L. Certified electrical tape (not supplied). Tuck all wires carefully into the J-Box.

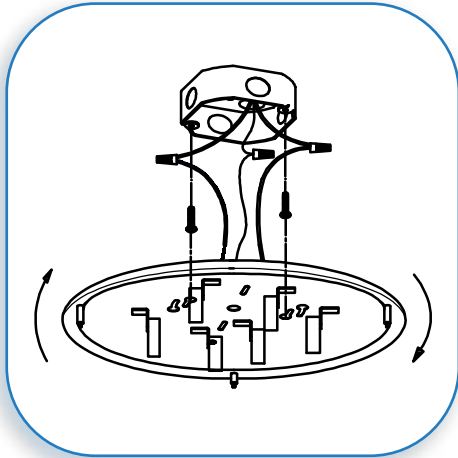

2

MOUNT THE CANOPY


Fit the fixture canopy up to the J-box.
Secure with the supplied screws.
Slightly rotate the canopy to fit in screw slot.

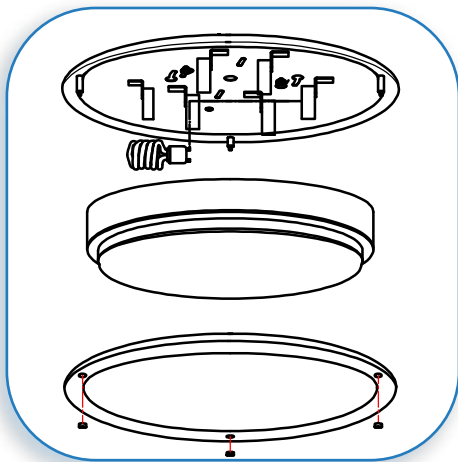

3

INSERT THE BULBS AND SECURE THE SHADE

Insert the bulbs.
MAXIMUM WATTAGE 13W.
DO NOT EXCEED THE RECOMMENDED WATTAGE AS STATED ON THE WARNING LABEL AND INSTRUCTION SHEETS.
Cover the acrylic shade and metal frame and align the holes with the threaded rods. Secure with the supplied nuts.

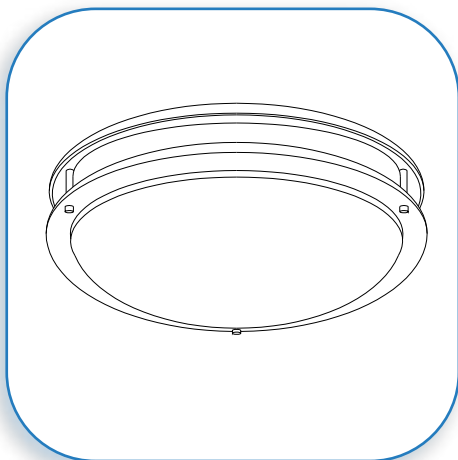

4

RESTORE THE ELECTRICITY AND CHECK THE OPERATION OF YOUR NEW ACCESS FIXTURE

CAUTION

Please ensure that the fitting is cool and switched off before replacing the bulb. DO NOT use bulbs that might exceed the maximum wattage, stated on caution label.