



TRIM SET INSTALLATION

INSTALLATION DE L'ENSEMBLE DÉCORATIF

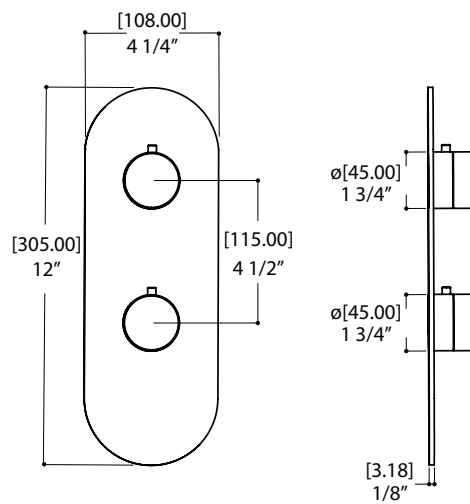

CEILING / SHOWER ARMS INSTALLATION

INSTALLATION DES BRAS DE PLAFOND / DOUCHE


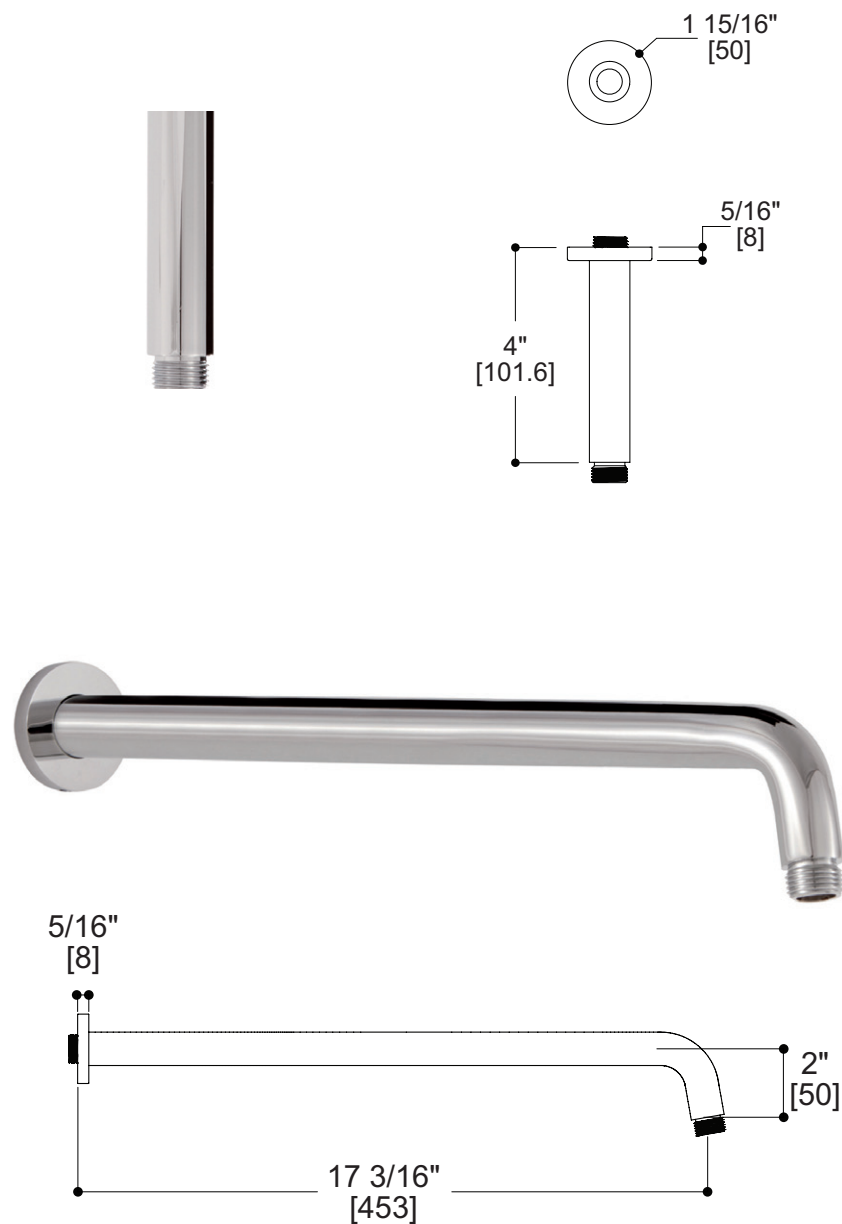


WATERWAY INSTALLATION


INSTALLATION DE LA SORTIE MURALE




1/2 NPT (FEMALE / FEMELLE)

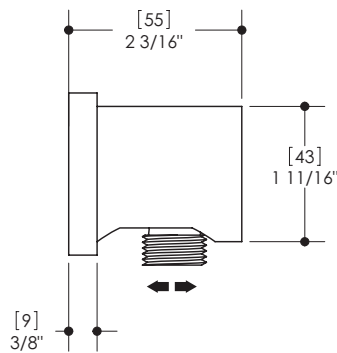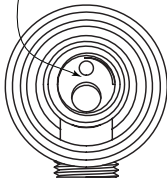


[51.50]
Ø 2"

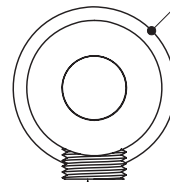

1/2" MALE / MÂLE

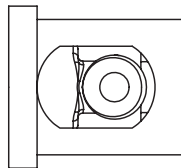




5/8" ADJUSTMENT
AJUSTEMENT DE 5/8"

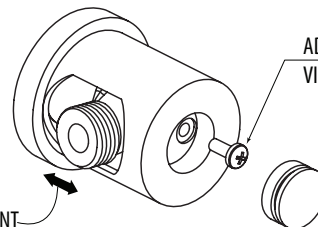

ADJUSTMENT SCREW
VIS D'AJUSTEMENT

SHOWER RAIL INSTALLATION

INSTALLATION DU RAIL DE DOUCHE

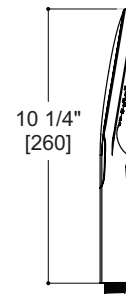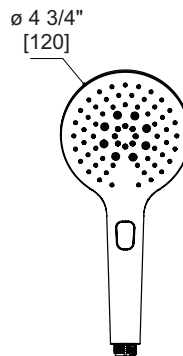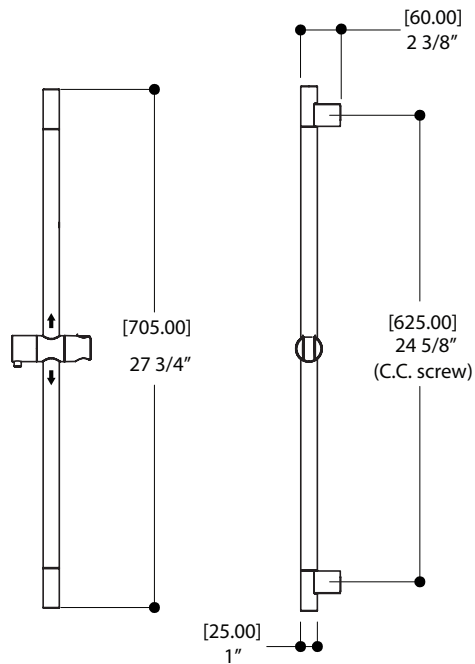

CAUTION:

FOR BEST RESULTS, WE STRONGLY RECOMMEND THE INSTALLATION OF THIS RAIL BE DONE BY A LICENSED PLUMBER.

MISE EN GARDE:

POUR OBTENIR UN RÉSULTAT OPTIMAL, NOUS RECOMMANDONS FORTEMENT QUE L'INSTALLATION DE CE RAIL SOIT FAITE PAR UN PLOMBIER ACCRÉDITÉ.



CAUTION:

MAKE SURE THAT SUPPLIED ANCHORS AND SCREWS ARE PROPERLY INSTALLED.

MISE EN GARDE:

ASSUREZ-VOUS QUE LES CHEVILLES ET LES VIS FOURNIES SOIENT POSITIONNÉES ADÉQUATEMENT.

TUB SPOUT INSTALLATION INSTALLATION DU BEC DE BAIN

