


# 45° + 45° FENIX wall-mount vanity Installation Guide

## 45° vanities




F45V1-0700




F45V2-0700




F45V1-0900

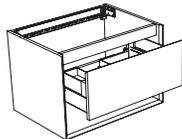


F45V2-0900

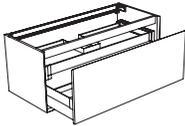


F45V1-1200

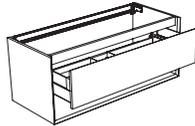


F45V2-1200

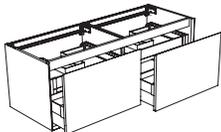


F45V1-1400

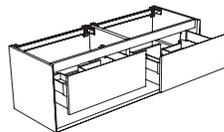

F45V2-1400

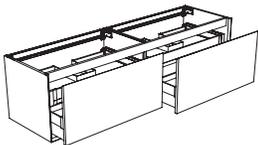


F45V1-1800

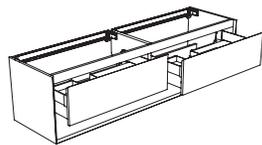


F45V2-1800

## 45° FENIX vanities

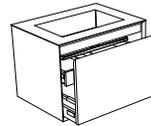


FXV1-0700 + FV1D-0700




FXV2-0700 + FV2D-0700




FXV1-0900 + FV1D-0900

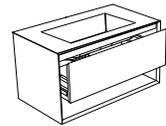


FXV2-0900 + FV2D-0900

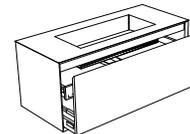


FXV1-1200 + FV1D-1200

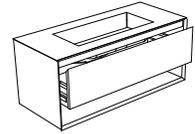

FXV2-1200 + FV2D-1200

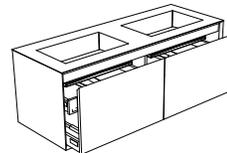


FXV1-1400 + FV1D-1400

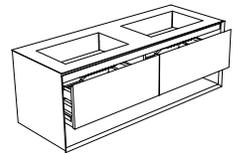

FXV2-1400 + FV2D-1400



FXV1-1800 + FV1D-1800

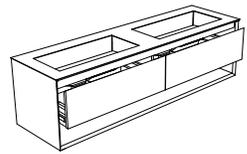

FXV2-1800 + FV2D-1800

# Attention — Before Installation

Thank you for choosing from among Blu's quality line of products. We recommend that you carefully read this installation guide to ensure your vanity's proper operation and reliability for many years to come.

**NOTE:** Product is already optimized/preset for best drawer fitting - only minor adjustments may be needed. Adhere to all local building and plumbing codes. The diagrams in this guide are not construction plans. They are visual aids.

## Installation Requirements

Please read the instructions carefully so as to avoid any damage to the fixture.

1. To ensure this product is installed properly, you must read and follow these guidelines.
2. The owner/user of the product must keep this information for future reference.
3. Consult local building codes to make sure the installation complies with standards.
4. Remove the unit from its packaging. Before disposing of it, inspect the unit to make sure its in good shape. Should inspection reveal any damage or defect in the finish, contact your distributor. The warranty does not cover damages or defects in the finish once it has been installed. Blu Bathworks' responsibility for shipping damages ceases upon delivery of the product in good order to the carrier. All complaints regarding damage due to transport must be made directly to the carrier.
5. Place the unit in the bathroom before you start working. Conserve all nuts and bolts.
6. To protect the unit during installation, we recommend that you lay a piece of cardboard on the bottom.
7. If the unit is covered with polyethylene protective film, do not remove until installation is complete to grant maximum protection. However, remove film where any two surfaces will be in permanent contact.
8. Verify that all dimensions on the plan are the same as the ones of the unit.
- 9. Review specification sheet for each individual SKU for wall blocking/backing reinforcement.**

## Installation Notes

Important! Install this product according to the installation guide.

### Supplied:

#### KIT (A)



dowel for plaster x2 (700, 900, 1200)  
dowel for plaster x4 (1400, 1800)

#### KIT (B)



screw x4 (700, 900, 1200)  
screw x8 (1400, 1800)

## Technical Support Assistance

If further assistance is required, please contact:

Product Support at 1.866.907.0122 (09:00 – 17:00hrs PST) or email [technical@blubathworks.com](mailto:technical@blubathworks.com)

#### North America

Blu Bathworks Inc.

7388 Hedley Ave, Burnaby, BC Canada, V5E 2P9



T +1.604.299.0122 F +1.604.299.0125

Please refer to [blubathworks.com](http://blubathworks.com) for warranty, terms & conditions under warranty & procedure for warranty service.

# Before Installation the Drawer



## 1. How to Unlock the Drawer: 45° FENIX Vanity

Press the flaps on both sides, while lifting




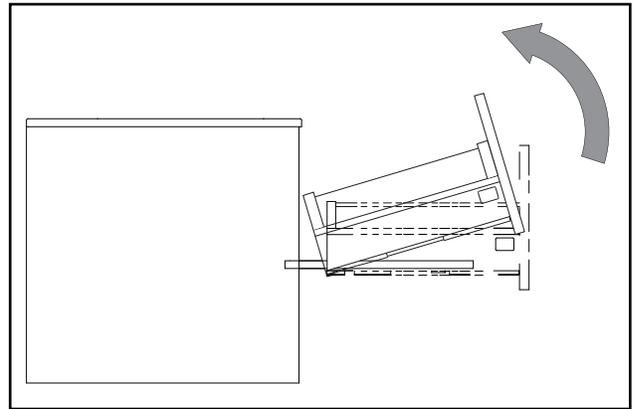
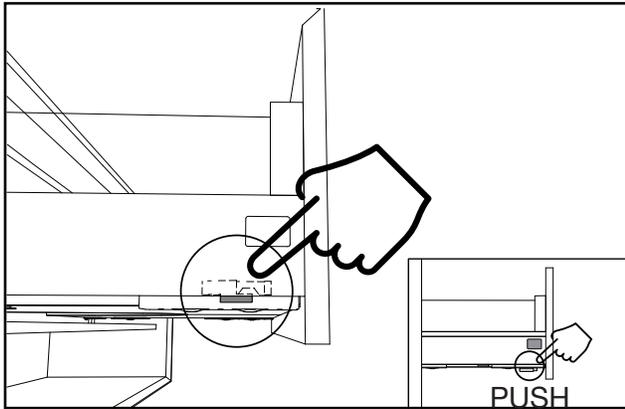





## 2. How to Unlock the Drawer: 45° Vanity

Press the flap placed under the drawer, while lifting

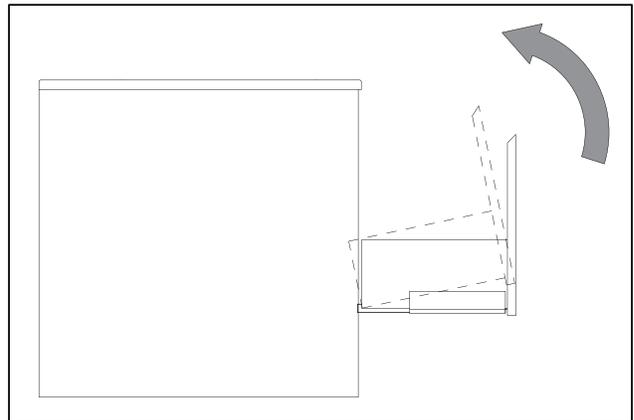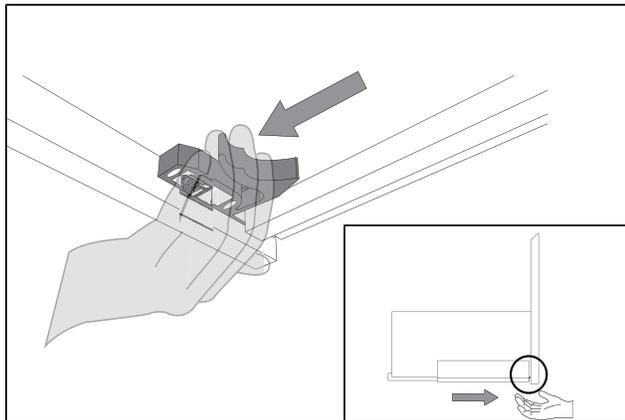

# Installation: For both the 45° FENIX + 45° series

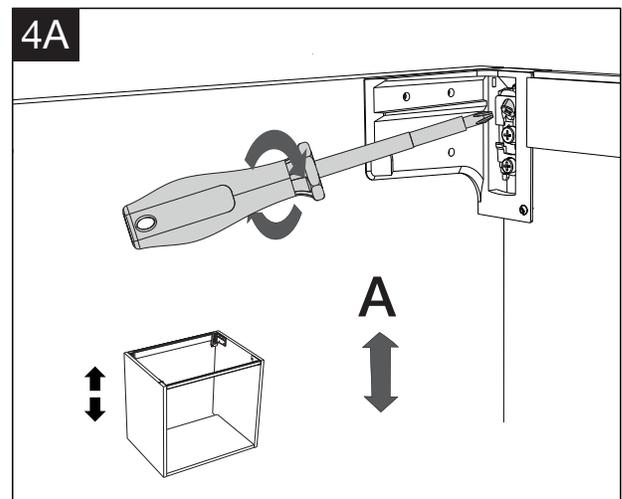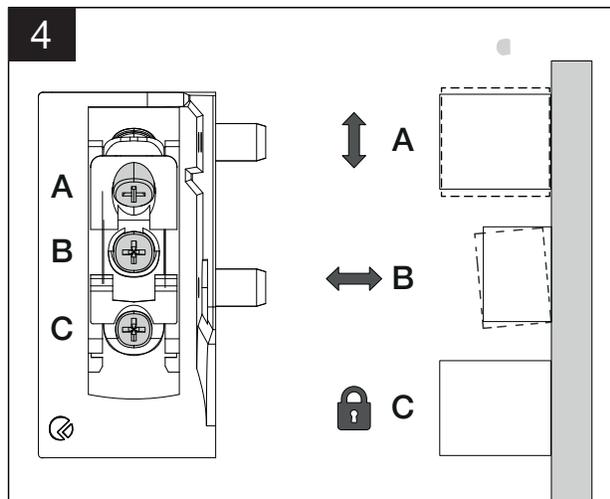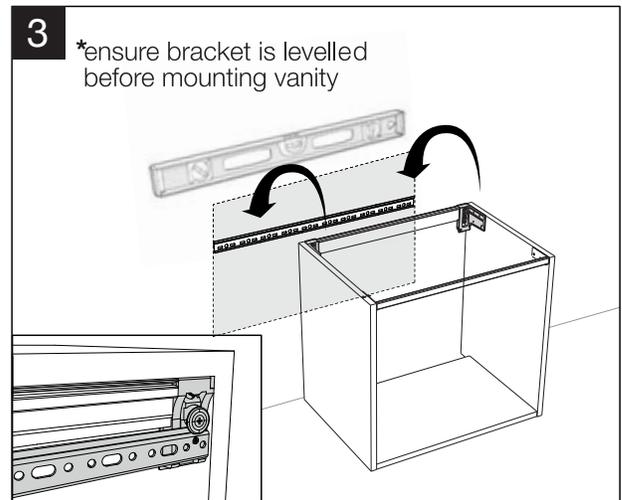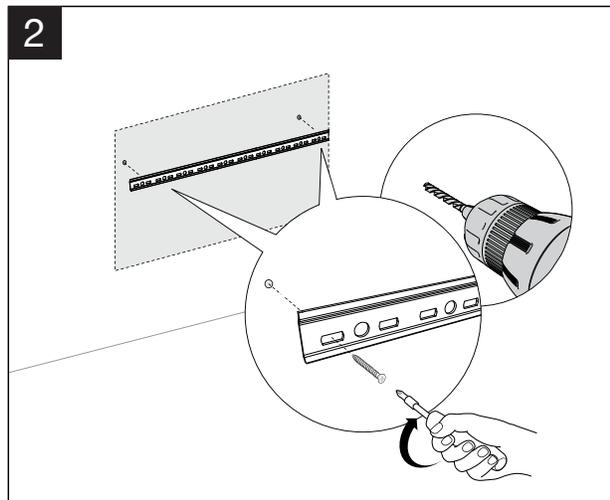
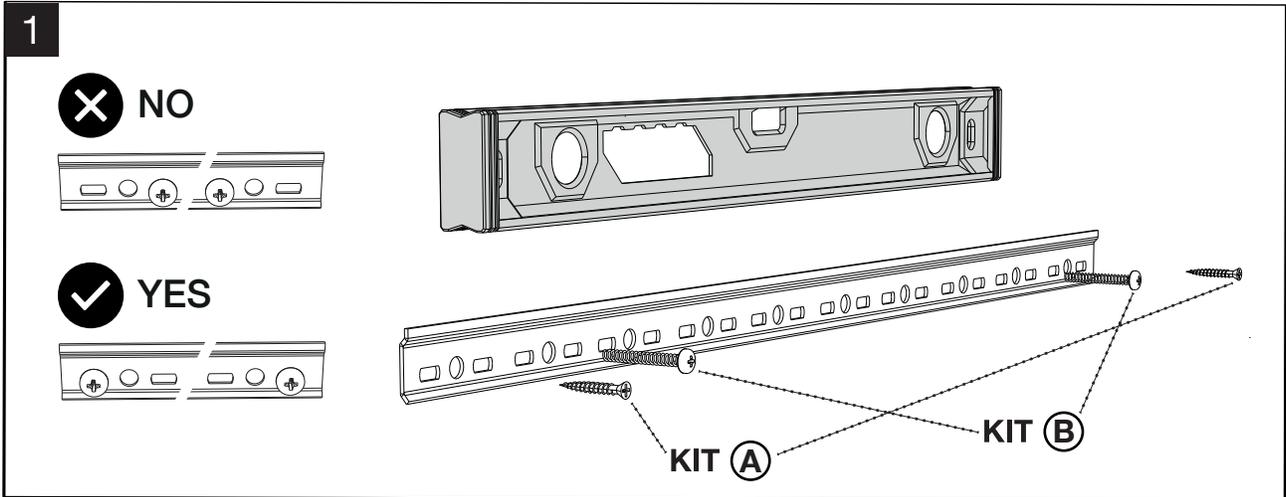


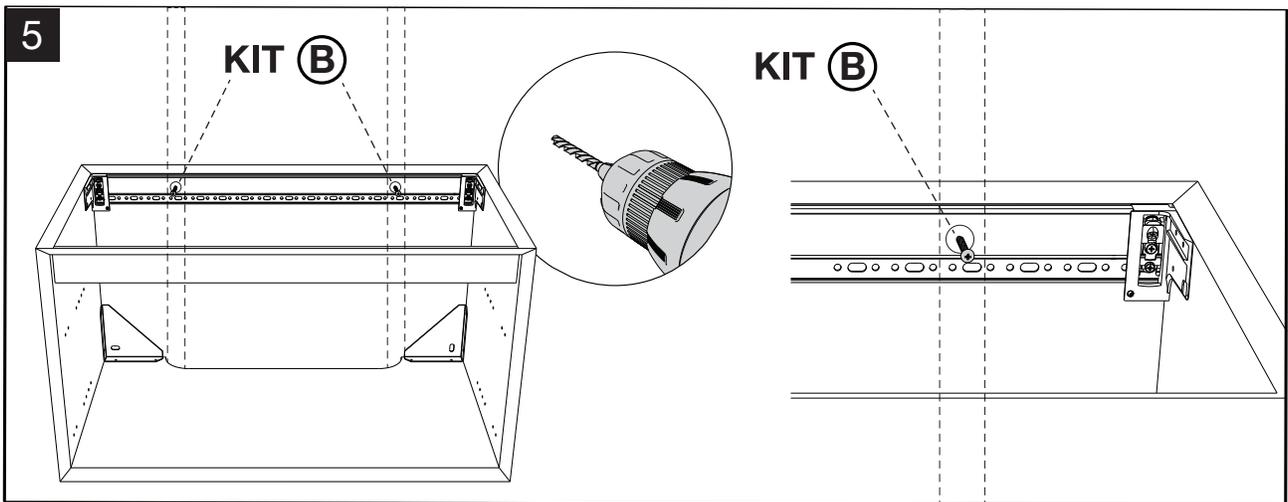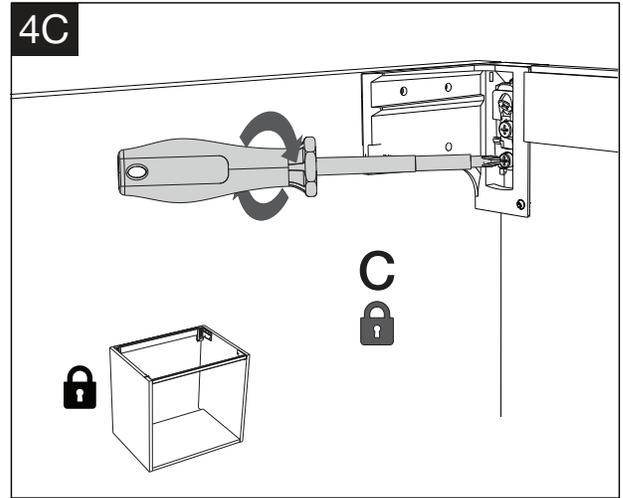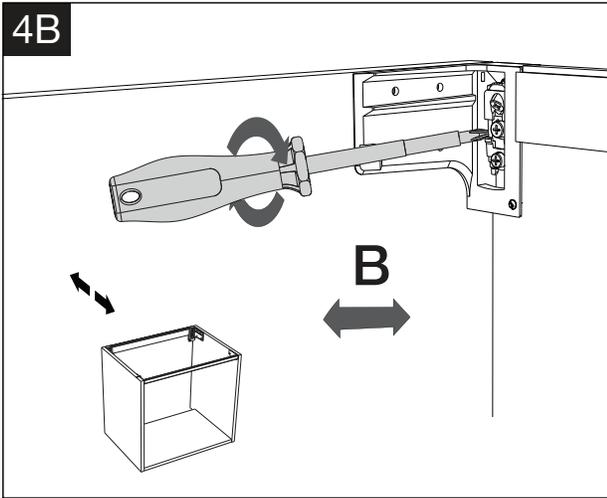

## How to Hook the Drawer: 45° Vanity + 45° FENIX Vanity

A. Pull the drawer glides/sliders

B. Place the drawer on the glides/sliders and press the bottom until full closure

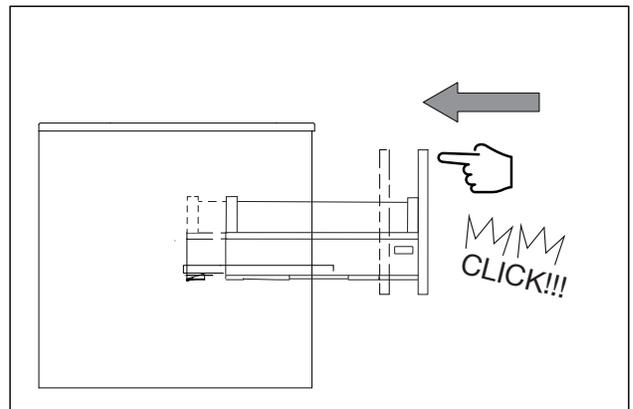
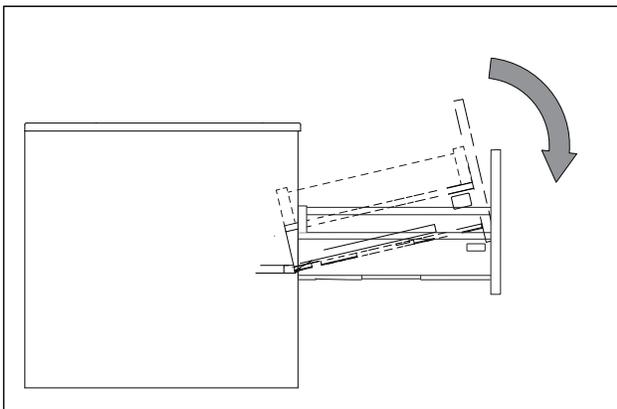


## Adjust the Front of the Drawer: 45° FENIX Vanity

**P** Remove the side plates

**A** To move the front to the right or to the left release the bolts on the bottom (X) and turn the screw on the right side of the tray with a screwdriver

**B** To move the front up and down turn the rings placed on the two sides of the drawer



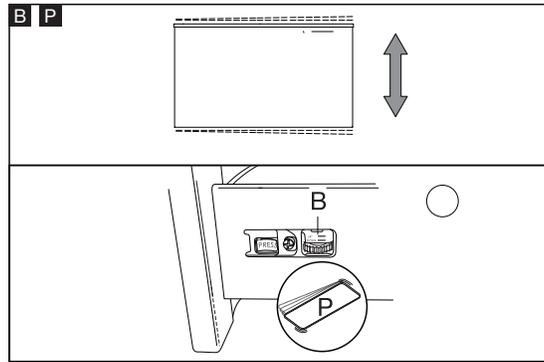
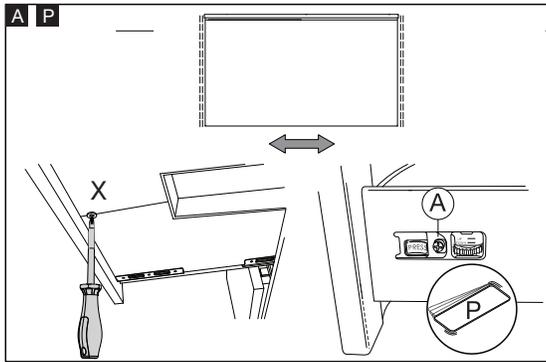


## Version with Glass Sides: 45° FENIX Vanity

**C1|C2** To tilt the front panel, remove the inner plates (P) of the drawer and operate on the adjusting screws using a screwdriver, as shown in the drawing (C2)


**C3** After regulation, replace the plate (P)

**!** Caution!!! In case of removal of the tray with glass sides, take care to take it on the metal part, as shown in the drawing

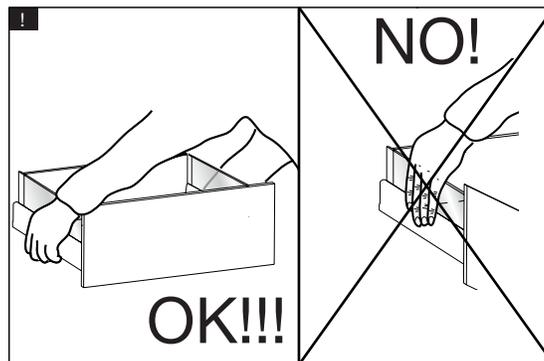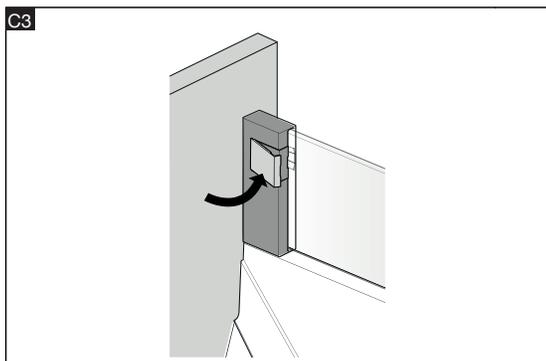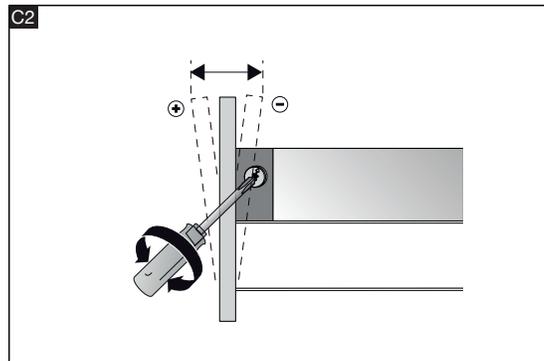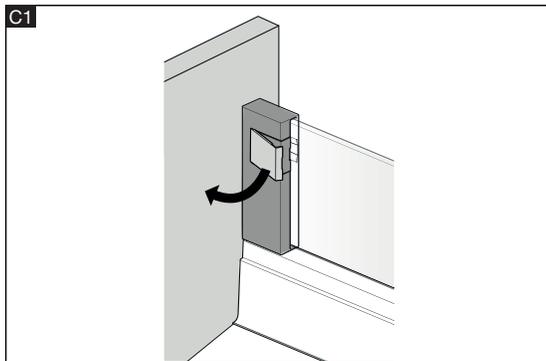


## Adjust the Drawer/Front Panel: 45° Vanity

To set the drawer height rotate the ring nuts placed inside the release system of the drawer

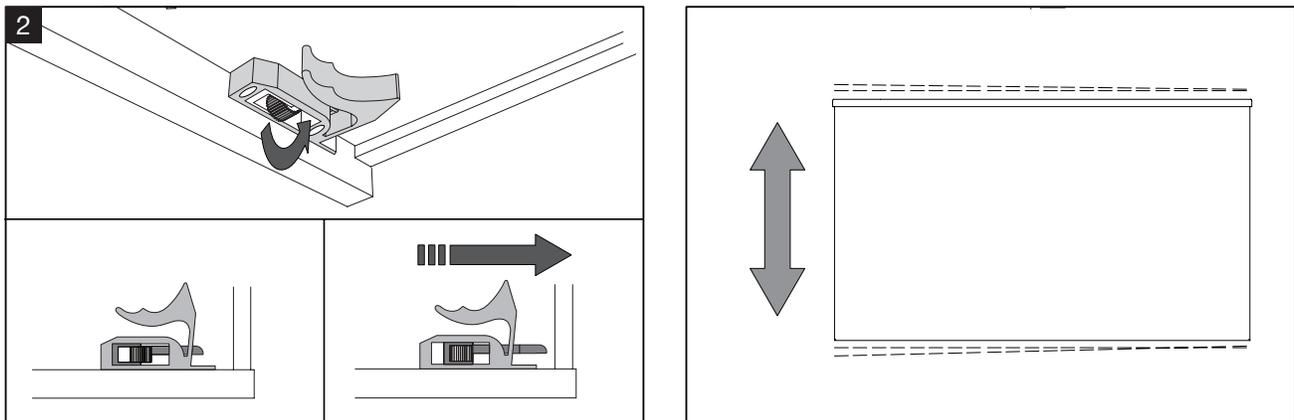

## How to Unlock the Front: 45° Vanity

To release the front first loosen the eccentric screw on the bottom side of the drawer (A), then remove the screws that secure the release system to the front (B) and finally unlock the eccentric screws placed in the side panels of the drawers (C)

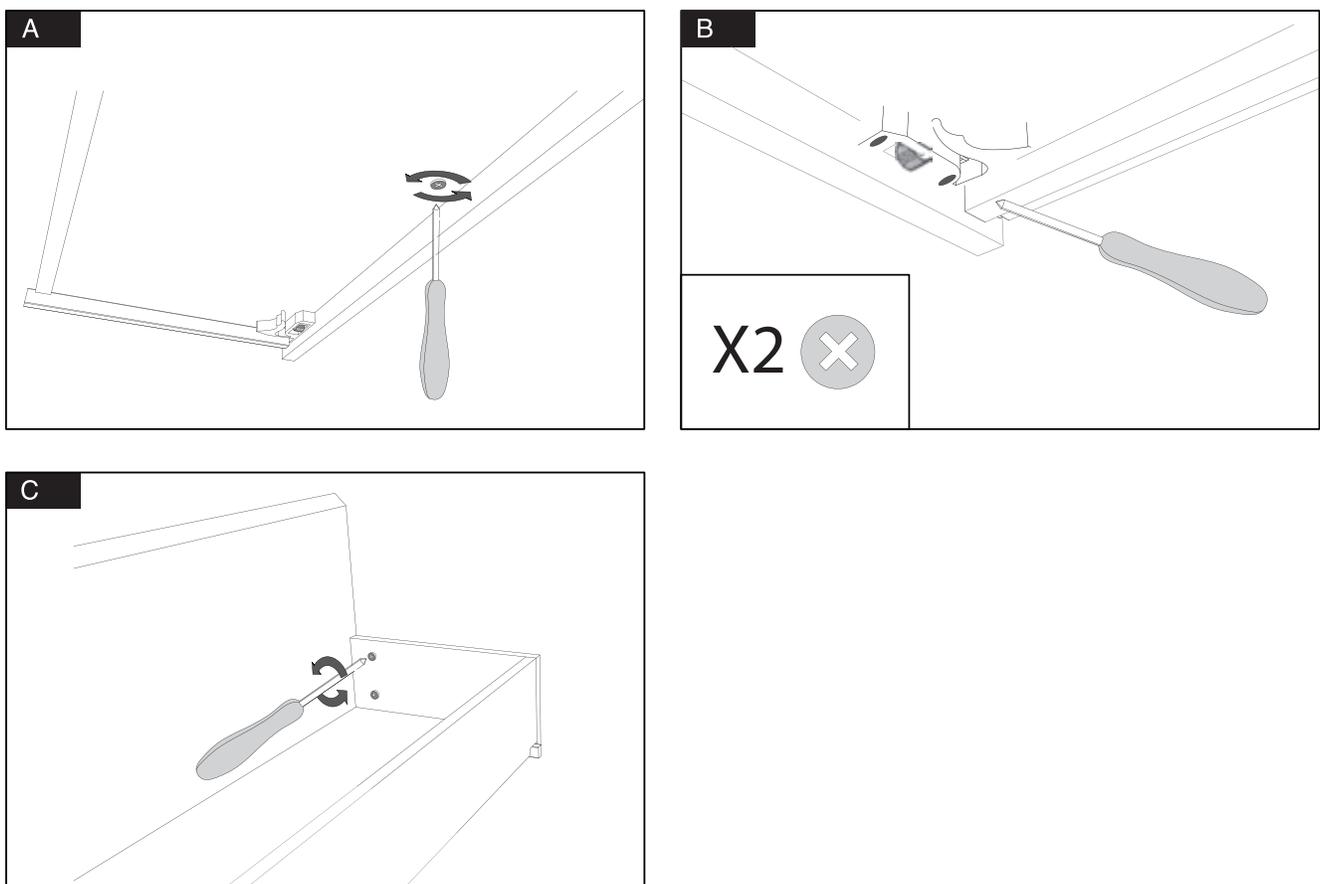

# Care and Maintenance

## Wood finish

Clean with a soft cloth or humid non-abrasive sponge using neutral and non-abrasive detergents. Rinse the surface carefully after cleaning. Do not use aggressive chemical solvents, such as acetone and trichloroethylene. In case of persistent stains, use a soft cloth and neutral soap. We recommend testing any product on the internal side of the surface, e.g. in a corner, before using it on the outer surface. Accurately dry the surfaces after use.

## Lacquered finish

Clean with a soft cloth or humid non-abrasive sponge using neutral and non-abrasive detergents. Rinse the surface carefully after cleaning. Do not use aggressive chemical solvents, such as acetone and trichloroethylene. In case of persistent stains, use a soft cloth with neutral soap or products suitable for cleaning windows only on glossy lacquered surfaces. Do not use ammonia. We recommend testing any product on the internal side of the surface, e.g. in a corner, before using it on the outer surface. Accurately dry the surfaces after use.