


Installation Instructions

2484 Towel Dispenser

Semi-Recess and Recess-Mounted Unit

NOTE: Surface-mounted towel dispenser is Model 2483 (refer to installation manual, part no. P20-137 for surface-mounted unit).


NOTE: Coordinate installation with architect and contractor to avoid protrusion from opposite wall, pipes vent, conduits, electrical wiring etc. in wall. Grounding is recommended for plaster wall installation. If installing where unit projects above top of wainscot, provide aluminum channel or other filler to prevent gap from finished wall and flange of unit. For block walls, use metal expansion shields (not provided).

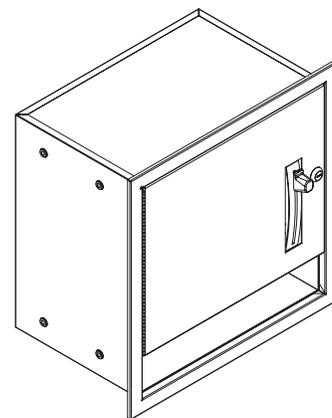

1. Provide the wall opening per dimensions shown in Figure 1.
2. Position the unit into the opening, unlock the door.

NOTE: Shims may be required to prevent distortion when positioning the unit into the wall opening. Place shims at the mounting holes between the outside of the unit and the wall before securing the towel/waste unit.

3. Secure the unit to wall through the concealed mounting holes provided with the four #10 screws supplied.

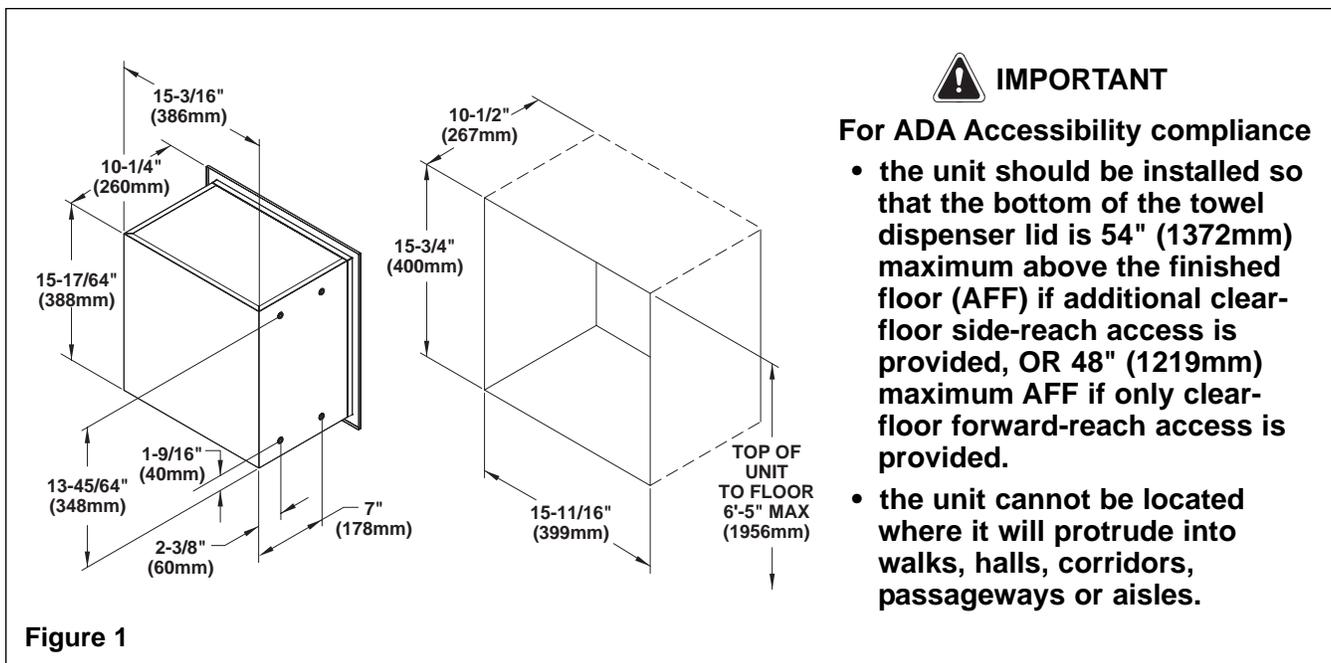

IMPORTANT

For ADA Accessibility compliance

- the unit should be installed so that the bottom of the towel dispenser lid is 54" (1372mm) maximum above the finished floor (AFF) if additional clear-floor side-reach access is provided, OR 48" (1219mm) maximum AFF if only clear-floor forward-reach access is provided.
- the unit cannot be located where it will protrude into walks, halls, corridors, passageways or aisles.