

# SH-003-XX

(XX = Series Style for CF Faucets Sets)  
**WaterSconce™ Showerhead**  
**Installation Instructions**


**CALIFORNIA FAUCETS RECOMMENDS THAT ALL PLUMBING PRODUCTS BE INSTALLED BY A LICENSED PROFESSIONAL**

**IMPORTANT:** Read all instructions prior to installation and provide copy of instructions to consumer.

## 1 PREPARING WALL FOR SHOWERHEAD

**IMPORTANT:** It is the **RESPONSIBILITY** of the **INSTALLER** to provide a proper cross **SUPPORT (1)** and securely install supply **PIPE (2)** to provide adequate support for the showerhead.

- Securely mount a 2x4 cross **SUPPORT (1)** with front surface flush between studs in wall to provide proper support for showerhead quick connect and **PIPE (2)**
- Hole **OPENING (5)** shall be Maximum  $\varnothing 1-1/4"$
- Water supply** **PIPE (2)** shall be installed securely to 2x4 cross **SUPPORT (1)** using appropriate **Pipe Clamp**

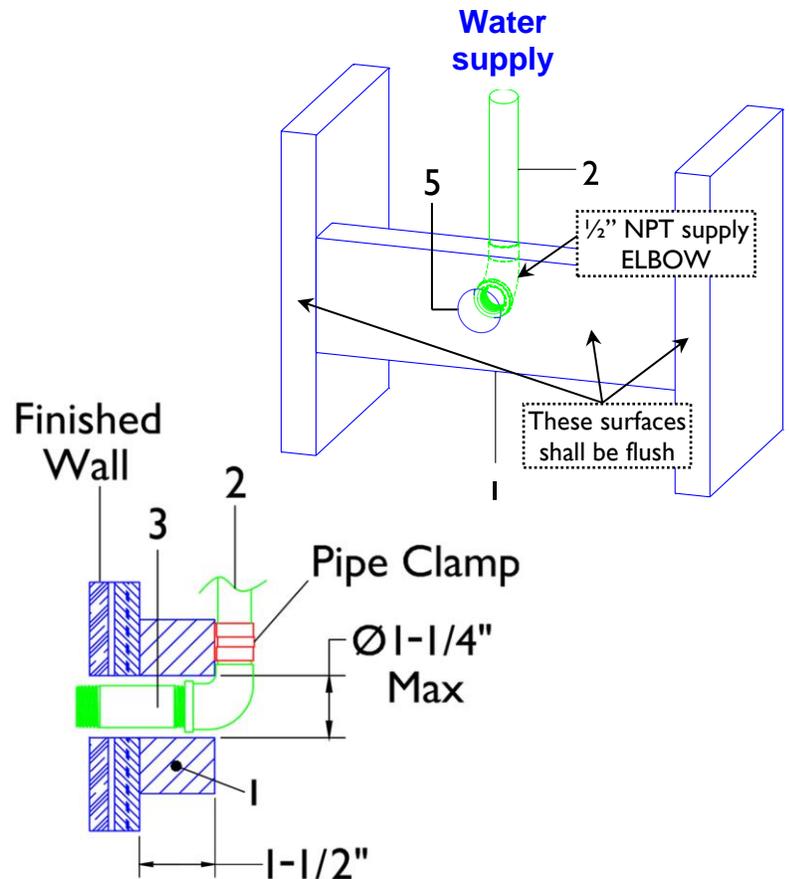


## 2 INSTALLING QUICK CONNECT

**NOTE:** Following is to be done when finished wall is completed.




- Apply 3 wraps of Teflon® **TAPE (6)** on appropriated length  $1/2"$  **NPT NIPPLE (3)** threads and thread into **QUICK CONNECT (4)**
- Apply 3 wraps of Teflon® **TAPE (6)** to other end of  $1/2"$  **NPT NIPPLE (3)** and insert through finished wall **OPENING (5)**
- Tighten **QUICK CONNECT (4)** to wall by using **KEY (7a)**
- Slide **FLANGE (8)** onto **QUICK CONNECT (4)**

**NOTE:** Before attaching showerhead, turn on shower and flush system for 2 minutes.

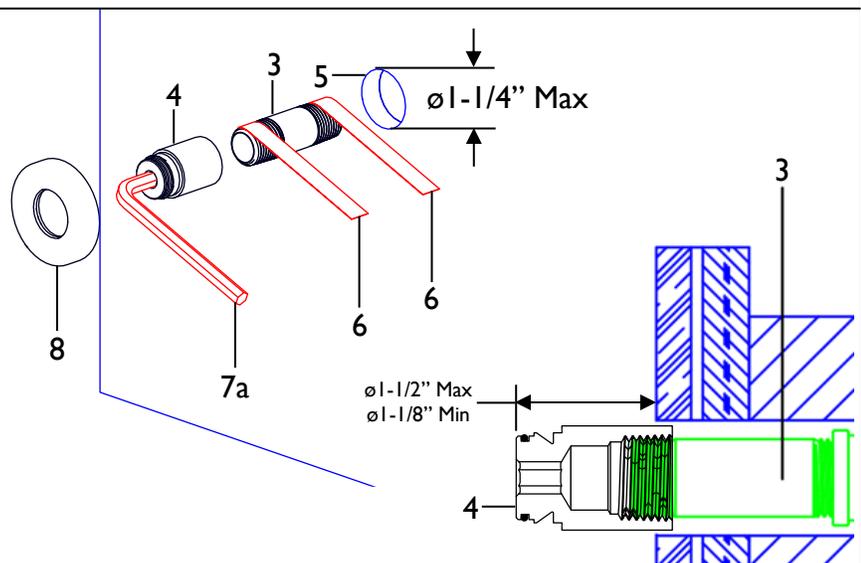

### 3 INSTALLING SHOWERHEAD

- Loosen SETSCREWS (10) using KEY (7b) and slide SHOWERHEAD (9) onto QUICK CONNECT (4)
- Align SHOWERHEAD (9) vertically and tighten SETSCREWS (10) using KEY (7b)

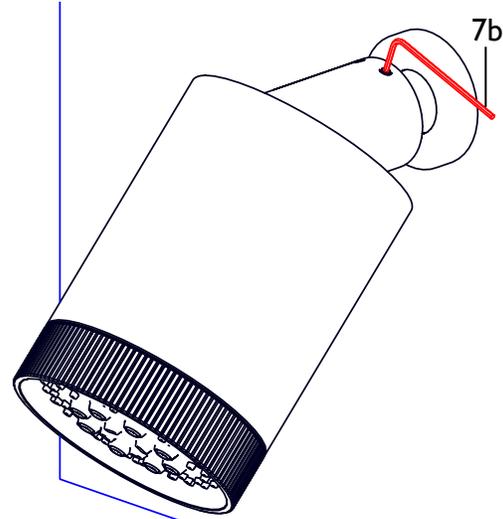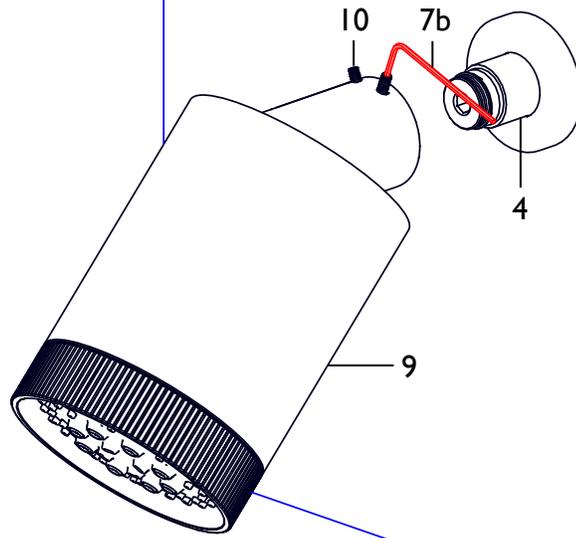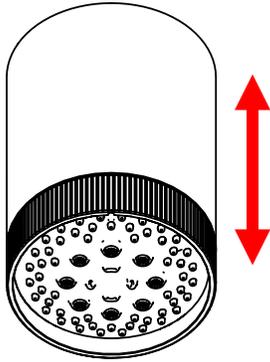

### 4 TESTING SYSTEM

- Turn on shower and rotate RING (9a) to test each function and check for leaks.

