
www.dawnusa.net

Quick Installation Instructions Model: Acadia Shower Set DSSAA01C (Chrome) • DSSAA04BN (Brushed Nickel)

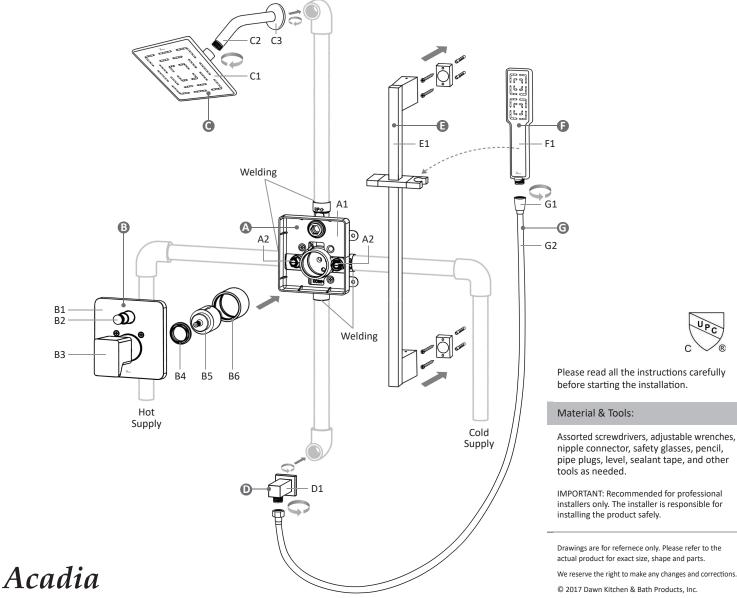

Shower Set Includes:

D1267300 Diverter Valve *

- A1. Main Body & Plastic Guard (remove plastic guard after water flush)
- A2. Fixing Nuts
- Screws
- Socket Spanner

₿

D0040701 (C/BN) Diverter Trim *

- B1. Cover Plate
- B2. Diverter Button (switches between rainhead or handshower)
- B3. Handle
- B4. Cartridge Nut
- B5. Cartridge
- B6. Cartridge Cover
- Screws

HSS0920100-6 (C) HSS0920400-6 (BN)

- 6" Rainhead
- C1. Main Body
- FilterRestrictor

SRT010100 (C) SRT010400 (BN) 6" Arm & Flange

C2. 6" Arm C3. Flange

WCA050100 (C) WCA050400 (BN) Elbow

- D1. Main Body
- Nipple Connector (not included) is required to connect between elbow and water pipe

(3

R41010100 (C) R41010400 (BN) 27" Slide Bar

- E1. Main Body
- Screws
- Screw Anchors
- Wall Brackets
- Alley Key

G

HS0810101 (C) HS0810401 (BN) Handshower

- F1. Main Body
- Filter
- Restrictor

HF0400160 (C) HF0400460 (BN) PVC Hose

- G1. Connectors (both ends)
- G2. Hose

^{*} Please refer to the "Installation Instructions - Pressure Balancing Shower and Bath Valve/Trim" (included in this package) for complete step by step instructions regarding Valve/Trim installation.