


## Quick Installation Instructions

### Model: Yosemite Shower Set

DSSYE01C (Chrome) • DSSYE04BN (Brushed Nickel)

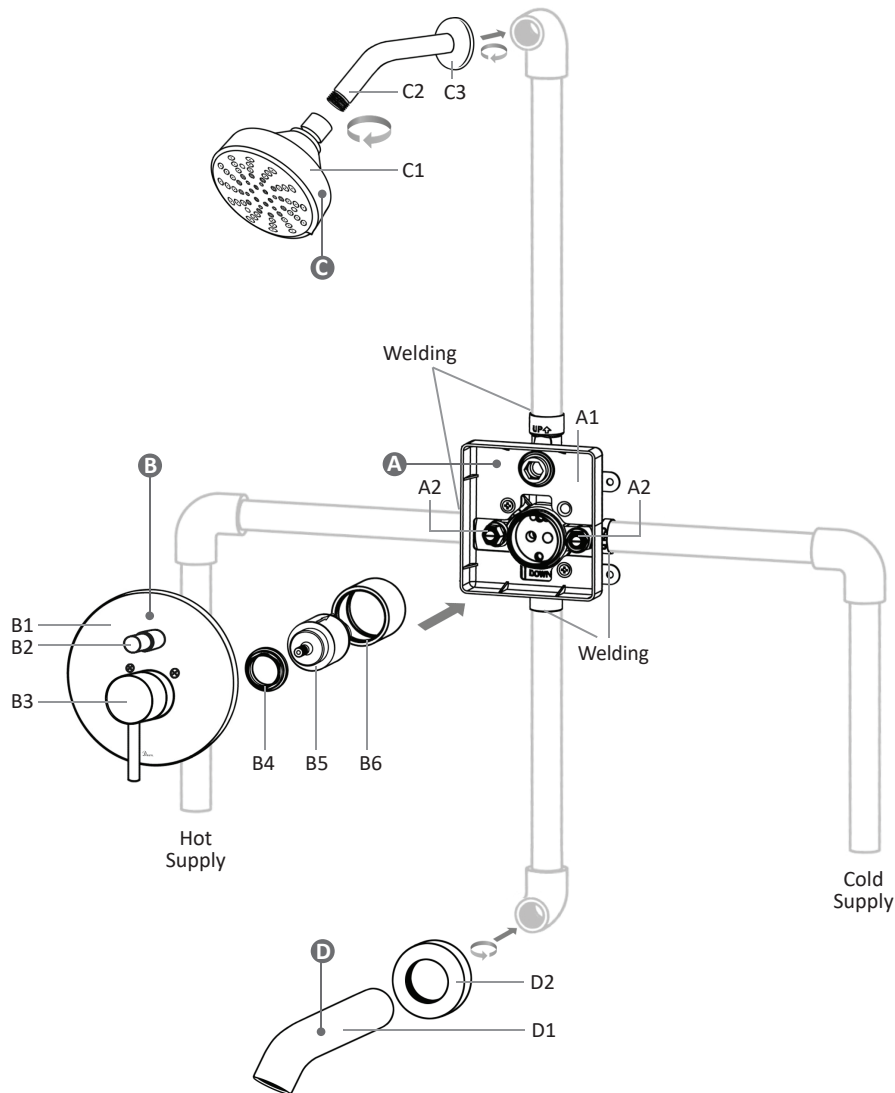

Please read all the instructions carefully before starting the installation.

#### Material & Tools:

Assorted screwdrivers, adjustable wrenches, nipple connector, safety glasses, pencil, pipe plugs, level, sealant tape, and other tools as needed.

**IMPORTANT:** Recommended for professional installers only. The installer is responsible for installing the product safely.

Drawings are for reference only. Please refer to the actual product for exact size, shape and parts.

We reserve the right to make any changes and corrections.

© 2017 Dawn Kitchen & Bath Products, Inc.

## Yosemite

### Shower Set Includes:

#### **A** D1267300 Diverter Valve \*

A1. Main Body & Plastic Guard  
(remove plastic guard after water flush)

A2. Fixing Nuts  
— Screws  
— Socket Spanner

#### **B** D2222301 (C/BN) Diverter Trim \*

B1. Cover Plate  
B2. Diverter Button  
(switches between showerhead or handshower)

B3. Handle  
B4. Cartridge Nut  
B5. Cartridge  
B6. Cartridge Cover  
— Screws

#### **C** SH0160100 (C) SH0160400 (BN) Showerhead

C1. Main Body  
— Filter  
— Restrictor

SRT010100 (C)  
SRT010400 (BN)  
6" Arm & Flange

C2. 6" Arm  
C3. Flange

#### **D** D3217401 (C) D3217401 (BN) Tub Spout

D1. Main Body  
D2. Flange

• Nipple Connector (not included) is required to connect between elbow and water pipe

\* Please refer to the "Installation Instructions - Pressure Balancing Shower and Bath Valve/Trim" (included in this package) for complete step by step instructions regarding Valve/Trim installation.