


# Dawn® Shower Niche Installation Instructions

## (for Stainless Steel Finished Niches)

### PREPARATION

- Installation instructions are for reference only. Products should be installed by professionals only. Before installing any products in your new or remodeled home, please make sure that you are in compliance with all local plumbing codes and regulations.
- Please check the condition of the product and its components prior to installation. Some items may be missing or sold separately. If there is any problem with the product and/or its components, please contact the store you purchased it from for a replacement. When you have finished inspecting the product, please return it to its original packaging until you are ready to install.

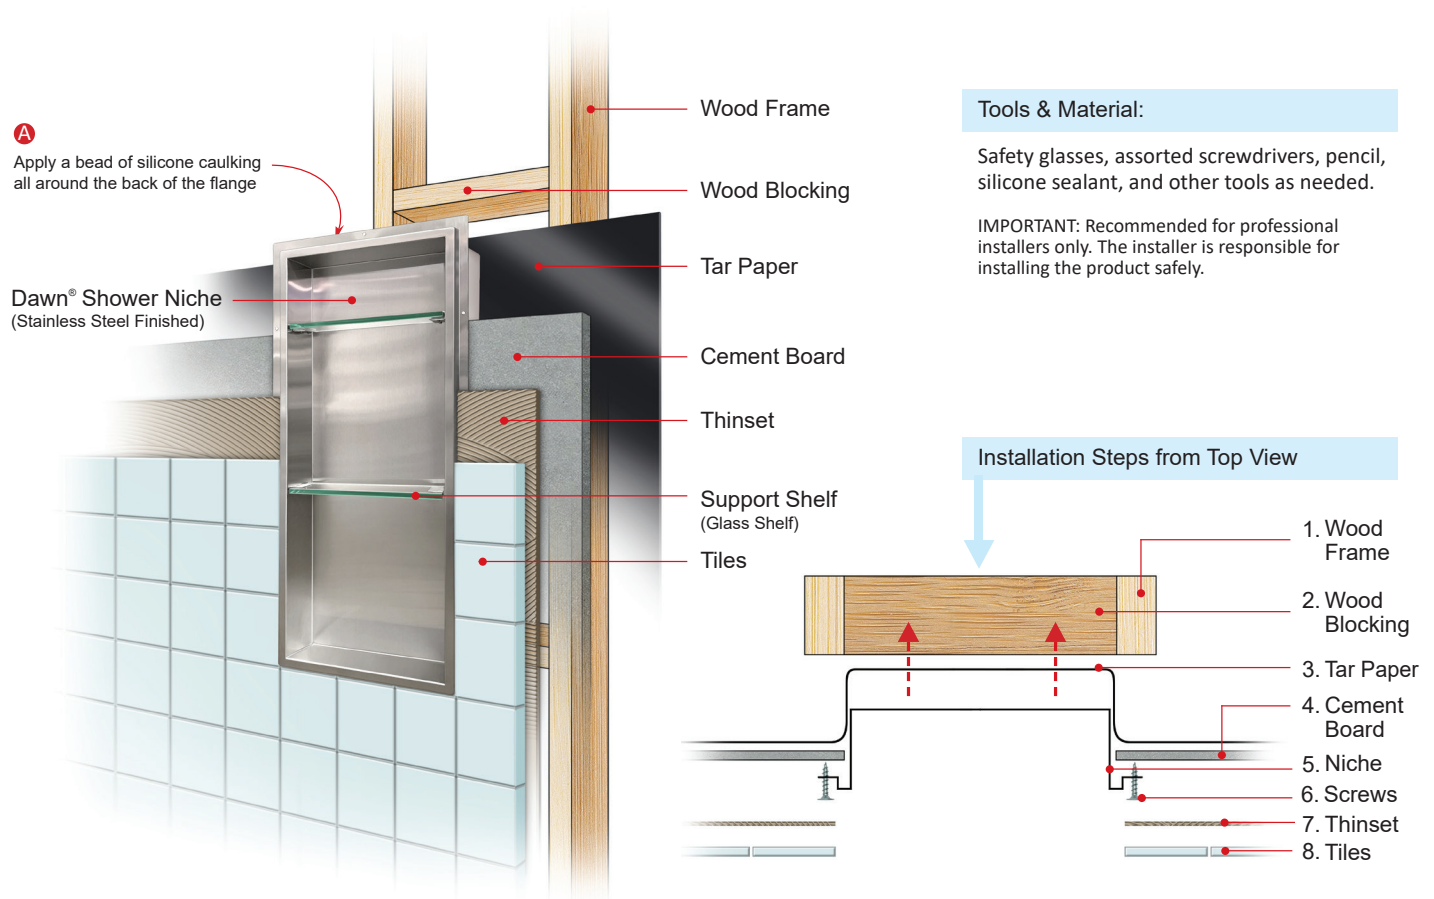

### INSTALLATION

- Locate desired position. Level and build wood frame and wood blocking according to your Niche measurements. Install tar paper and cement board on your walls.
- Locate frame and place Niche against the cement board. Make sure the Niche is level. Proceed by tracing around Niche onto the cement board. Cut the traced portion allowing 1/4" along the outside for adjustments.
- Apply a bead of silicone caulking all around the back of the flange (see A) and place it in the cut out. Once you have made sure it is level, fasten the Niche by screwing it to the cement board.
- Spread thinset from flange to the cement board to ensure the wall is flat and smooth. The Niche is now ready for tile installation.

\* Glass Shelf/Shelves are included for the 59" (3 pcs), 42" (2 pcs), 36" (2 pcs), 32" (2 pcs), 24" (1 pc), and 18" (1 pc) models.



**Kitchen & Bath Products, Inc.**

Toll-Free 877.329.6872 • Fax 510.723.0099 • [dp@dawnusa.net](mailto:dp@dawnusa.net) • [www.dawnusa.net](http://www.dawnusa.net)

We reserve the right to make any changes and corrections.  
No parts of this document may be reproduced in any form without the prior written permission of Dawn Kitchen & Bath Products, Inc.  
© 2019 Dawn Kitchen & Bath Products, Inc. All Rights Reserved.

