
INSTALLATION INSTRUCTIONS

Randall[®] **Handle Trim Kits** for Straight Wall Valves

Cross Handle Model D35102740 Lever Handle Model D35102700 To be used with D35000710.191 - 1/2" Rough Valve D35000700.191 - 3/4" Rough Valve

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

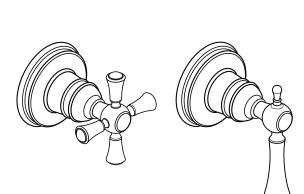

() E Phillips Screwdriver


-0IE


Flat Blade Screwdriver

RECOMMENDED TOOLS AND MATERIALS


Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.







ROUGHING-IN DIMENSIONS:

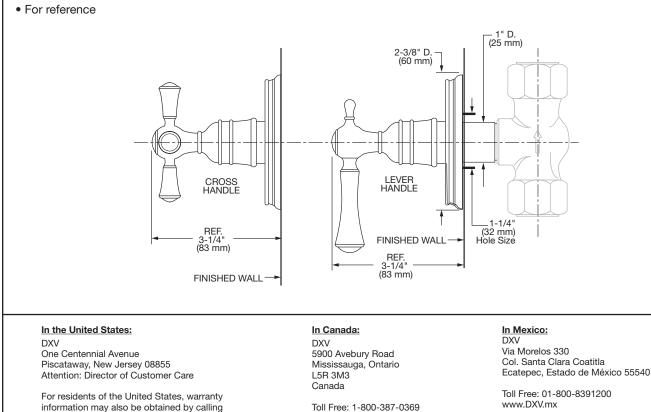

ш

www.DXV.com

the following toll free number: (800) 227-2734

Local: 905-306-1093 Fax: 1-800-395-1498

www.DXV.ca



1 INSTALL VALVE TRIM

CAUTION Turn off hot and cold water supplies before beginning.

- Install WALL VALVE (8) per roughing-in dimensions.
- Twist and pull off PLASTER GUARD (7).
- Place BARREL SLEEVE (1) over VALVE STEM (2) and thread tight onto VALVE (3).
- Apply sealant to groove on back side of ESCUTCHEON (4). Slide ESCUTCHEON (4) onto BARREL SLEEVE (1) flush against finished wall to cover wall opening.
- With VALVE in off position align HANDLES (6, 6a) as shown or as desired. Install HANDLES (6, 6a) onto VALVE STEM (2). Thread BONNET NUT (5) onto BARREL SLEEVE (1) until it seats tight against the internal stop.

