

Port Alone

700FJFCP_

1.7

VISUAL COMFORT & Co.

MODERN COLLECTION

GENERAL PRODUCT INFORMATION:




This product is suitable for indoor dry locations only.

Prior to the steps below, make sure that the remote transformer(s) and all power connections are installed according to local electrical codes.

This instruction shows a typical installation.




Running the Power from the Remote Transformer(s) to the Ports

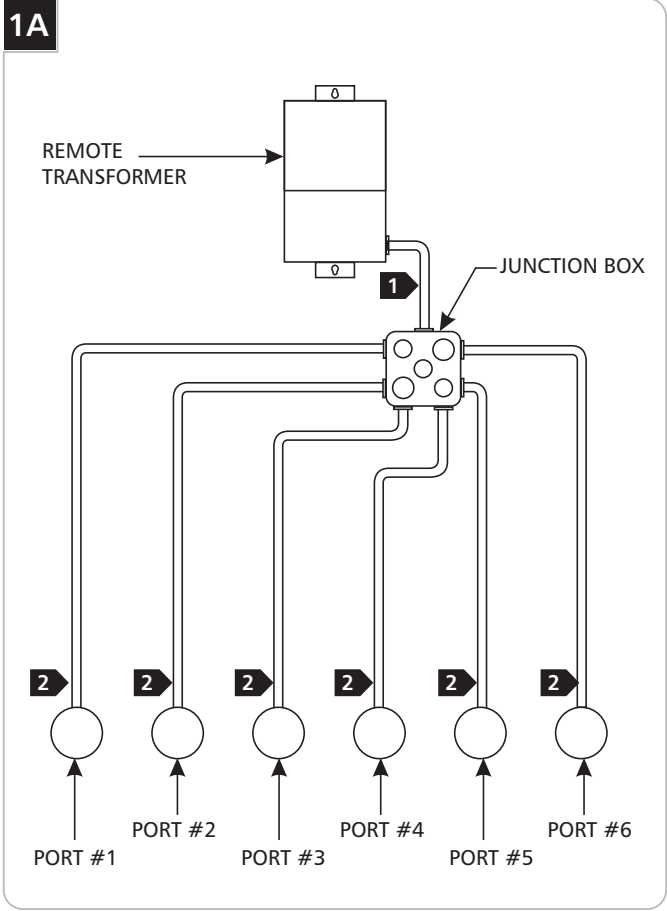


- 1 Run the power from the remote transformer to a junction box, refer to the voltage drop chart provided with the remote transformer instruction. For 600 watt remote transformer with dual circuit breakers, an electrical box for each circuit will be required.
- 2 Branch the power from the junction box to each port. For recommended wire size, refer to the chart below.
Note that each power branch should be a maximum length of 20'.

Transformer Voltage	Transformer Wattage	Wire Size For 20W Port	Wire Size For 50W Port	Wire Size For 75W Port
12V	150W	#14 GA	#12 GA	#10 GA
12V	300W	#14 GA	#12 GA	#10 GA
24V	300W	#18 GA	#18 GA	#16 GA

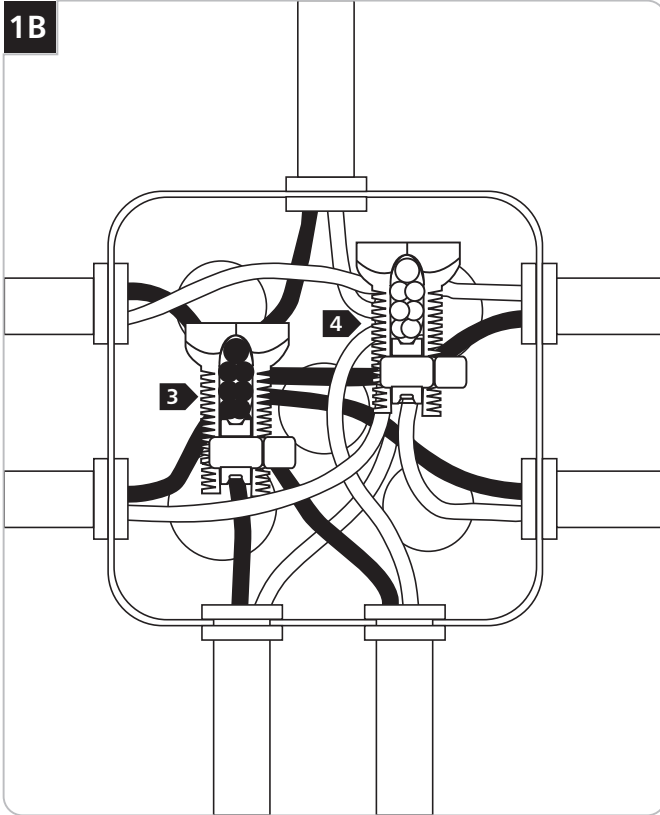


- 3** Using a split bolt connector, connect the low voltage hot wire coming from the remote transformer to each hot wire going to the ports.
- 4** Connect the low voltage common wire coming from the remote transformer to each common wire going to the ports.
- 5** Make sure that the split bolt connectors are properly insulated.


Installing the Single Port Alone

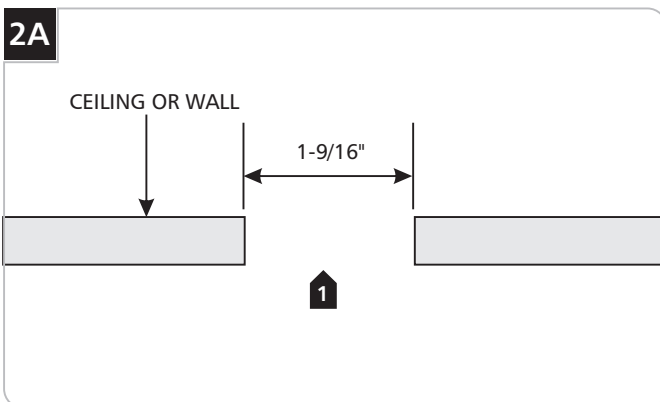


- 1** Use a 1-9/16" hole saw to cut out the ceiling or wall where the ports are going to be installed.

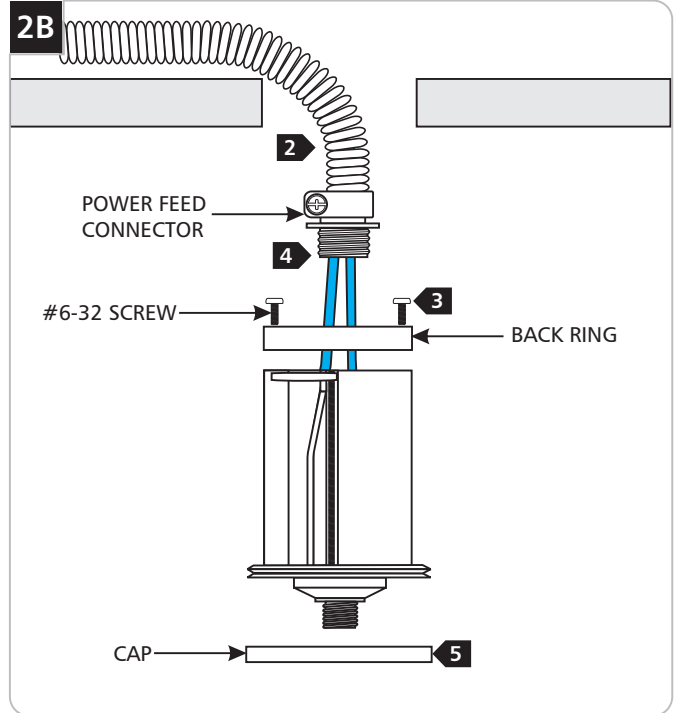


- 2** Bring the power out of the hole.
- 3** Unscrew the #6-32 screws to remove the back ring.
- 4** Screw the back ring (from the face with two holes) to the power feed connector.
- 5** Unscrew the cap from the port.

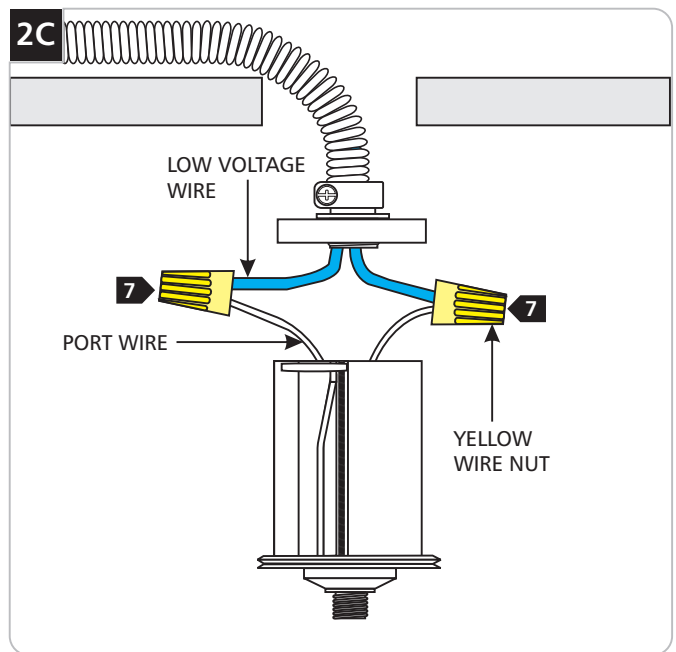


- 6** Cut the port wires so that 1-1/2" of it is exposed.
- 7** Strip the port wires and connect them to the low voltage wires with the provided yellow wire nuts.

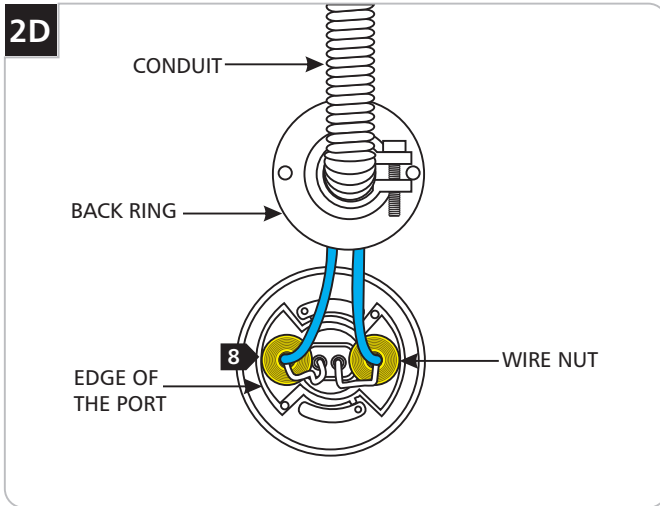


- 8** Place the wire nut connections and the port wires properly inside the port. Make sure that the port and low voltage wires are cleared from the edge of the port.

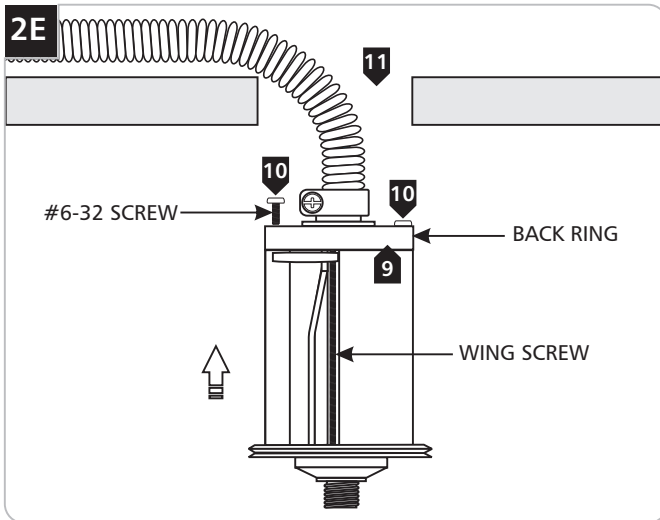

- 9** Replace the back ring onto the port so that end of the wing screws are properly place into the two blind holes.
- 10** Replace and tighten the #6-32 set screws to secure the back ring onto the port.
- 11** Push the port completely into the hole.

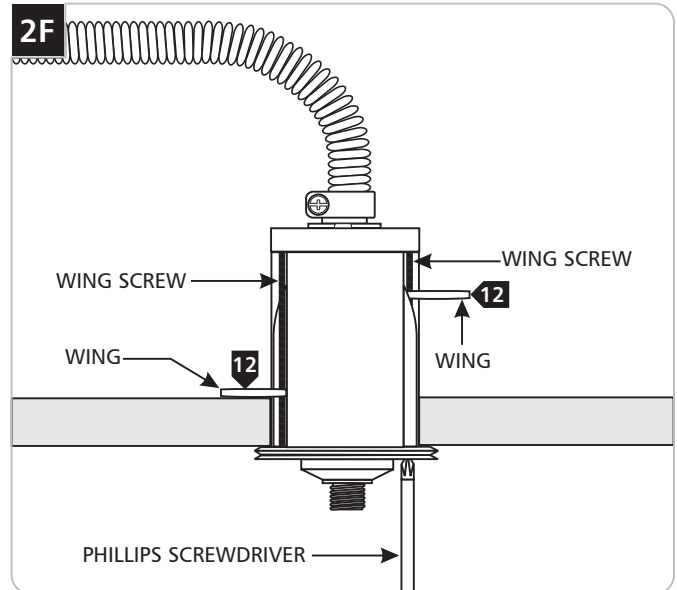


- 12** Tighten the two phillips screws with a Phillips screwdriver (an electrical screwdriver will speed up the process) until the wings secure the port into the hole.

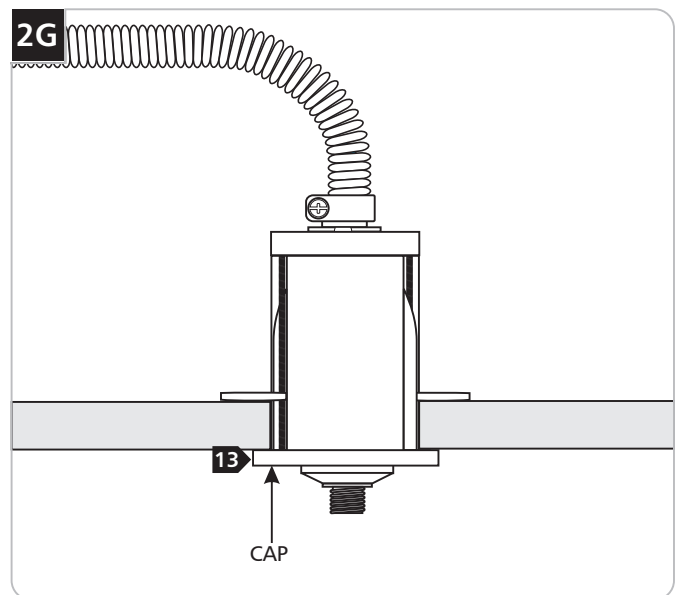

- 13** Replace and tighten the cap.
- 14** Repeat steps 1 through 13 for each port.

Connecting the FreeJack Fixture to the FreeJack Port

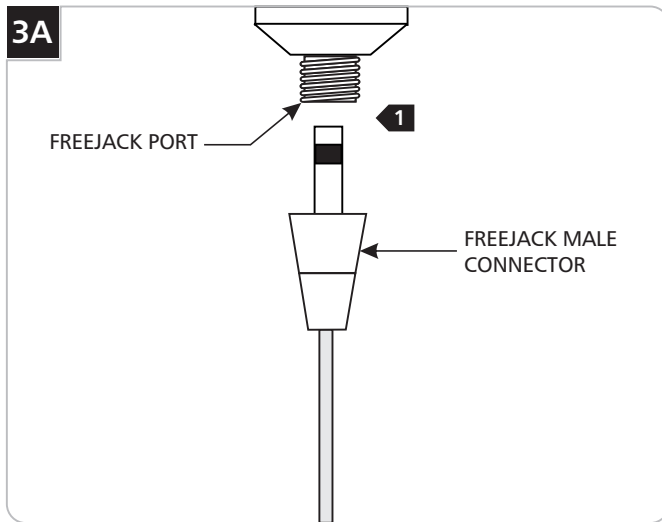

- 1 Tighten the fixture FreeJack male connector completely into the FreeJack port.

SAVE THESE INSTRUCTIONS!

VISUAL COMFORT & CO.

7400 Linder Ave, Skokie, IL 160077

800.969.3347

www.visualcomfort.com

©2023 Visual Comfort & Co.. All rights reserved. The Visual Comfort & Co. logo is a registered trademark of Visual Comfort & Co. Visual Comfort & Co. reserves the right to change specifications for product improvements without notification