

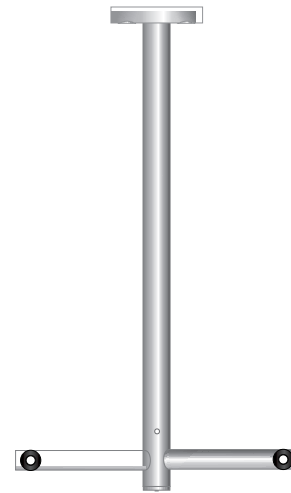
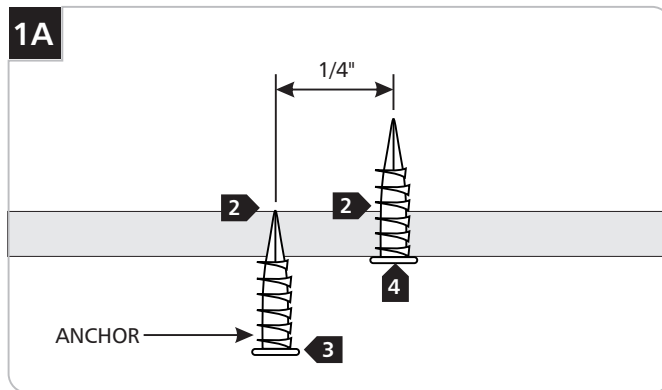
Rigid T Standoff**700KTSO_****1.7****VISUAL COMFORT & Co.**

ARCHITECTURAL COLLECTION

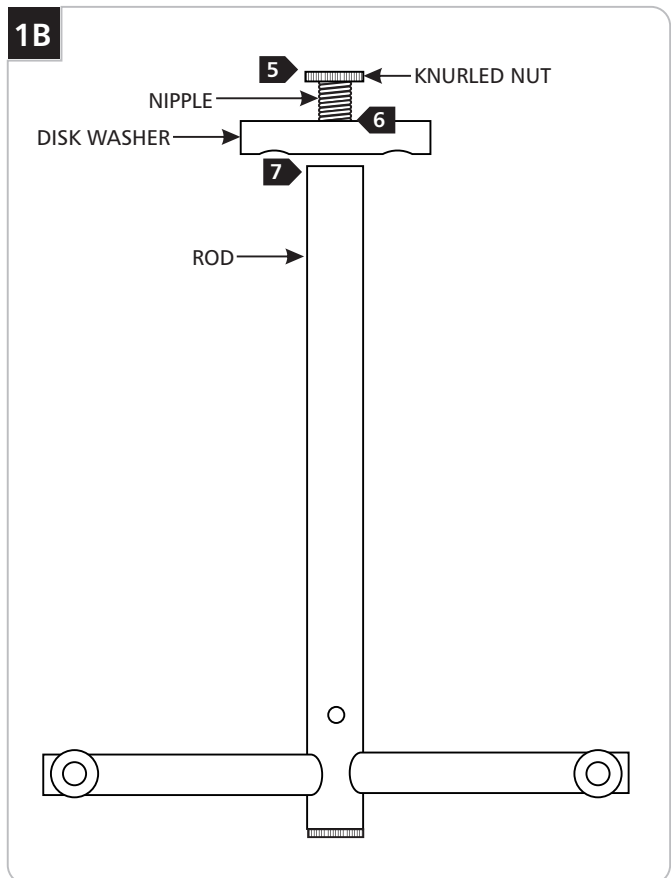
GENERAL PRODUCT INFORMATION:

This product is suitable for indoor dry locations only.

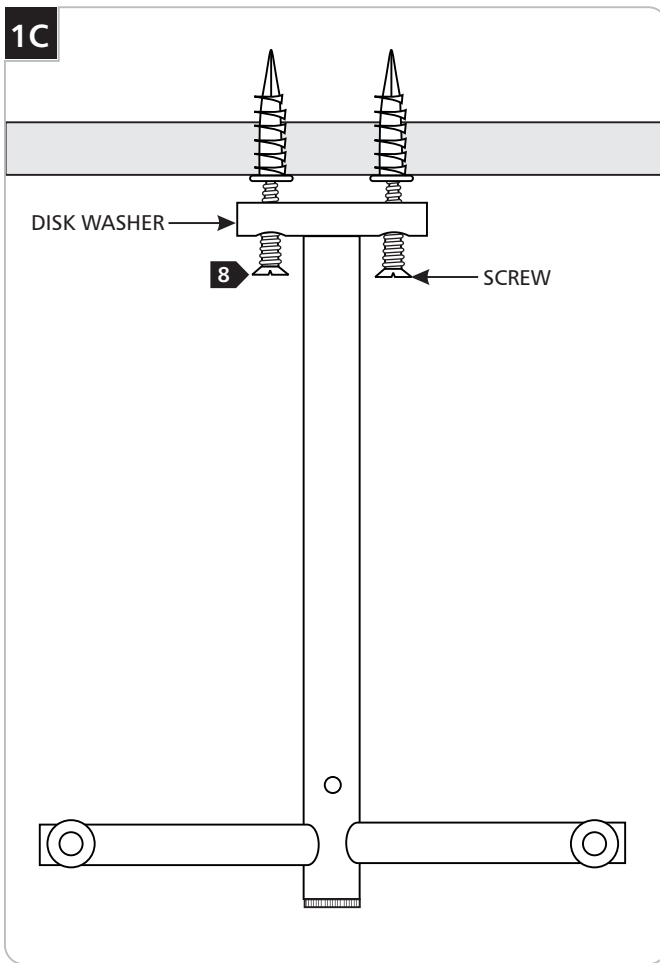
This product is for ceiling mount only and must be mounted in the center, between the Kable Lite cables.

**1A**

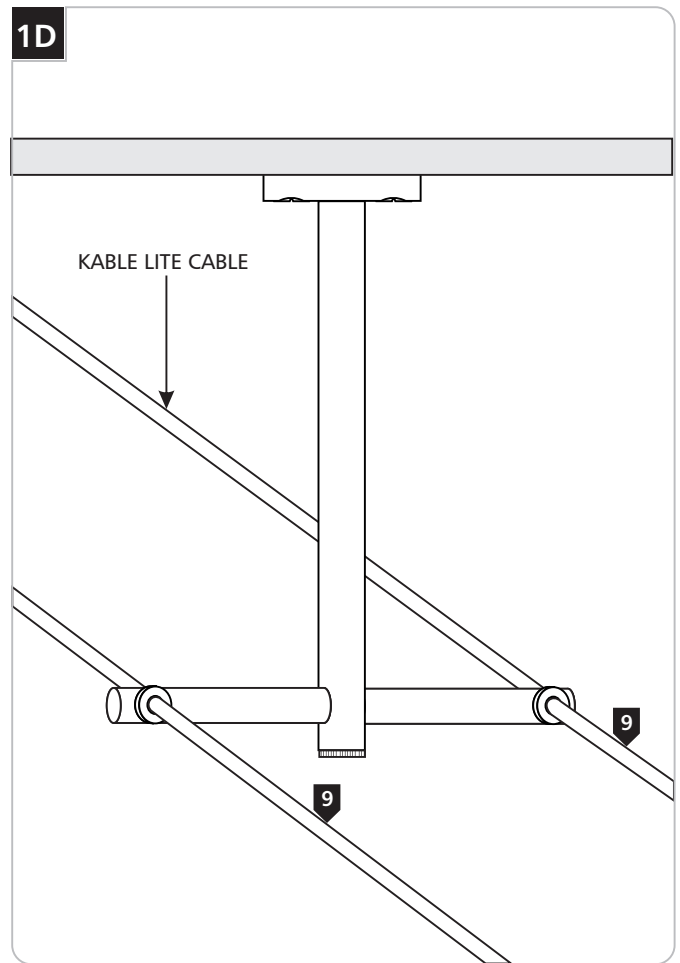
- 1** Select the location on the ceiling where the standoff is to be mounted.
- 2** Mark the two point on the ceiling 1-1/4" apart for the anchors.
- 3** Tap the anchors at the marked points into the ceiling.
- 4** Screw the anchors in the rest of the way with a Phillips screwdriver.

1B

- 5** Screw the knurled nut to the 1/8" threaded nipple. Make sure that the end of the nipple is flush with the top edge of the knurled nut.
- 6** Place the 1/8" nipple through the center countersunk hole of the disk washer.
- 7** Tighten the rod completely onto the nipple.

1C

- 8** Secure the standoff by screwing the disk washer to the anchor with the provided two #8 screws.

1D

- 9** Run the Kable Lite cables coming from the turnbuckles through the bushings on the separation bar for all standoffs used in the run.

SAVE THESE INSTRUCTIONS!