

T-Bar Connector

700MOTBAR_

1.8


VISUAL COMFORT & CO.

ARCHITECTURAL COLLECTION


GENERAL PRODUCT INFORMATION:



This product is used with rigid and adjustable MonoRail standoffs.

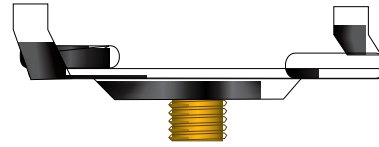


Install the T-Bar Connector

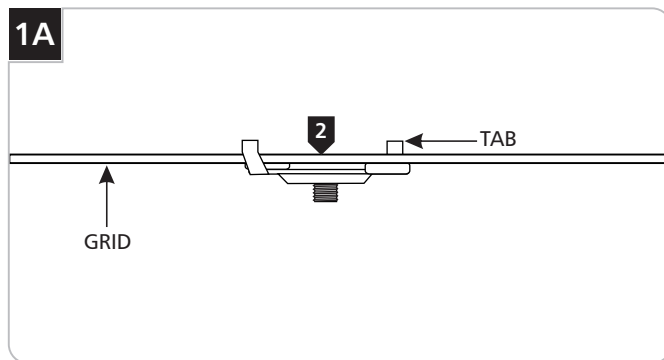


- 1** Select the locations on the grids where the standoffs will be mounted.
- 2** Push the T-bar connector flat section against the grid. Rotate the T-bar connector until the tabs on the T-bar connector snap behind the grid.

Install the 2" Rigid Standoff

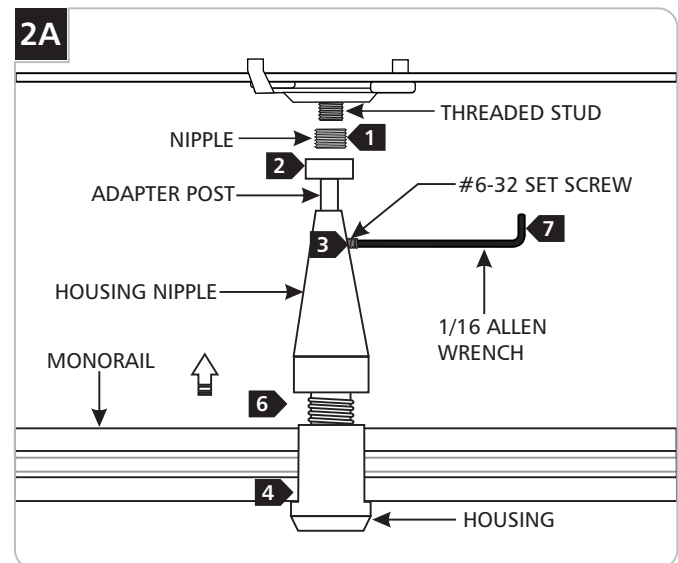


- 1** Screw the nipple to the threaded stud.
- 2** Screw the adapter post completely to the nipple.
- 3** Push the housing nipple onto the standoff adapter and tighten the #6-32 set screw on the housing nipple snugly with the 1/16 Allen wrench.
- 4** Put the MonoRail into the housing.
- 5** Loosen the #6-32 set screw on the housing nipple so that it can turn easy.
- 6** Screw the housing nipple to the housing tight by turning the housing nipple clockwise.
- 7** Tighten the #6-32 set screw on the housing nipple with the 1/16 Allen wrench.

Install the Rigid Standoff

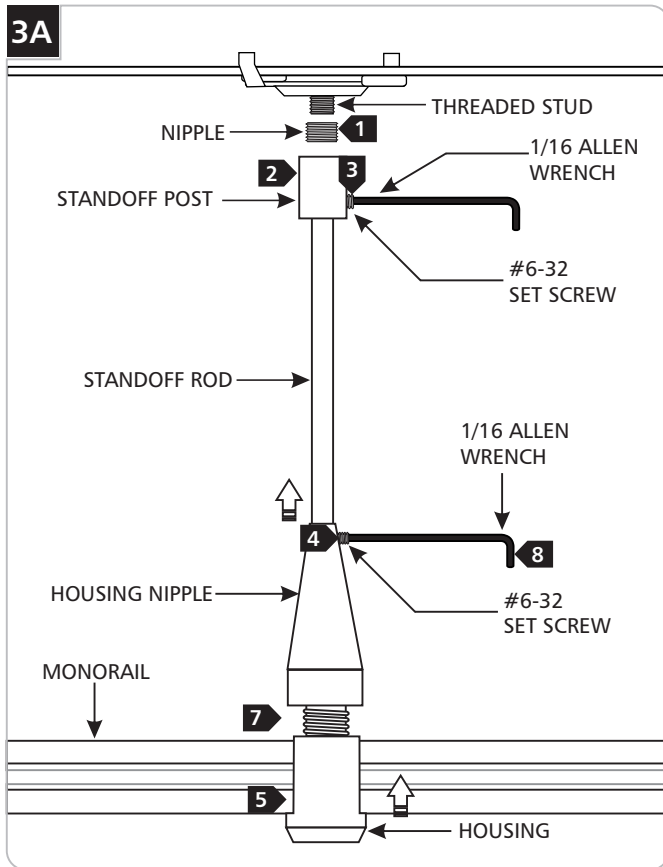

- 1** Screw the nipple to the threaded stud.
- 2** Screw the standoff post completely to the nipple.
- 3** Push the standoff rod completely into the standoff post and tighten the #6-32 set screw with the 1/16 Allen wrench.
- 4** Push the housing nipple onto the standoff rod and tighten the #6-32 set screw on the housing nipple snugly with the 1/16 Allen wrench.
- 5** Put the MonoRail into the housing.
- 6** Loosen the #6-32 set screw on the housing nipple so that it can turn easy.
- 7** Screw the housing nipple to the housing tight by turning the housing nipple clockwise.
- 8** Tighten the #6-32 set screw on the housing nipple with the 1/16 Allen wrench.

Install the Adjustable standoff

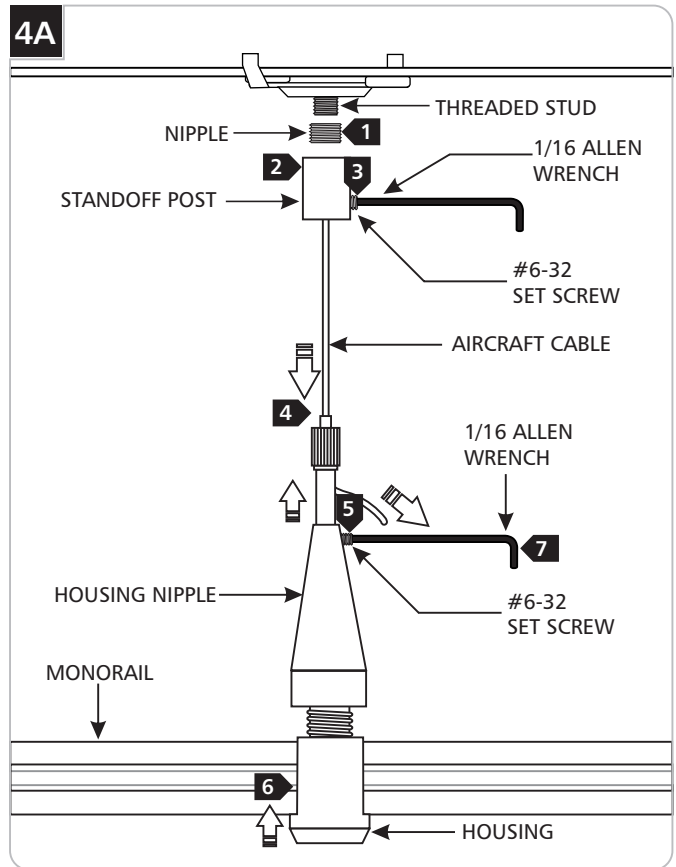

- 1** Screw the nipple to the threaded stud.
- 2** Screw the cable post completely to the nipple.
- 3** Feed the aircraft cable into the cable post and tighten the #6-32 set screw with the 1/16 Allen wrench.
- 4** Feed the aircraft cable into the wire grip by pushing the tab down and pulling the cable from the side hole of the post.
- 5** Loosen the #6-32 set screw on the housing nipple with the 1/16 Allen wrench so that it can turn easily.
- 6** Place the MonoRail into the housing and screw the housing nipple to the housing tight.
- 7** Tighten the #6-32 set screw with the 1/16 Allen wrench and trim off excess aircraft cable.

SAVE THESE INSTRUCTIONS!