


Installation Instructions-Door Knocker - Urn Style - 2620

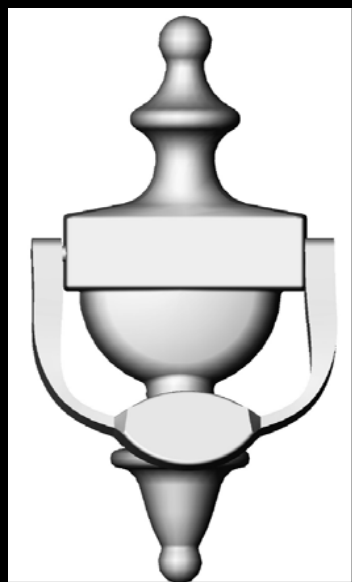

Install Thru Bolts

Thread Thru Bolts (Provided) onto Knocker Set Screws. Use Pliers to Ensure that Bolts are Secure.

Set Screws

Thru Bolts

Drill Holes In Door

Using Hole Template (Bottom of This Page) Drill Two Holes with a 5/16" Drill Bit.

5/16" Drill Bit

Hole Template

Knocker Installation

Knocker Installation

Tighten Screws

Countersunk Washers

