









ITEMS INCLUDED	TOOLS REQUIRED
WIRE NUT  X 4	PHILLIPS SCREW DRIVER
8-32 PAN HD SCREW  X 2	
6-32 PHL HD SCREW  X 2	
CROSSBAR  X 1	
M6 X 1 SKT HD SET SCREW  X 1	
3 MM HEX KEY  X 1	
GLASS SHADE  X 1	

INSTALLATION INSTRUCTIONS

4981

LIGHT

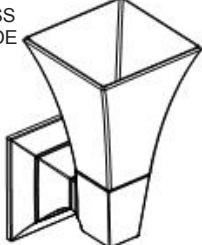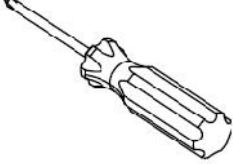GINGER
Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.GINGERCO.COM

GNG - 4981
EN-2749
 REV -


CAUTION: DISCONNECT POWER

Always shut off power when installing or repairing this, or any other electrical appliance. FAILURE TO DO SO MAY RESULT IN SEVERE INJURY OR DEATH Installation by a licensed electrical contractor recommended.


① REMOVE CROSSBAR

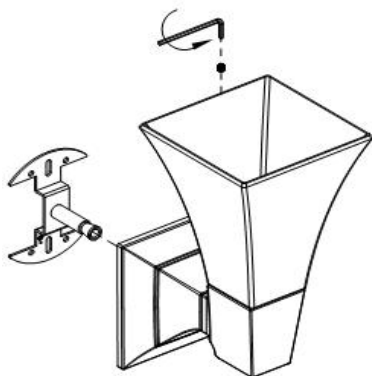


② MOUNT CROSSBAR TO ELECTRICAL BOX (NOT INCLUDED) USING #6 OR #8 SCREWS.

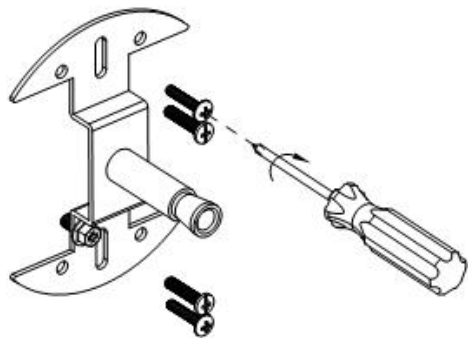


③ CONNECT GROUND WIRE

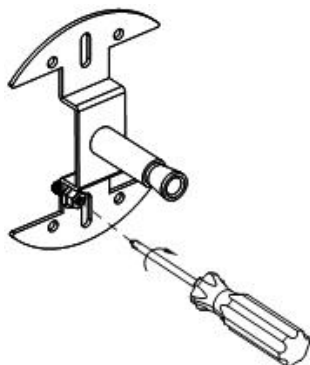

④ CONNECT WHITE WIRE TO WHITE WIRE WITH WIRE NUT. CONNECT BLACK WIRE TO BLACK WIRE WITH WIRE NUT.

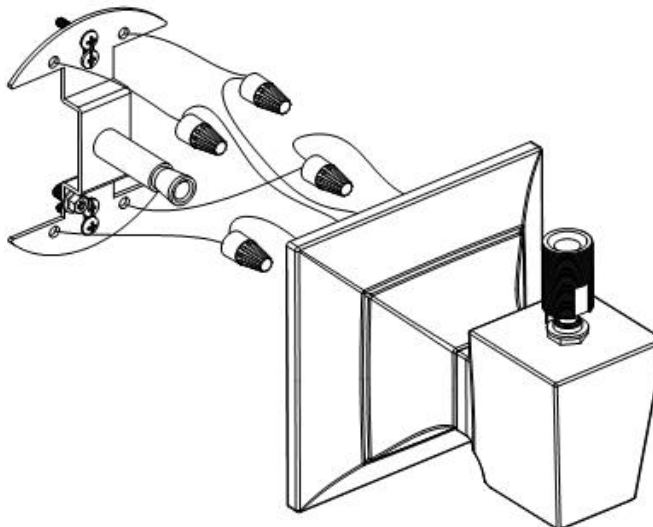

⑤ TIGHTEN SET SCREW

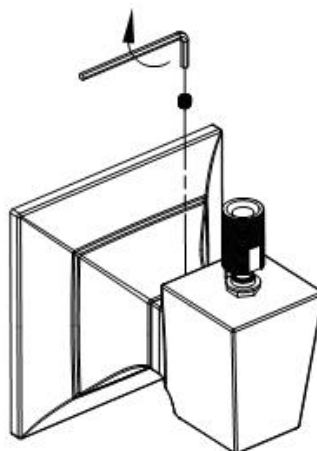

⑥ SECURE SHADE BY TIGHTENING THE NUT AGAINST THE SPACER

