
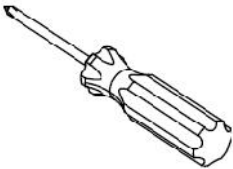








ITEMS INCLUDED		TOOLS REQUIRED
WIRE NUT	 X 4	PHILLIPS SCREW DRIVER 
8-32 PAN HD SCREW	 X 2	
6-32 PHL HD SCREW	 X 2	
CROSSBAR	 X 1	
M6 X 1 SKT HD SET SCREW	 X 1	
3 MM HEX KEY	 X 1	
GLASS SHADE	 X 1	

INSTALLATION INSTRUCTIONS

4881

LIGHT

GINGER
Luxury For Your Lifestyle™


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.GINGERCO.COM

GNG - 4881
EN-2086
REV -


CAUTION: DISCONNECT POWER

Always shut off power when installing or repairing this, or any other electrical appliance. FAILURE TO DO SO MAY RESULT IN SEVERE INJURY OR DEATH Installation by a licensed electrical contractor recommended.


① REMOVE CROSSBAR

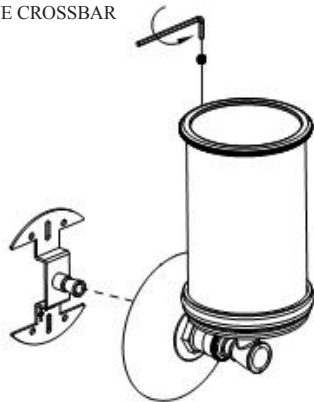


② MOUNT CROSSBAR TO ELECTRICAL BOX (NOT INCLUDED) USING #6 OR #8 SCREWS.

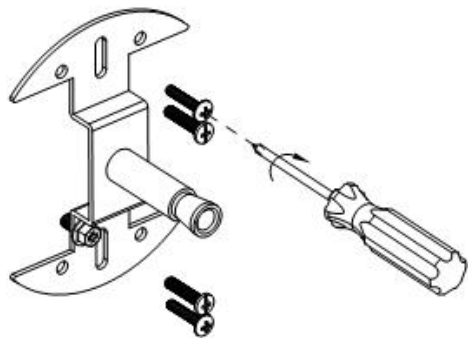


③ CONNECT GROUND WIRE

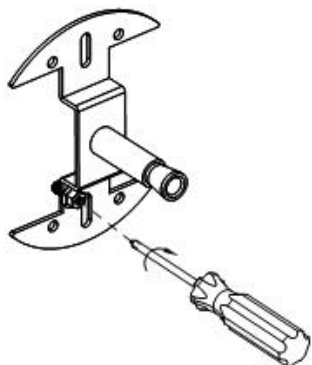

④ CONNECT WHITE WIRE TO WHITE WIRE WITH WIRE NUT. CONNECT BLACK WIRE TO BLACK WIRE WITH WIRE NUT.

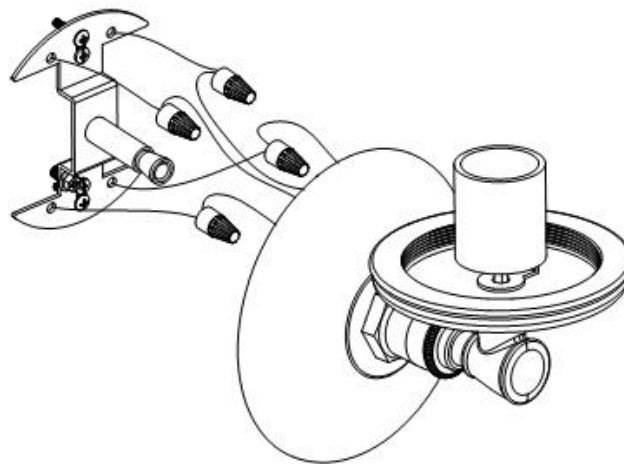

⑤ TIGHTEN SET SCREW

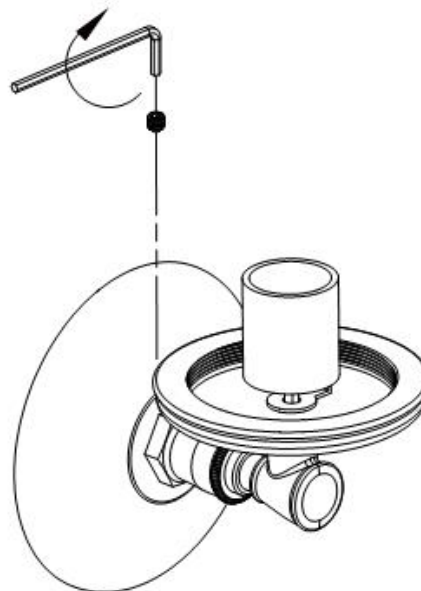

⑥ SECURE SHADE

