

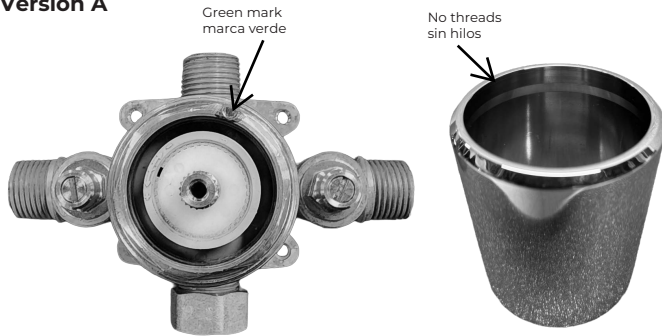



Version A

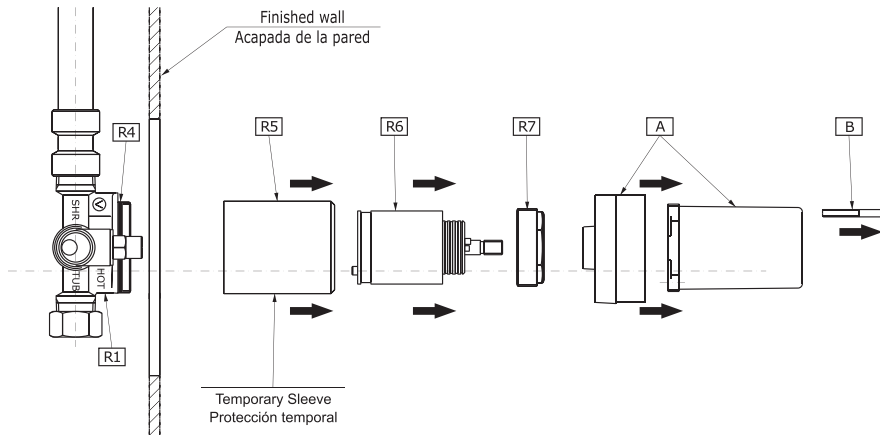

Version B

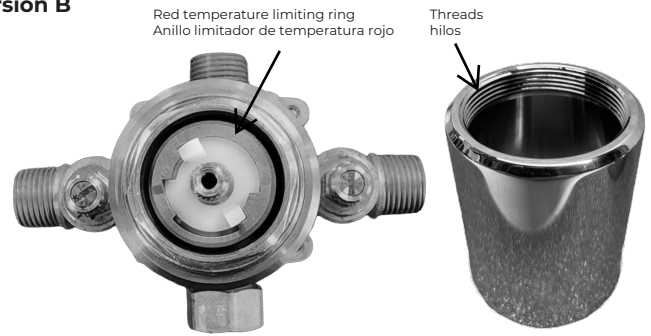

2.1

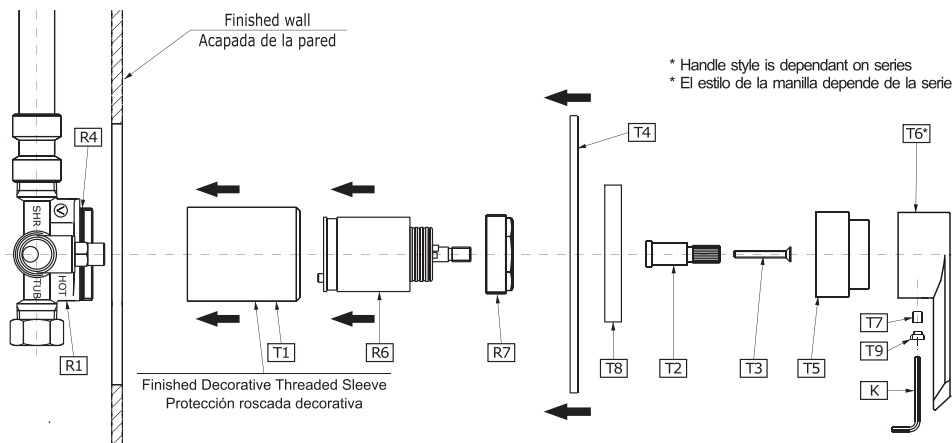

2.2

ENGLISH

NOTE: Make sure CHECK STOPS are closed.

SEE FIG. 2.1

When finished wall is completed, remove all referenced items starting by unscrewing **(B)** from **(A)**, pulling **(A)** off, unscrewing **(R7)**, and pulling **(R6)** out of **(R5)**.

SEE FIG. 2.2

1. Make sure **(R4)** is seated properly and firmly screw **(T1)** over it.
2. Place **(R6)** inside **(T1)** properly aligning the holes on the bottom of **(R6)** to the holes on the rough valve. Screw **(R7)** into **(T1)** with a maximum of **7.38 ft/lbs (10 Nm)** of torque.
3. Open hot and cold CHECK STOPS by using a flat-bladed screwdriver and fully turning the screws counter-clockwise.
4. Place non-abrasive PH balanced dish soap around **(T1)**. Make sure the o-ring on **(T4)** is seated correctly. Apply clear silicon around the back of **(T4)** and slide it so **(T1)** fits inside its designated hole on **(T4)**. Now push and hold **(T4)** firmly against the wall.
(Optional trim ring **(T8)** is supplied with trim and can be used to hold **(T4)** on the wall.)
5. Push **(T2)** onto **(R6)**, and screw **(T3)** in **(T2)**. Screw **(T5)** onto **(R7)**, then install **(T6*)**.

* Handle style is dependent on trim series.

ESPAÑOL

NOTA: Asegúrese de que las VÁLVULAS DE RETENCIÓN están cerradas.

VER LA FIG. 2.1

Después de terminar la pared de acabado, quite todos los elementos de referencia empezando por desenroscar **(B)** de **(A)**, quitar **(A)**, desenroscar **(R7)**, y quitar **(R6)** de **(R5)**.

VER LA FIG. 2.2

1. Asegúrese de que **(R4)** está bien posicionado y enrosque **(T1)** en él.
2. Coloque **(R6)** dentro del **(T1)** del modo adecuado alineando los agujeros en el fondo de **(R6)** con los agujeros en la válvula de empotrado. Atornille **(R7)** en **(T1)** con el torque máximo de **7.38 (10 Nm) ft/lbs.**
3. Abra VÁLVULAS DE RETENCIÓN de agua caliente y fría usando el destornillador plano y girando los tornillos completamente en el sentido antihorario.
4. Ponga el jabón no abrasivo con el PH equilibrado en **(T1)**. Asegúrese de que la junta tórica en **(T4)** está bien puesta. Aplique silicona limpio en la parte trasera de **(T4)** e introdúzcalo del modo que **(T1)** se encuentre dentro del agujero previsto para ello en **(T4)**. Ahora acerque y sujete bien **(T4)** en la pared.
(El anillo opcional del grifo **(T8)** es suministrado con el grifo y puede ser usado para sujetar **(T4)** en la pared.)
5. Introduzca **(T2)** en **(R6)**, y atornille **(T3)** en **(T2)**. Atornille **(T5)** en **(R7)**, luego instale **(T6*)**.

* El tipo del mango depende de la serie del grifo.