

# INSTALLATION INSTRUCTIONS

## Contempo II Pivoting Toilet Paper Holder

Part #3501 TPPIV




### Materials provided:

- 1ea. Pivoting Toilet Paper Holder assembly
- 1 Pkg. Installation hardware



### Recommended tools:


- Drill & bits
- Phillips or blade screwdriver
- 3/32" Hex L-Key (Allen Wrench)
- Level and measuring tape

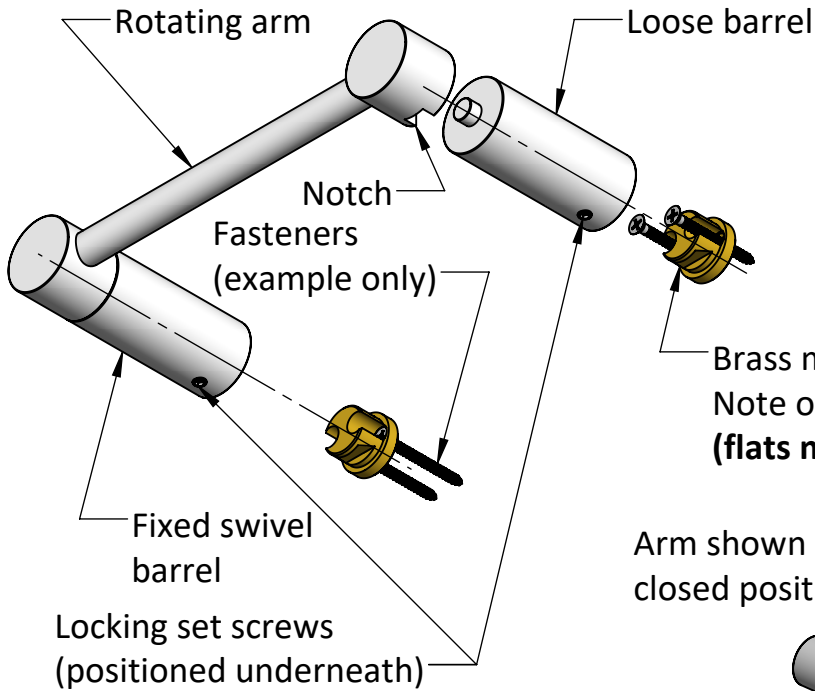

### Component Detail

Brass mounting stud (2 ea.)  
Note orientation of the flats  
**(flats must be horizontal)**

Arm shown in closed position

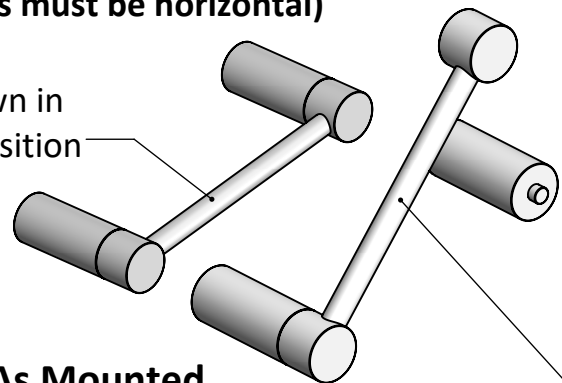

### As Mounted

Rotate up to add a paper roll

### Step 1:

Loosen the set screws to remove the two brass mounting studs. Verify the mounting location and mark the 4 fastener hole centers (**6 7/32" barrels center to center**). Use the 2 mounting holes provided in each of the mounting studs to install the JACLO Pivoting Toilet Paper Holder.

**Note:** Follow the fastener manufacturer's instructions when using Moly bolts, wood screw anchors, toggle bolts, Wingits, cement anchors, etc. for installation of the Toilet Paper Holder. Adhere to local building codes for installation compliance of the Toilet Paper Holder.

**Step 2:** Slide the **fixed barrel** onto the left mounting stud and secure the set screw. Attach the **loose barrel** to the right mounting stud and secure the set screw. Test the rotating motion of the arm to verify it locks onto the pin of the right-hand barrel.