


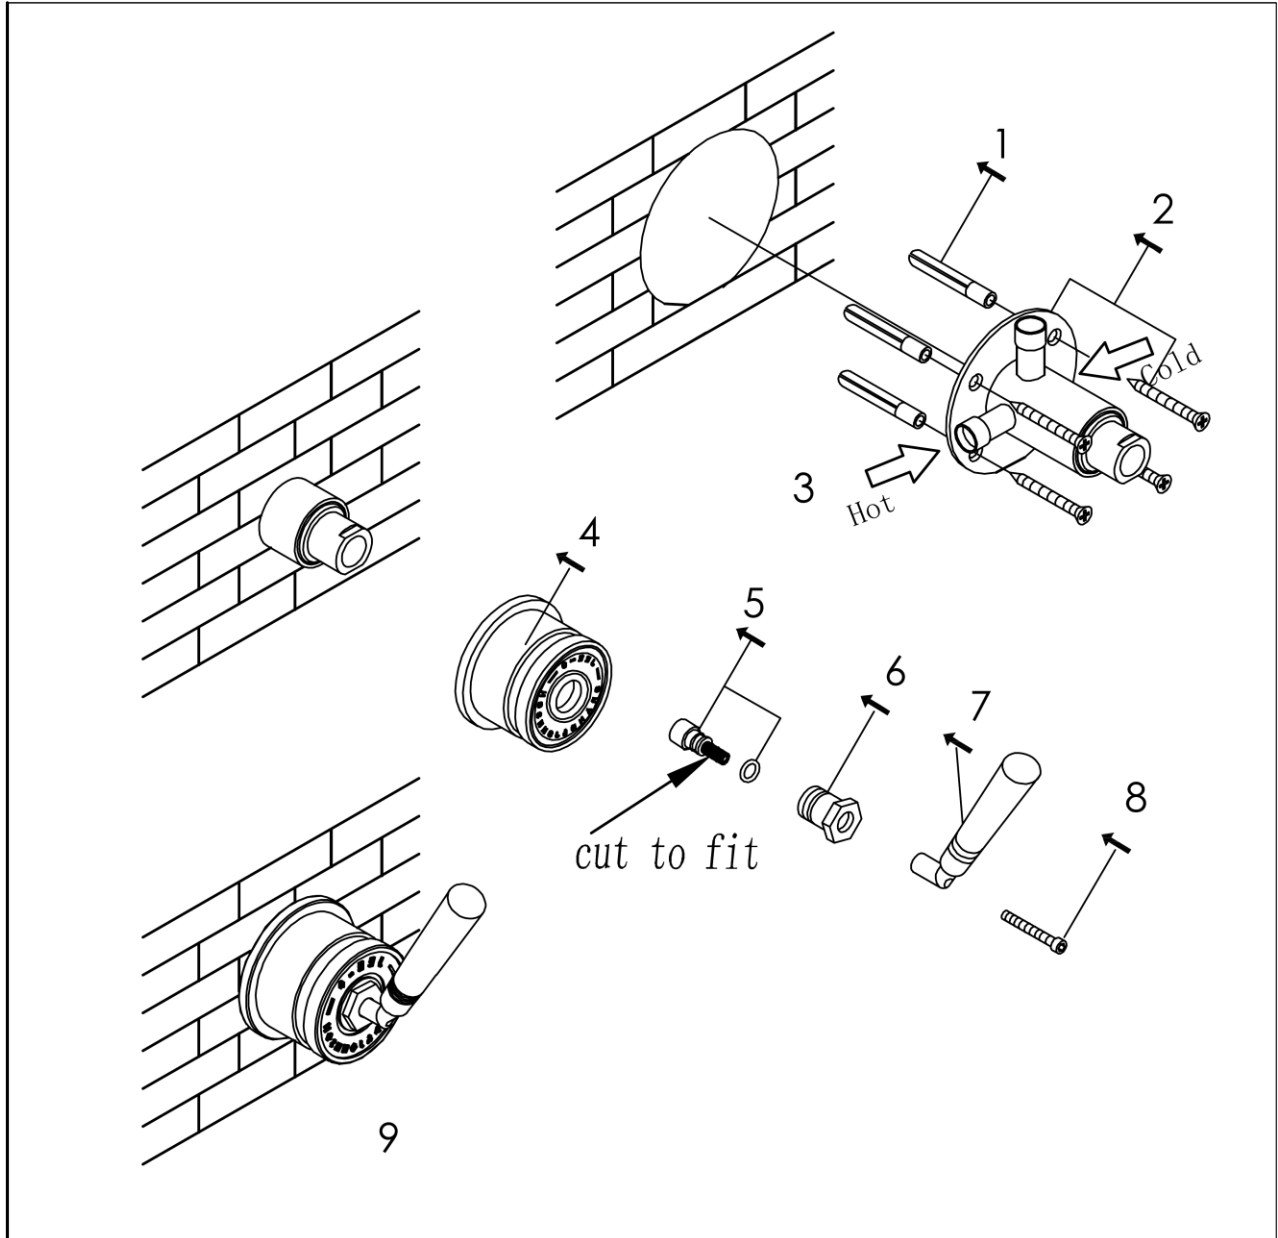
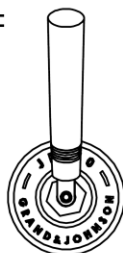


Installation Instructions

-  RAW (brushed)  
700-2100
-  hammercoat black  
700-2102
-  custom finish  
700-210C



MIDDLE  
OFF



RIGHT  
HEADSHOWER OR SPOUT

