





Linear Vanity Cabinets: 210-V36-GW 210-V36-WLT 210-V36-WW 210-V36-VBL

Assembly / Installation Instructions for CS-Series Tops

CS-Series Tops: CS-366-DGG CS-366-GW

Materials
for
Installation:

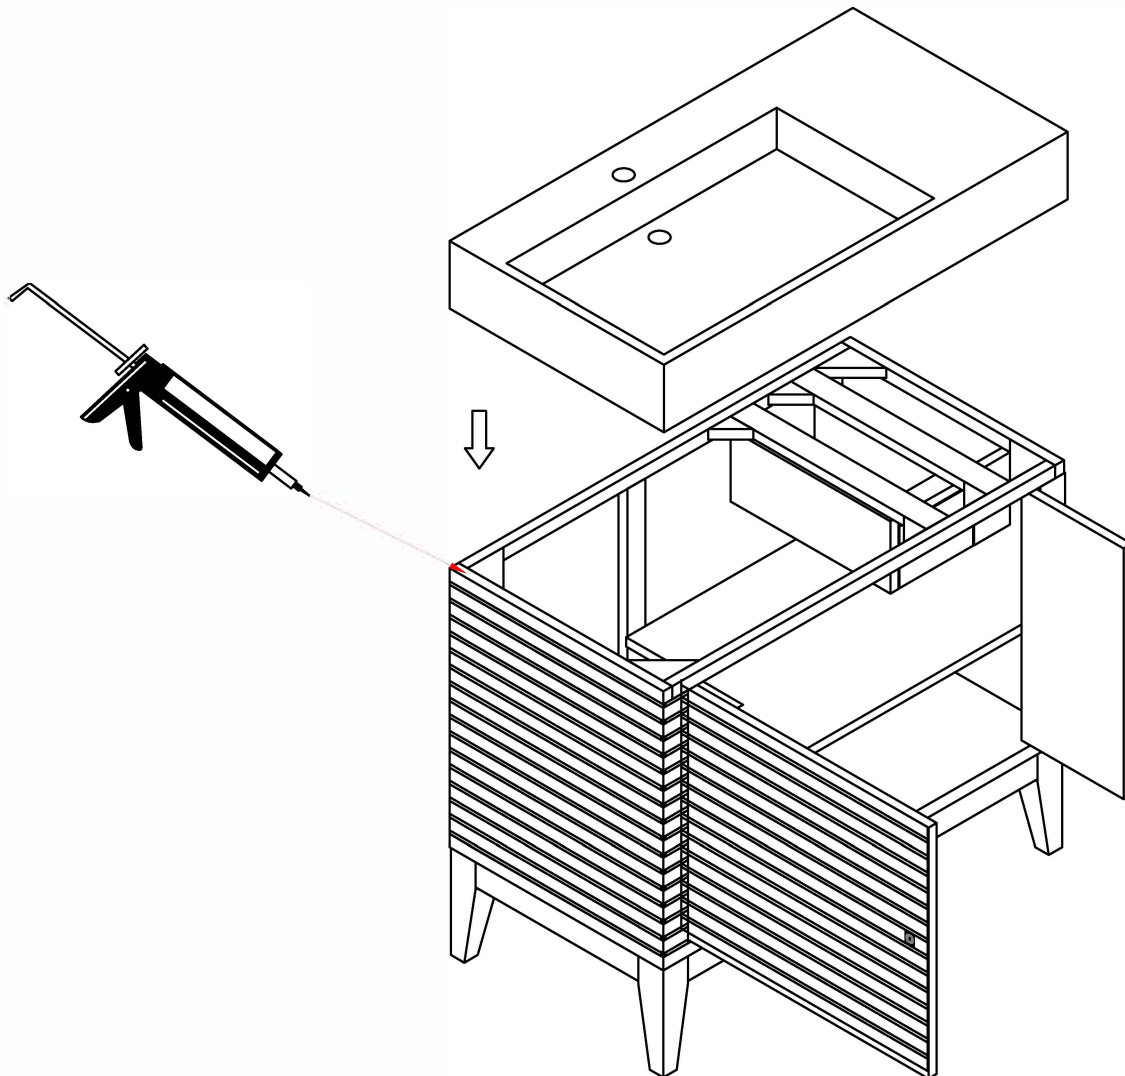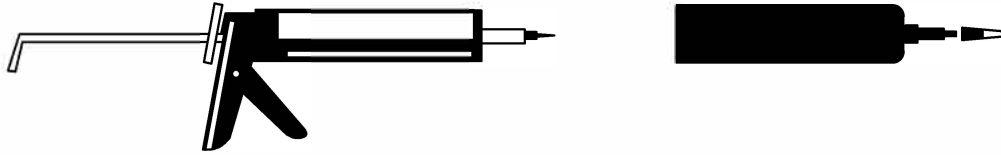

Step Notes:

Properly align and secure the countertop to the cabinet with high quality adhesive.