


SOLENE 28" MIRROR
D225-M28-SRB
D225-M28-SSO

ASSEMBLY INSTRUCTION

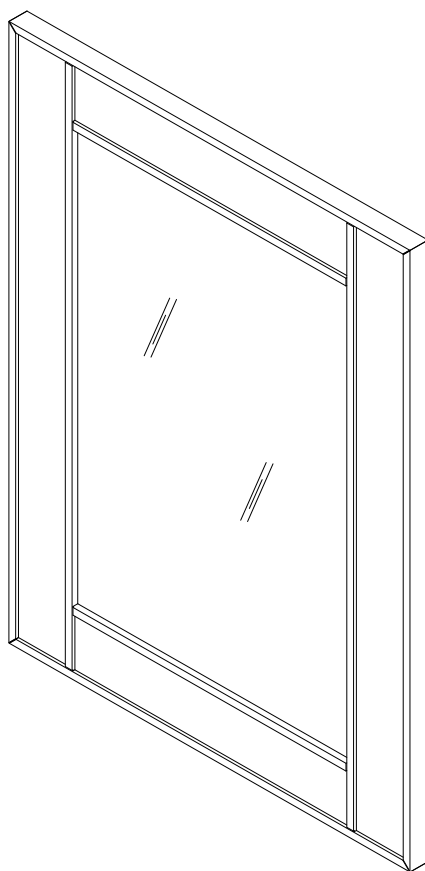

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have loosened inside the carton during shipment and place on a non-abrasive surface.

IMPORTANT STEPS BEFORE YOU BEGIN :


- For your safety and to achieve the best possible results, James Martin Vanities recommends you consult with a professional contractor.
- These parts can be cumbersome and heavy for some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and ensure the product is not damaged during the assembly process.

SOLENE 28" MIRROR
D225-M28-SRB
D225-M28-SSO


ASSEMBLY INSTRUCTION

PART LIST

A. [1] MIRROR

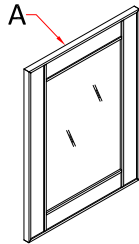

TOOLS NEEDED



Screwdriver
(Not provided)



Drill
(Not provided)



Level
(Not provided)



Tape Measure
(Not provided)



Pencil
(Not provided)



Stud Finder
(Not provided)


HARDWARE LIST

NO.	SKETCH	DESCRIPTION	SPECIFICATION	QTY.
1		French Cleat	L 21 5/8"	1 set.
2		Hollow Wall Anchor	Ø 5/16" x 2 7/16"	6 pcs.
3		Flat-head Wood Screw	M5 x 1 9/16"	4 pcs.


ASSEMBLY INSTRUCTIONS

- **STUDS:** Use screws (3) to affix to studs. **IMPORTANT:** The Mirror must be secured to at least **two studs**.
- **DRYWALL:** Drill pilot hole on each marking and then insert hollow wall anchor (2). Tighten the screws into the anchors while maintaining constant pressure on the anchor to set. Remove screws. Hold metal bracket over the inserted anchors and reinstall screws through the wall bracket holes and tighten until snug against wall.

STUDS

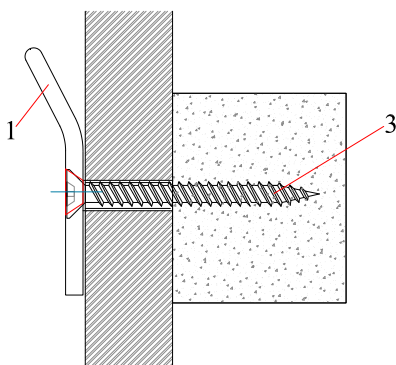

DRY WALL

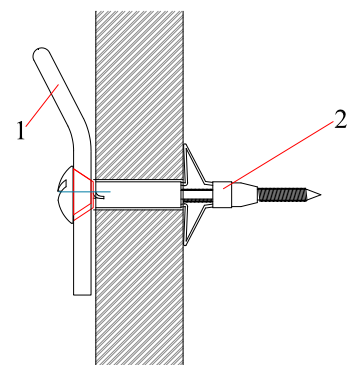

SOLENE 28" MIRROR
D225-M28-SRB
D225-M28-SSO

ASSEMBLY INSTRUCTION

PREPARING THE WALL FOR INSTALLATION

1. Locate and mark the position of the wall's interior studs to which you will fasten the metal bracket.
We recommend the use of an electronic stud finder to locate the studs.

(Alternately you may find studs by listening for a solid sound as you knock on the wall)

SPECIAL NOTE 1:


French Cleat must be affixed to **2 wall** studs using wood screws (3).

If the studs in your house do not line up to the mounting location for your mirror, additional wood blocking can be installed between the studs using standard 2 x 4 lumber.

SPECIAL NOTE 2:

To ensure a secure fit for both the Mirror use the wall anchors (2) for all holes on the French Cleat (1) that don't align with studs.

IMPORTANT: James Martin Vanities recommended you always consult with professional installers and contractors regarding the correct installation of our products.



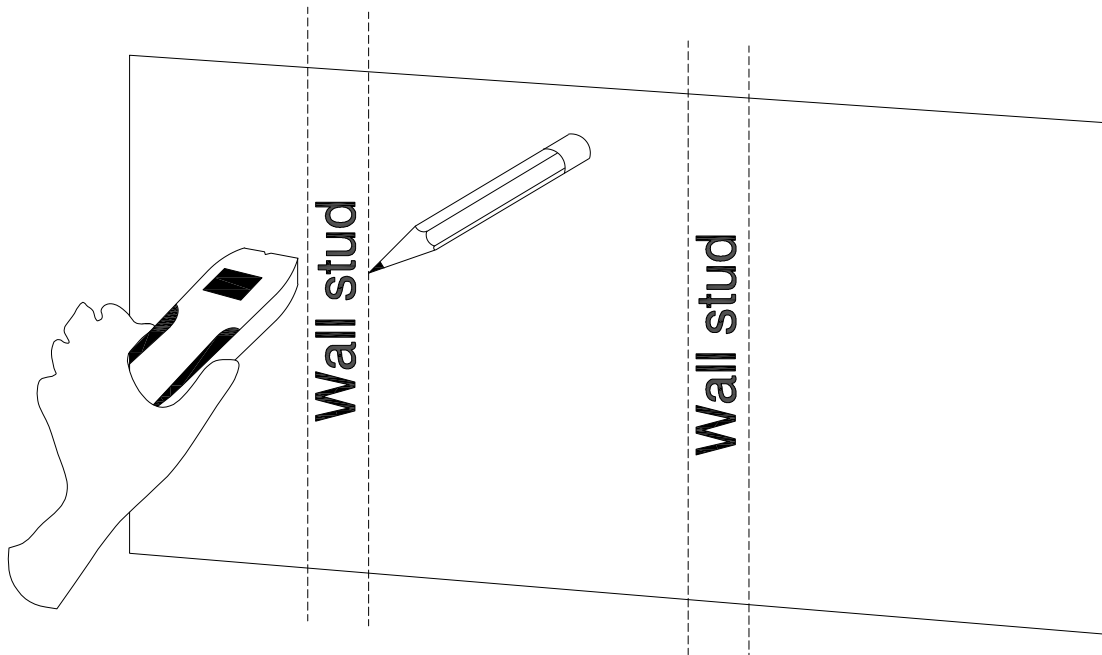


SOLENE 28" MIRROR
D225-M28-SRB
D225-M28-SSO

ASSEMBLY INSTRUCTION

PREPARING THE WALL FOR INSTALLATION

1. Carefully place the mirror (A) against the wall to the desired location and mark a center line on the wall by a pencil.
2. Move the mirror (A) away from the wall and place on a soft surface until ready for installation.
3. Draw one horizontal line across the center line.
4. Moving left and right of the center line, locate the wall studs along the horizontal line.
5. Place the French Cleat (1) along the horizontal line, as shown, and mark the holes on the wall with a pencil.
6. Drill holes in each marked location with a depth no less than 1/2". See "ASSEMBLY INSTRUCTIONS BY WALL TYPE" for mounting instructions based on your wall type drywall, or drywall and studs.

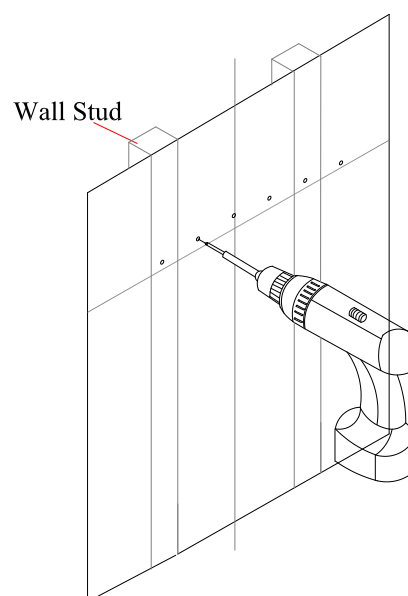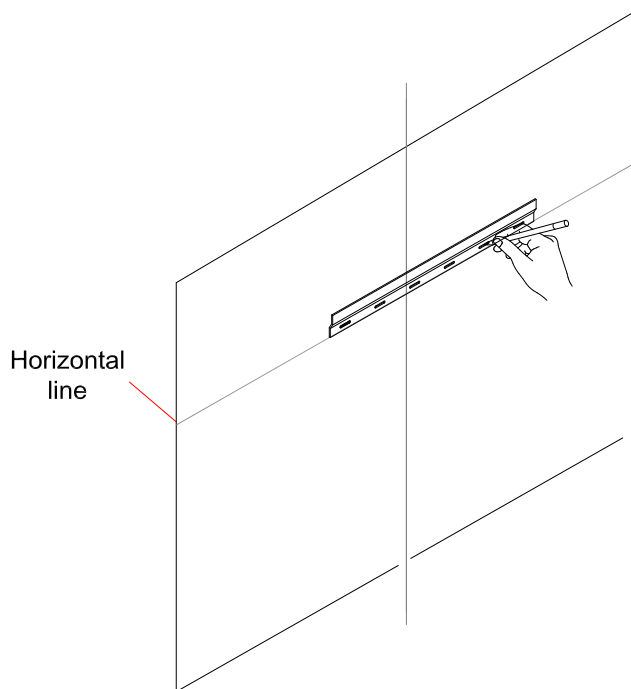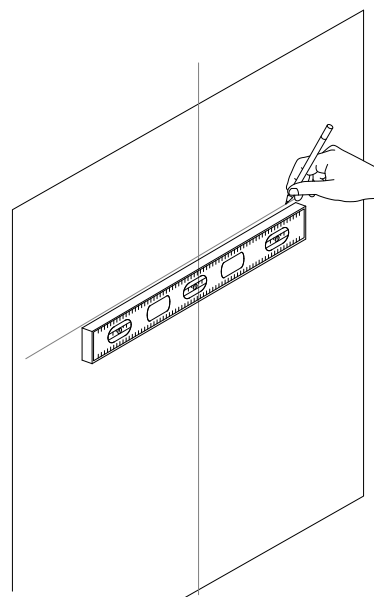

SOLENE 28" MIRROR
D225-M28-SRB
D225-M28-SSO


ASSEMBLY INSTRUCTION

INSTALLING THE BRACKET

1. Attach French Cleat (1) to the wall using the French Cleat pre-marked location on the horizontal line and in accordance with the proper wall type for each hole. Ensure that the straight edge of the cleat is along the marked line as shown.



NOTE: For proper installation

- Attach the French Cleat (1) to at least 2 studs using the wood screws (3)

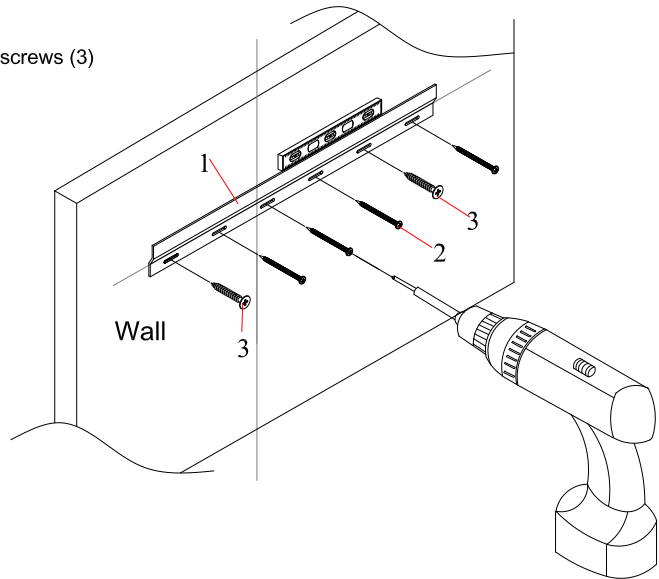

INSTALLING MIRROR

1. Using at least two people, carefully lift the mirror (A) so the French Cleat on the back of the mirror slides over and rests on the French Cleat cleat on the wall.

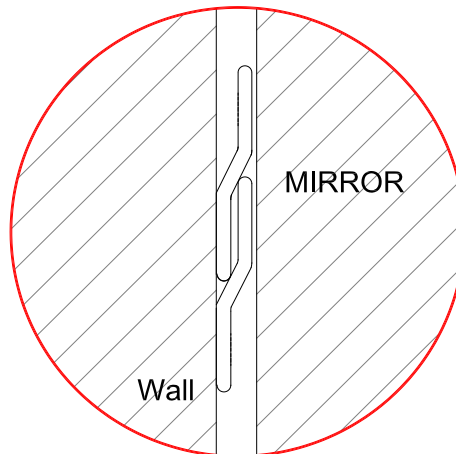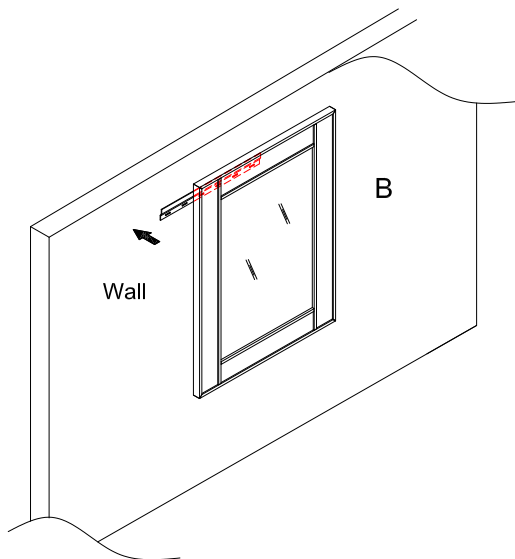

CARE INSTRUCTIONS

1. Dust often using a clean, soft, dry and lint-free cloth.
2. Blot spills immediately and wipe with a clean, damp, cloth.
3. We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish. Product can be cleaned using a damp cloth soaked in warm soapy water followed by wiping clean with a dry lint-free cloth.

For Warranty information, please visit jamesmartinvanities.com
Customer Service: 512-795-4171