



WARNING

DISCONNECT POWER BEFORE RELAMPING OR WIRING THE FIXTURE
READ ALL INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION.



CAUTION

- TO AVOID THE RISK OF FIRE OR SHOCK, FIXTURE MUST BE INSTALLED IN COMPLIANCE WITH ALL APPLICABLE NATIONAL AND LOCAL ELECTRICAL/BUILDING CODES.
- INSTALLATION AND MAINTENANCE OF THIS UNIT REQUIRES AN ELECTRICIAN OR CERTIFIED FACTORY TRAINED TECHNICIAN.
- If an existing fixture is being replaced, remove it and note to which of the wires in the outlet box the fixture was attached. DO NOT SEPARATE ANY OTHER WIRES THAT MAY BE IN THE BOX. DO NOT DAMAGE THE INSULATION OF OLDER WIRING. In regular circumstances the BLACK wire will be the "Hot" lead and the WHITE wire will be the "Neutral" or "Common" lead. A GREEN or BARE COPPER wire is the "Ground". In older buildings it is always good practice to reconfirm the polarity of the wiring.

NOTICE

- The important safeguards and instructions outlined on this sheet cannot cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care factors that cannot be built into any product. Caution and care must be supplied by the person(s) installing, operating and caring of this lighting fixture
- This fixture is design to be mounted on a correctly installed standard round or octagon box or a through wiring box with a plaster frame. The box must be securely mounted to the structure of the building. The crossbar and hardware supplied should be used. Directly mounting the fixture to the outlet box may make it impossible to correctly align the fixture.

FIXTURE PREPARATION

- Remove the fixture, shades, crystals and parts bag(s) from the carton.

NOTICE:

Before discarding the carton, double check to make certain that all parts are found.

- Determine the overall desired length of the fixture. Assemble the stems one at a time onto the fixture leads. Tape the ends of the leads to a stiff wire (coat hanger) to aid in pulling them through the stems.

NOTICE:

Place the canopy onto the stem BEFORE assembling the top stem section and swivel

FIXTURE INSTALLATION

- Thread the screws into the mounting ring at the spacing that matches the holes in the canopy. Attach the mounting ring to the outlet box. (The green screw should face the floor). Adjust the studs so they extend 3/16" beyond the canopy. Attach the safety cable to the structure building or brace. See figure-1.

NOTICE:

If used on a sloped ceiling, loosen the mounting screws 1/4 turn to allow the mounting ring to move


NOTICE:

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.



WARNING


REFER TO THE ILLUSTRATION FOR CORRECT AND SAFE INSTALLATION OF SAFETY CABLE. FAILURE TO FOLLOW THIS INSTRUCTION COULD RESULT HARM/DAMAGE TO THE FIXTURE, PROPERTY AND/OR PERSON(S)!

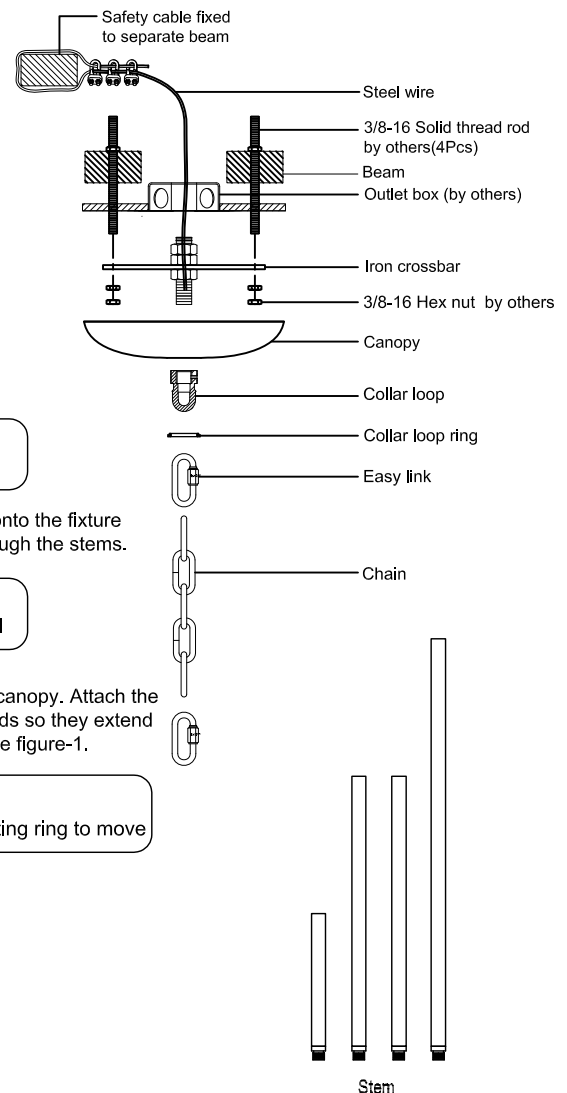



If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.
- 4.This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

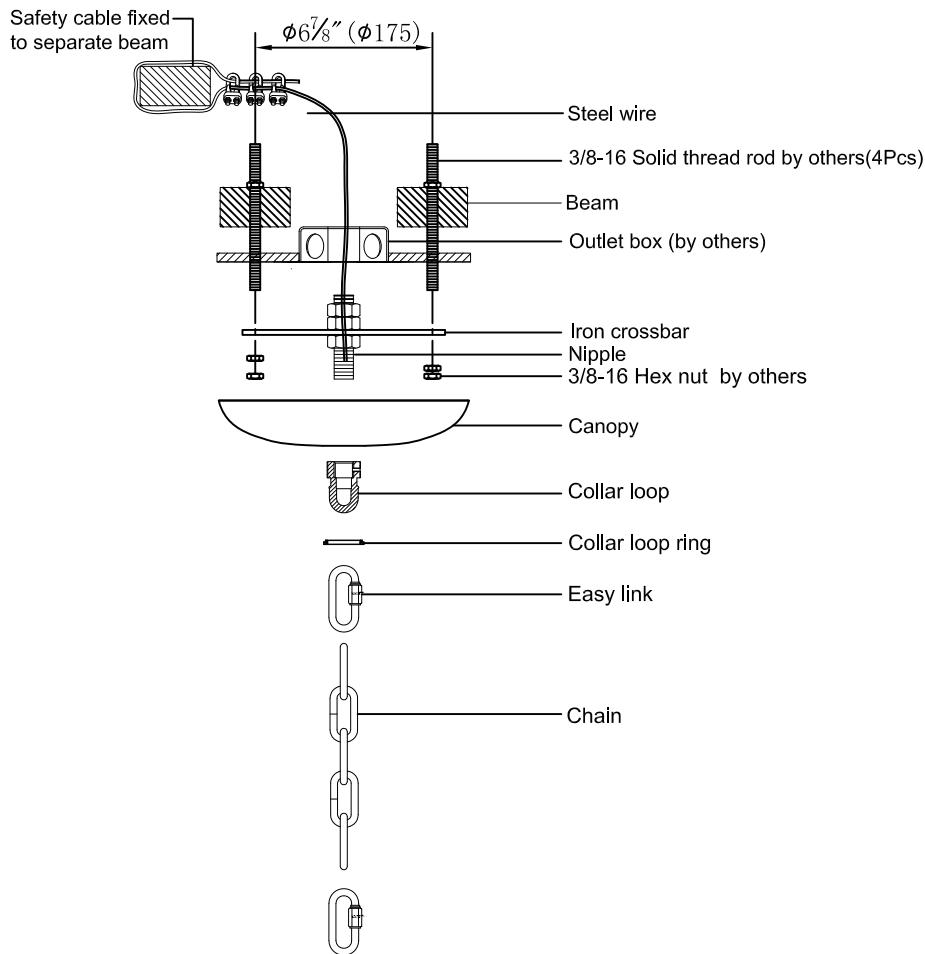

3/8-16 Solid Thread rod distribution view

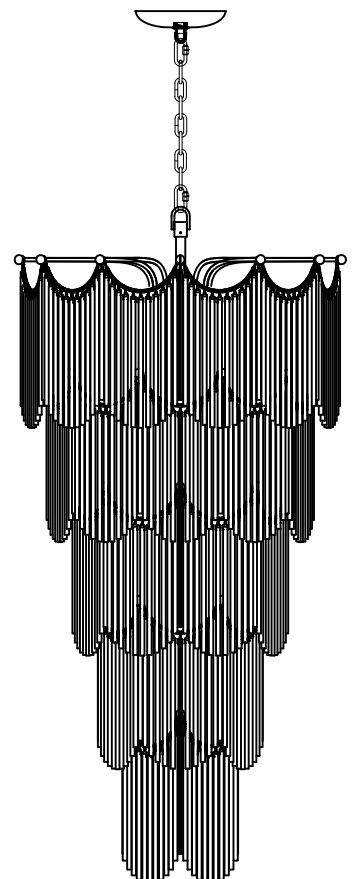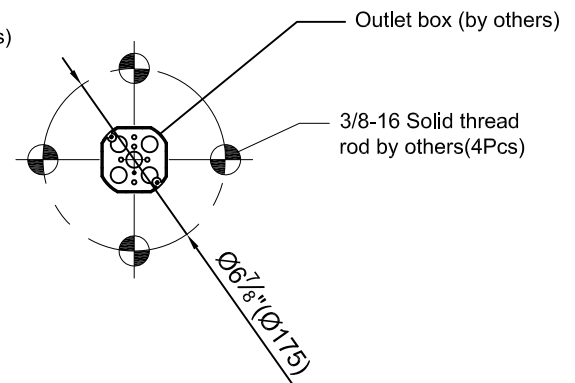


INSTALL CANOPY AS FOLLOWS (FIG. 1):


CAUTION: Be sure power is off at the main breaker box prior to installation.

1. Use a 3/8-16 solid threaded rod to fix the iron crossbar to the j-box.
Attach the safety cable to a separate structural beam.
2. Screw the collar loop to the nipple as shown, then raise the canopy to the ceiling and secure with the collar loop ring.
3. Determine the fixture height and cut chain. Use the easy link to attach the chain to the collar loop.

Wiring Diagram

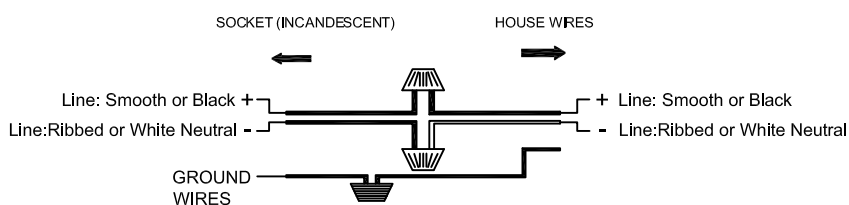

Each long curved arm is labeled A, B, C, D, E accordingly.

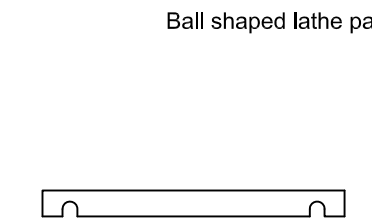


When installing the bent arms, use the provided tool to make sure the distance between arms is even.

Note: The frame is split into 2 pieces (top half and bottom half) and each half has its own power wire.



INSTALLATION(FIG. 2):

- Turn off electricity, take all parts from part box.
- Weave the frame's top half wires through the chain and connect to the power supply circuit. See wire connection diagram on previous page.
- Pass the bottom half power wire and S/S safety cable through part #5 and rotate part #5 onto the connector. Lock tightly with the safety screw.
- Pass the wire and S/S safety cable through part #4 and rotate the part connector onto part #5. Lock tightly with the safety screw.
- Screw part #1 to the part connector and lock tightly with the safety screw.
- Screw part #1 to part #2 and lock tightly with the safety screw.
- Fix part #2, #3 to part #4 by using Screw.
- Fix part #6, #8, #9 to part #7 by using Screw.
- Check the installation and attach bulbs to the lamp holders.

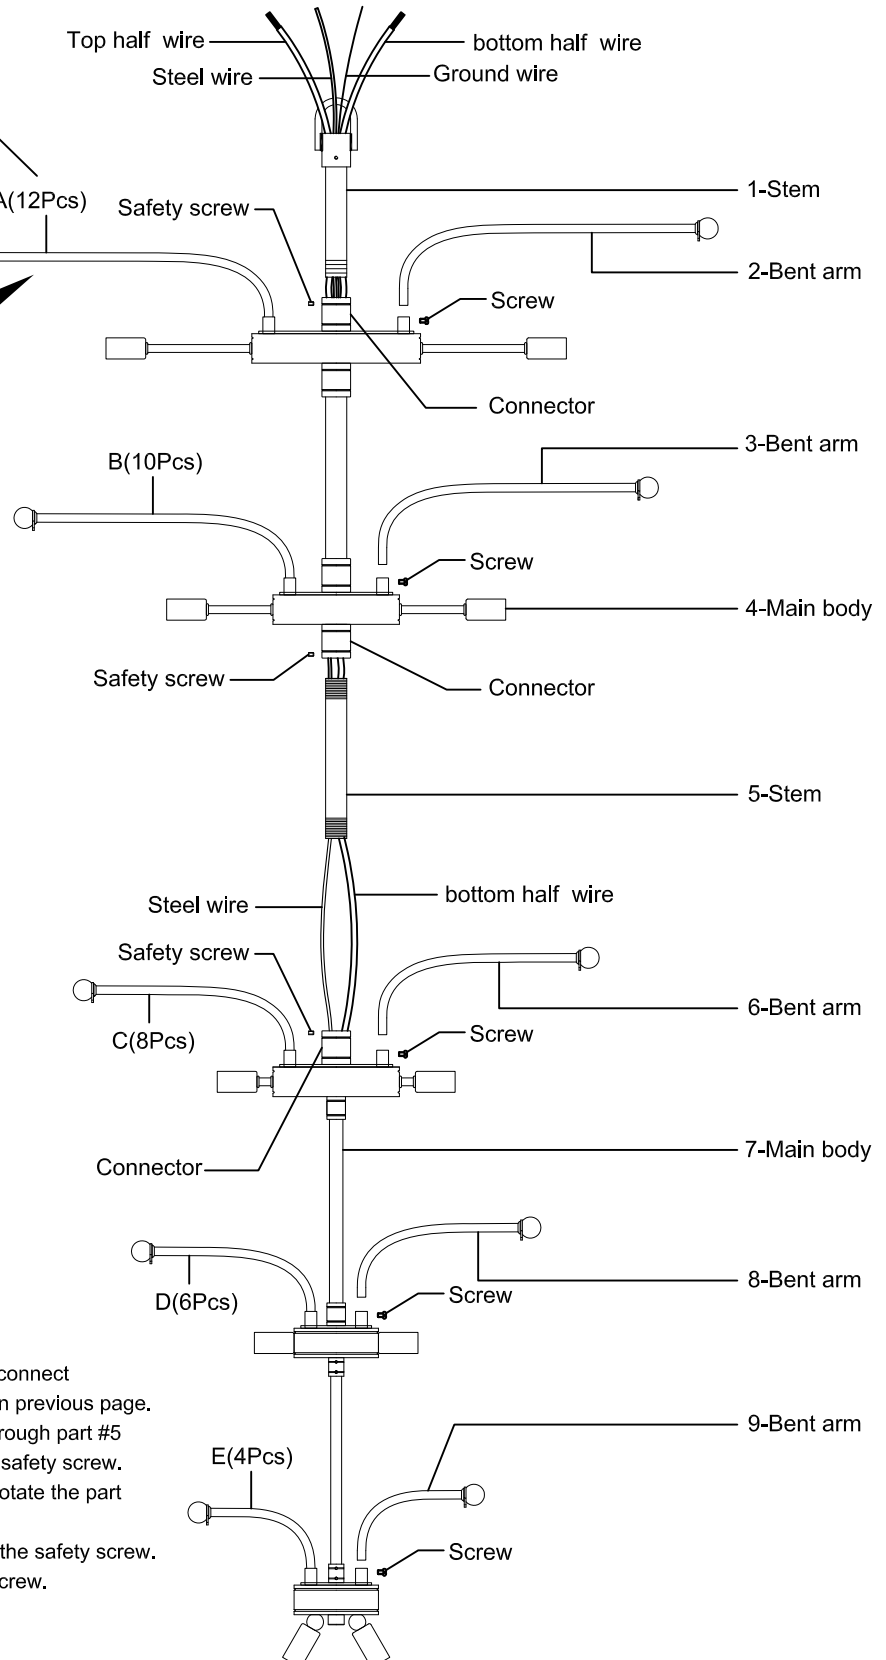

ATTENTION


1. Take all glass parts carefully from carton, then put them on a clean cloth.
2. Start hanging glass rods from bottom center to top of fixture in an alphabetical order as shown in diagram.

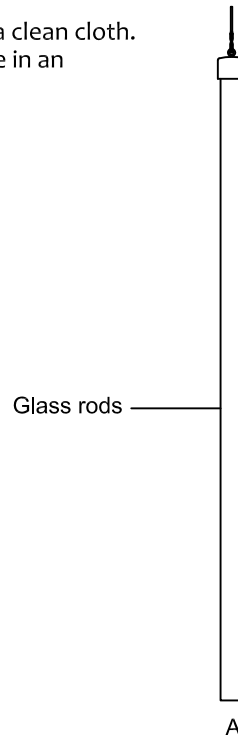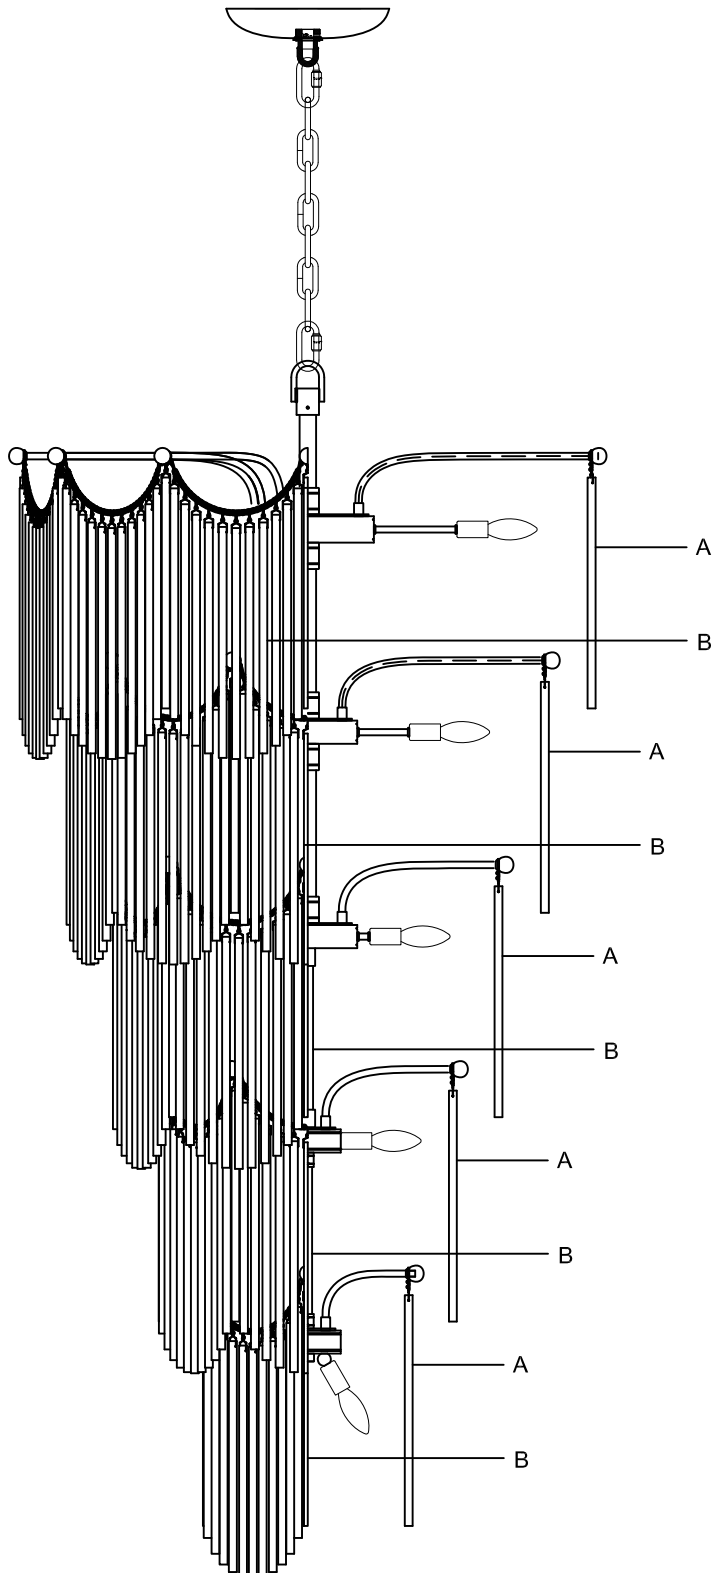

Code	Qty
A	40
B	40



You will need 40 - Cand. Bulbs
40 Watts Recommended
40 Watts Max
Bulb not included

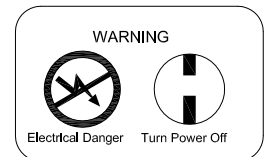

All electrical components must be installed by a licensed electrician in accordance with the National Electric code and the appropriate local electrical codes.

