



BERLIN COLLECTION

QUADRUPLE ROBE HOOK FOLD DOWN

232130-4

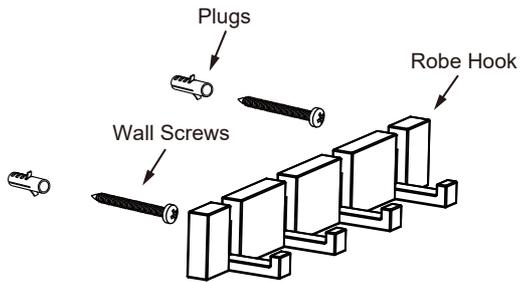

Tools required for installation




Level



Pencil



Screwdriver

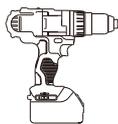

Drill



Hammer

Step 1
Position the shower shelf against the wall and mark the holes with pencil.

Step 2
Drill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall.

Step 3
Install screws into the wall and tighten them, ensure the product is level.