



MUNICH COLLECTION

FOLD DOWN ROBE HOOK

288135

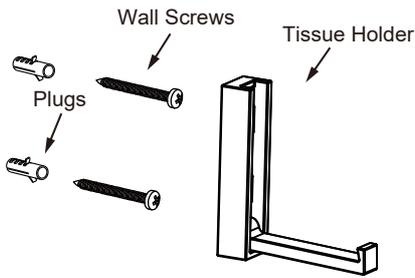

Tools required for installation



Level



Drill




Pencil



Screwdriver




Hammer

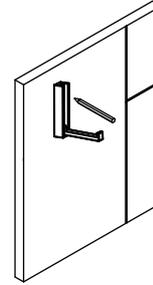


Step 1

Position the shower shelf against the wall and mark the holes with pencil.

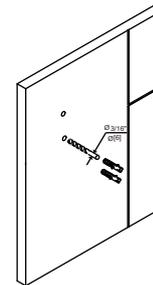

Step 2

Drill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall.

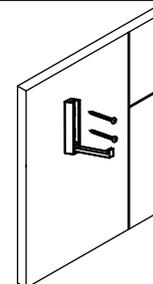

Step 3

Install screws into the wall and tighten them, ensure the product is level.