



HAMBURG COLLECTION

SHOWER SHELF

440607

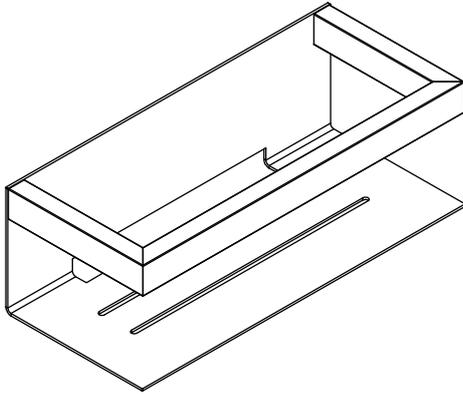

Tools required for installation



Level



Drill




Pencil



Screwdriver




Hammer

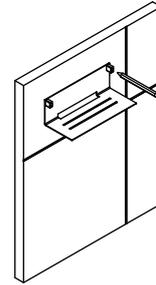


Step 1

Position the shower shelf against the wall and mark the holes with pencil.

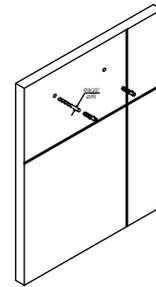


Step 2

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall.

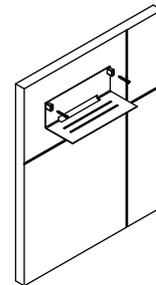

Step 3

Install screws into the wall and tighten them, ensure the product is level.

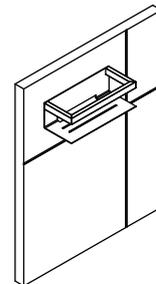

Step 4

Slide the rail onto the posts and tighten the set screws using Allen key provided.